

ICF-PRO70/PRO80

SERVICE MANUAL

US Model Canadian Model

AEP Model

UK Model

E Model

Australian Model

ICF-PRO80

AEP Model

E Model

ICF-PRO70



Photo: ICF-PRO70

SPECIFICATIONS

Circuit system LW/MW/SW/VHF: Dual conversion superheterodyne
FM: Superheterodyne

Frequency coverage ICF-PRO70 (Excluding VHF converter, FRQ-80)

AUS, E (Middle Easts except Saudi Arabia):

150 kHz – 108 MHz

E (Saudi Arabia): 150 – 285 kHz,

531 – 26,100 kHz and 87.6 – 108 MHz

ICF-PRO80 (including VHF converter, FRQ-80)

US, Canadian, UK, AEP (France, Spain, Sweden), E (Outside Middle Easts

including Saudi Arabia): 150 kHz – 108 MHz

(without using the FRQ-80 frequency converter)

115.15 – 223 MHz (using the FRQ-80)

SW/VHF/FM: Telescopic antenna

LW/MW: Built-in ferrite bar antenna

External antenna connector: TNC connector

Antennas

7 x 3.5 cm

Speaker Power output 400 mW (at 10% harmonic distortion)

Power output Earphone jack (minijack) (1)

8 ohm

Recording output jack (minijack) (1)

Output level 0.775 mV (-60 dB)

Output impedance 1 kilohm

Power requirements 6 V DC (for radio/computer backup)

Four size AA (R6) batteries or BP-23 rechargeable battery pack (optional)

DC IN 6 V jack accepts:

AC-D4 AC power adaptor (optional) for use on 100, 120, 220 or 240 V AC depending on the model type of the AC-D4 available in your country

DCC-127A or DCC-120 car battery cord (optional) for use with 12 V car battery

DCC-240 car battery cord (optional) for use with 24 V car battery

EBP-6 battery case (optional) using four size C (R14) batteries

Approx. 10 hours using Sony SUM-3(NS) batteries

Approx. 90 x 182 x 50 mm (w/h/d)

(3½ x 7¼ x 2 inches)

including projecting parts and controls, not including the telescopic antenna

Approx. 650 g (1 lb 7 oz)

including batteries, shoulder strap and telescopic antenna

FRQ-80 frequency converter (supplied with the ICF-PRO80 only)

Shift frequency 115 MHz

Attenuator 0 dB – 30 dB

Power requirements 3 V DC, two size AA (R6) batteries

Battery life Approx. 80 hours using Sony SUM-3(NS) batteries

Dimensions Approx. 40 x 98 x 31 mm (w/h/d)

(1½ x 3⅞ x 1¼ inches)

including projecting parts and controls

Approx. 120 g (4.2 oz)

including batteries

Design and specifications subject to change without notice.

FEATURES**WORLD-WIDE FREQUENCY COVERAGE****No band selector is provided.**


The entire frequency range is tuned in consecutively. The detection mode is set automatically according to the frequency range to which the tuned frequency belongs.

Selectable detection modes

The entire frequency coverage is divided into 2 to 4 ranges depending on the model type, and the detection modes, FM, NARROW FM, AM WIDE, AM NARROW and SSB* can be selected for each range.

Frequency converter supplied for wider coverage (ICF-PRO80 only)

By attaching the supplied FRQ-80 frequency converter, 115.15–223 MHz can also be received.

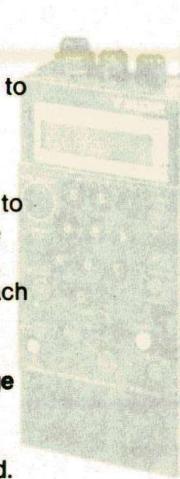**VERSATILE TUNING MODES**

Direct tuning by inputting a frequency to be tuned in.	• When you know the frequency of the station
Memory tuning by simply pressing one button to tune in the stored station	• For daily listening to your favorite station
Manual tuning by scanning frequencies step by step at a determined interval	• When you do not know the frequency of the station • To tune in precisely a station located by scan tuning or limited scan tuning precisely
Scan tuning by automatically scanning the entire frequency coverage	• When you do not know the frequency of the station
Limited scan tuning by automatically scanning the frequency coverage you have defined	• When you know the frequency range in which the desired station is located (e.g. FM or MW radio broadcasting range, an SW meter band).
Memory scan tuning by automatically scanning the stored (up to 10) stations	• To choose a station from among those stored in a certain memory page
Program memory scan tuning by automatically scanning only the stations you have programmed among all stored in memory (up to 40 stations) in the order programmed	• To choose a station from among those having the specified conditions (e.g. FM broadcasting stations)
Priority tuning by tuning in the specified station every 3 seconds	• To catch a radio communication when you are not sure when it will take place.

CONVENIENT FUNCTIONS

Memory of up to 40 stations	Up to 40 stations can be stored on 4 memory pages (10 stations for each page) and tuned in instantly.
Three scan modes selectable	Scanning can be stopped at the first-located station, or be resumed after each station located has been received for several seconds until the signal of the station stops.
Memory search	The frequencies of the stations stored on one page are displayed in sequence while your desired station is kept tuned in.
Program memory search	The frequencies of the stations programmed are displayed in sequence while your desired station is kept tuned in.
Memory protection	The memory of one page (10 stations stored) is locked so that it cannot be changed inadvertently.
Key protection	The buttons on the front panel are locked so that they cannot be operated by accident.
Squelch control	The receivable signal level can be adjusted so that scanning stops at stations with stronger signals only and noise is suppressed while tuning and while no station signal is present.
Fine tuning	AM (LW, MW and SW) and SSB stations can be tuned in precisely.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	1	
Features	2	
Location and Function of Controls	3	
1. ELECTRICAL ADJUSTMENTS		
Reference-Frequency Oscillator (7.2 MHz)		
Adjustment	5	
VCO1 PD-Voltage Adjustment	5	
FM-L Tracking Adjustment	6	
VCO2 PD-Voltage Adjustment	6	
FM-H Tracking Adjustment	7	
FM IF Adjustment	7	
Second Local Oscillator Adjustment	8	
AM 1st and 2nd IF Adjustment	8	
NARROW-FM Detector Adjustment	9	
AM AGC Adjustment	9	

2. DIAGRAMS

IC Block Diagrams	10
Semiconductor Lead Layouts	12
2-1. Main Section Mounting Diagram	13
2-2. Schematic Diagram	17
2-3. Converter Board Schematic Diagram	20
2-4. Control Section Mounting Diagram	20

3. EXPLODED VIEWS AND PARTS LIST

4. ELECTRICAL PARTS LIST	23
--------------------------	----

SECTION I

ELECTRICAL ADJUSTMENTS

LOCATION AND FUNCTION OF CONTROLS

A

Front (Photos A and B)

- 1** POWER switch
2 Antenna connector (TNC type)
3 **(earphone) jack (minijack)**
 Connect an earphone or an external speaker.
4 **(recording output) jack (minijack)**

5 FINE/SSB control
 Used for AM and SSB fine tuning.
FINE: When AM WIDE or AM NARROW detection mode is selected, press **FUNCTION** + **⑥** so that the "FINE" indicator appears and fine tune with this control.
SSB: When SSB detection mode is selected, fine tune with this control.

6 Loop for shoulder strap**7** PAGE selector
 Select memory page, 1 to 4.


8 SQUELCH (squelch) control
 Adjust the squelch level.
 □ **AUTO (depressed):** The signal (and noise) with a lower level than the factory-preset level is cut.
 □ **MANUAL (released):** Adjust manually the level of the signal you want to receive.

9 VOLUME/TONE control
 Functions as a volume control and a tone control.
VOLUME: Turn to adjust the volume.

TONE: Depress (□ LOW) to emphasize bass, and press to release (□ HIGH) to emphasize treble.

The volume can be adjusted in either the depressed or released position.

10 LIGHT button
 Press to illuminate the display window for approximately 10 seconds. If any button on the front panel is pressed, the illumination will remain for 10 seconds more.

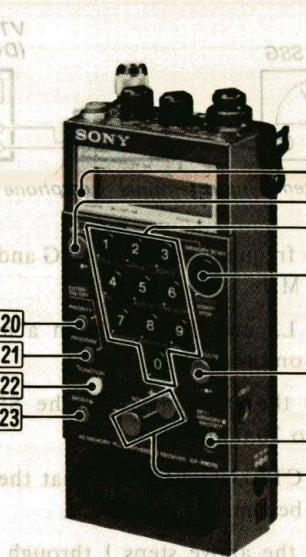B**11** DC IN 6 V (external power input) jack
 Connect the optional AC power adaptor or car battery cord.**12** Battery case (rear)**13** RECEIVE Indicator
 Lights red when a signal or noise is received.**14** DIRECT button
 Press to start direct tuning.
 This button is also used in combination with **FUNCTION** or **ENTER**.**15** Number buttons
 Press to recall the stored station (memory tuning).
 Press to input the frequency of a station for direct tuning.
 These buttons are also used in combination with **FUNCTION**, **ENTER**, **PROGRAM** or **PRIORITY**.**16** MEMORY SCAN button
 Press to start memory scan tuning (with **PROGRAM OFF**) and program memory scan tuning (with **PROGRAM ON**).
 This button is also used in combination with **FUNCTION**.**17** EXECUTE button
 Press this button to tune in the frequency for direct tuning.
 This button is also used in combination with **FUNCTION** or **ENTER**.**18** KEY/MEMORY PROTECT button
 Press to activate the key protection function (i.e. the **KEY** indicator appears). The buttons on the front panel are locked and no longer function.
 Press again to deactivate the key protection function.
 This button is also used in combination with **ENTER**.**19** SCAN +/- buttons
 Used for manual tuning.
 This button is also used to start scan tuning and limited scan tuning.

AC01 PD-Voltage Adjustment (7.2 MHz)

Note: Be sure to perform the AC01 PD-Voltage Adjustment when the **AC03 PD-Voltage Adjustment** has been completed.

Open the top shieldplate to determine the following procedures:

1. Set the receiver frequency of the receiver to 120 KHz.

2. Set CL203 to a slightly higher position.

3. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

4. Set the receiver frequency of the receiver to 120 KHz.

5. Set CL203 to a slightly lower position.

6. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

7. Set the receiver frequency of the receiver to 120 KHz.

8. Set CL203 to a slightly higher position.

9. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

10. Set the receiver frequency of the receiver to 120 KHz.

11. Set CL203 to a slightly lower position.

12. Set the receiver frequency of the receiver to 120 KHz.

13. Set CL203 to a slightly higher position.

14. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

15. Set the receiver frequency of the receiver to 120 KHz.

16. Set CL203 to a slightly lower position.

17. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

18. Set the receiver frequency of the receiver to 120 KHz.

19. Set CL203 to a slightly higher position.


20. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

21. Set the receiver frequency of the receiver to 120 KHz.

22. Set CL203 to a slightly lower position.

23. Adjust L202 so that the reading on the VHF/LW counter is 132.4 ± 0.02 VHF.

Note: Grounding power-supply voltage to the ADC meter after the **AC01 PD-Voltage Adjustment** has been completed.

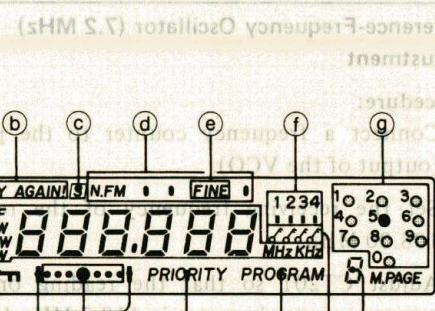
C

Display window (illustration C)

- a** Frequency being received
- b** TRY AGAIN indicator
- c** S (frequency shift) indicator (ICF-PRO80 only)
- d** Detection mode indicator
- e** FINE (fine tuning) indicator
- f** PAGE selector setting indicator
- g** Memory station indicator

The dot lights to show that the station stored on the corresponding number button is being received.

- h** Key protection indicator
- i** Limited scan indicator
- j** Scan mode indicator
- k** PRIORITY indicator
- l** PROGRAM indicator
- m** Memory protection indicator
- n** Memory page indicator

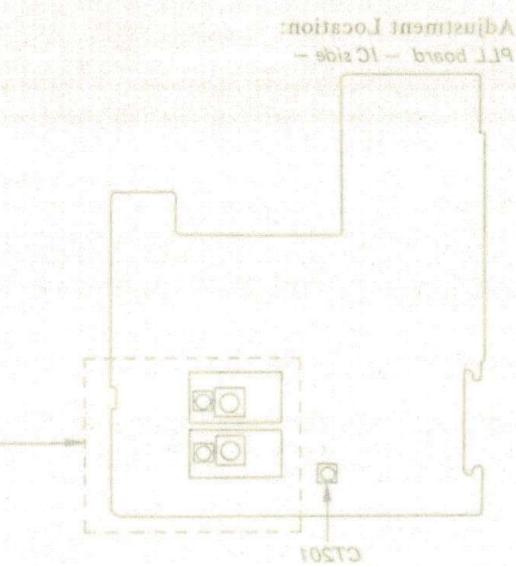

SECTION 1

ELECTRICAL ADJUSTMENTS

Note: Standard power-supply voltage is 6 VDC unless otherwise noted.


Be sure to perform the "VCO1 PD-Voltage Adjustment" and "VCO2 PD-Voltage Adjustment" when the "FM-L Tracking Adjustment" and "FM-H Tracking Adjustment" are performed respectively.

Reference-Frequency Oscillator (7.2 MHz) Adjustment

Procedure:


1. Connect a frequency counter to the point A (output of the VCO).
2. Set the receiving frequency of the receiver to 108.00 MHz.
3. Adjust CT201 so that the reading on the frequency counter becomes in $118.7 \text{ MHz} \pm 100 \text{ Hz}$.

PLL board - IC side -

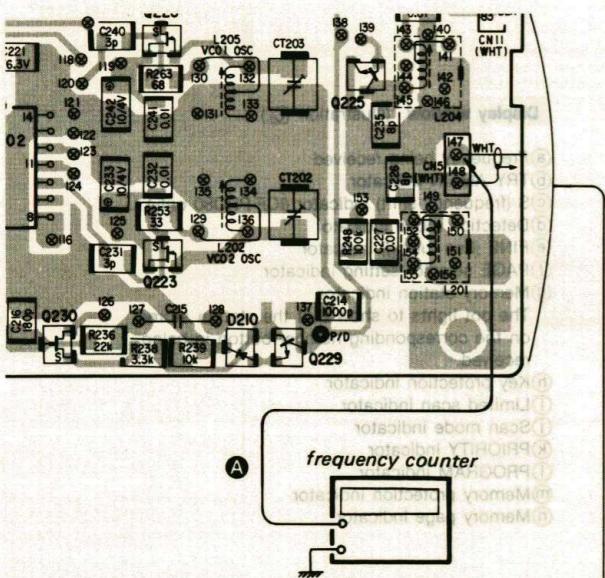

Adjustment Location:

PLL board - IC side -

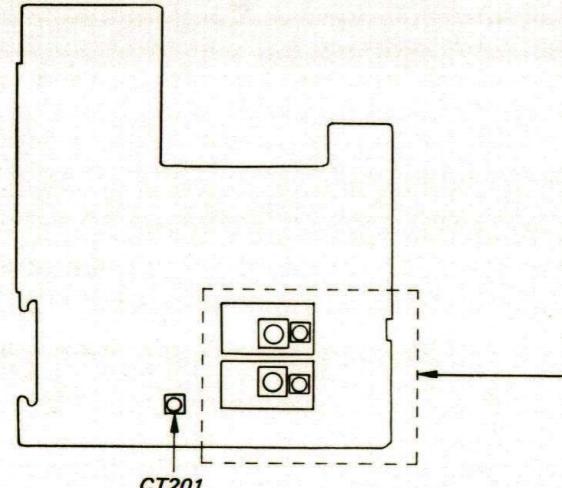


VCO1 PD-Voltage Adjustment

Note: Be sure to perform the "FM-L Tracking Adjustment" when this adjustment is performed.

Procedure:


1. Set the receiving frequency of the receiver to 150 kHz.
2. Set CT203 to a slightly meshed position.
3. Adjust L205 so that the reading on the VTVM connected to the point A (PD test point) becomes in $1.35 \text{ V} \pm 0.05 \text{ VDC}$.
4. Set the receiving frequency of the receiver to 75.95 MHz, and the mode to the WIDE FM. Confirm that the reading on the VTVM is $14.0 \text{ V} \pm 1 \text{ VDC}$.

PLL board - IC side -

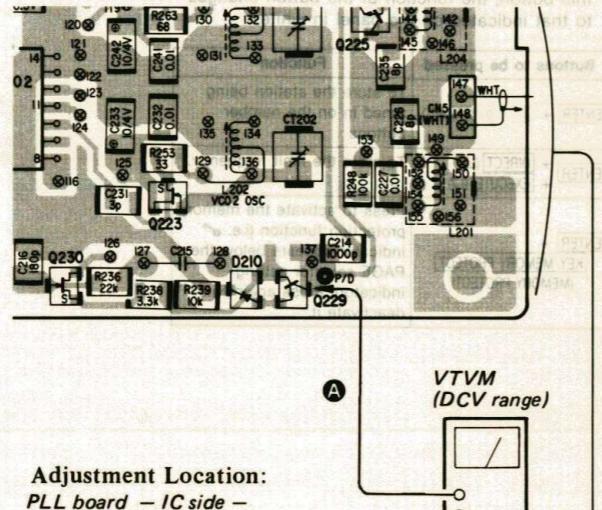


Adjustment Location:

PLL board - IC side -

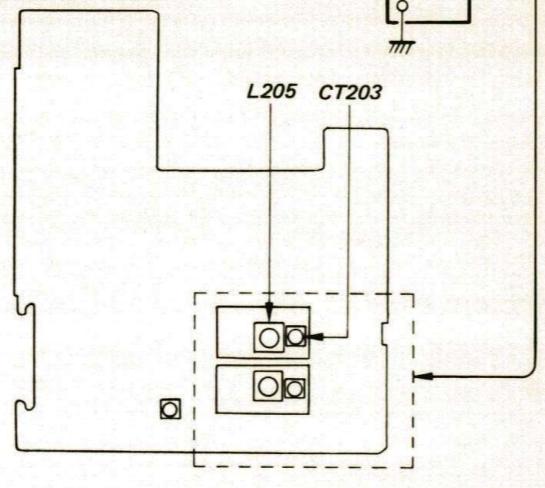

FM-L Tracking Adjustment


Procedure:

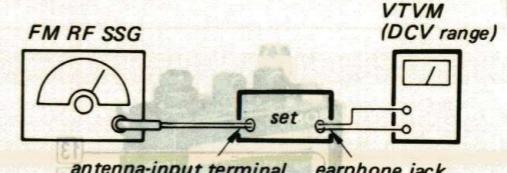


1. Set the frequencies of the SSG and the receiver to 55.000 MHz.
2. Adjust L3 and T2 to obtain a maximum signal output on the VTVM.
3. Change the frequencies of the SSG and the receiver to 70.000 MHz.
4. Adjust CT203 and CT2 so that the reading on the VTVM becomes in maximum.
5. Repeat the above steps 1 through 4 several times until no further improvements is obtained.
6. Perform and confirm the prior step "VCO1 PD-Voltage Adjustment".

Adjustment Location:

main board - IC side -

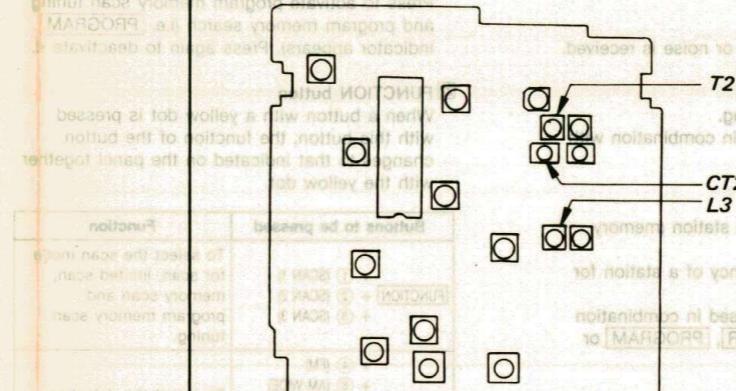

PLL board - IC side -

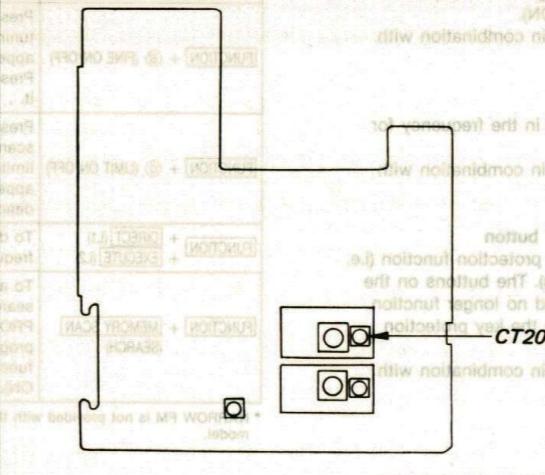


VCO2 PD-Voltage Adjustment

Note: Be sure to perform the "FM-H Tracking Adjustment" when this adjustment is performed.

Procedure:


1. Set the receiving frequency of the receiver to 30.000 MHz.
2. Set CT202 to its half-meshed or slightly-meshed position.
3. Adjust L202 so that the reading on the VTVM connected to the point A (PD test point) becomes in $1.35 \text{ V} \pm 0.05 \text{ VDC}$.
4. Change the receiving frequency of the receiver to 75.95 MHz, and the mode to the NARROW FM. Confirm that the voltage reading is $14.0 \text{ V} \pm 1.0 \text{ VDC}$.


PLL board - IC side -

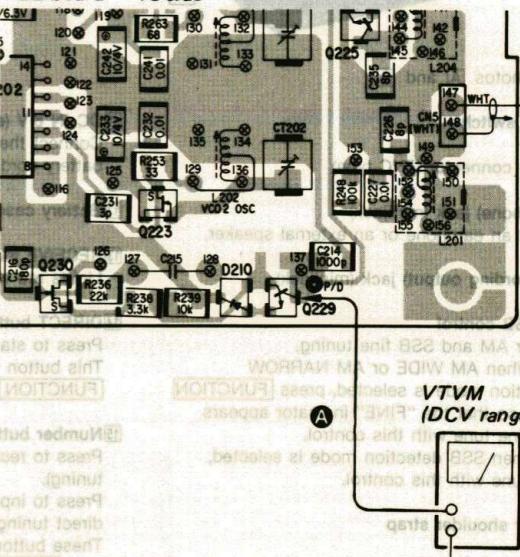

Adjustment Location:

PLL board - IC side -

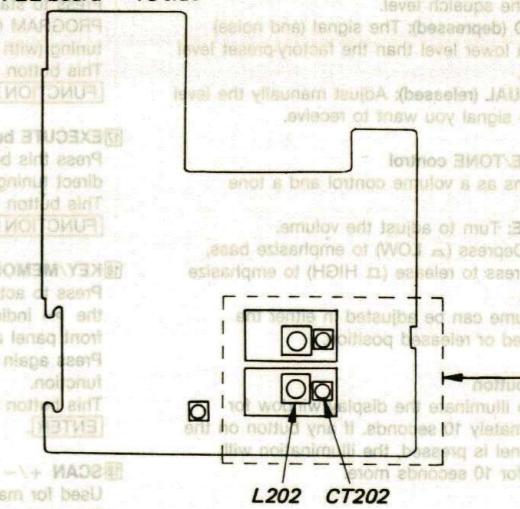







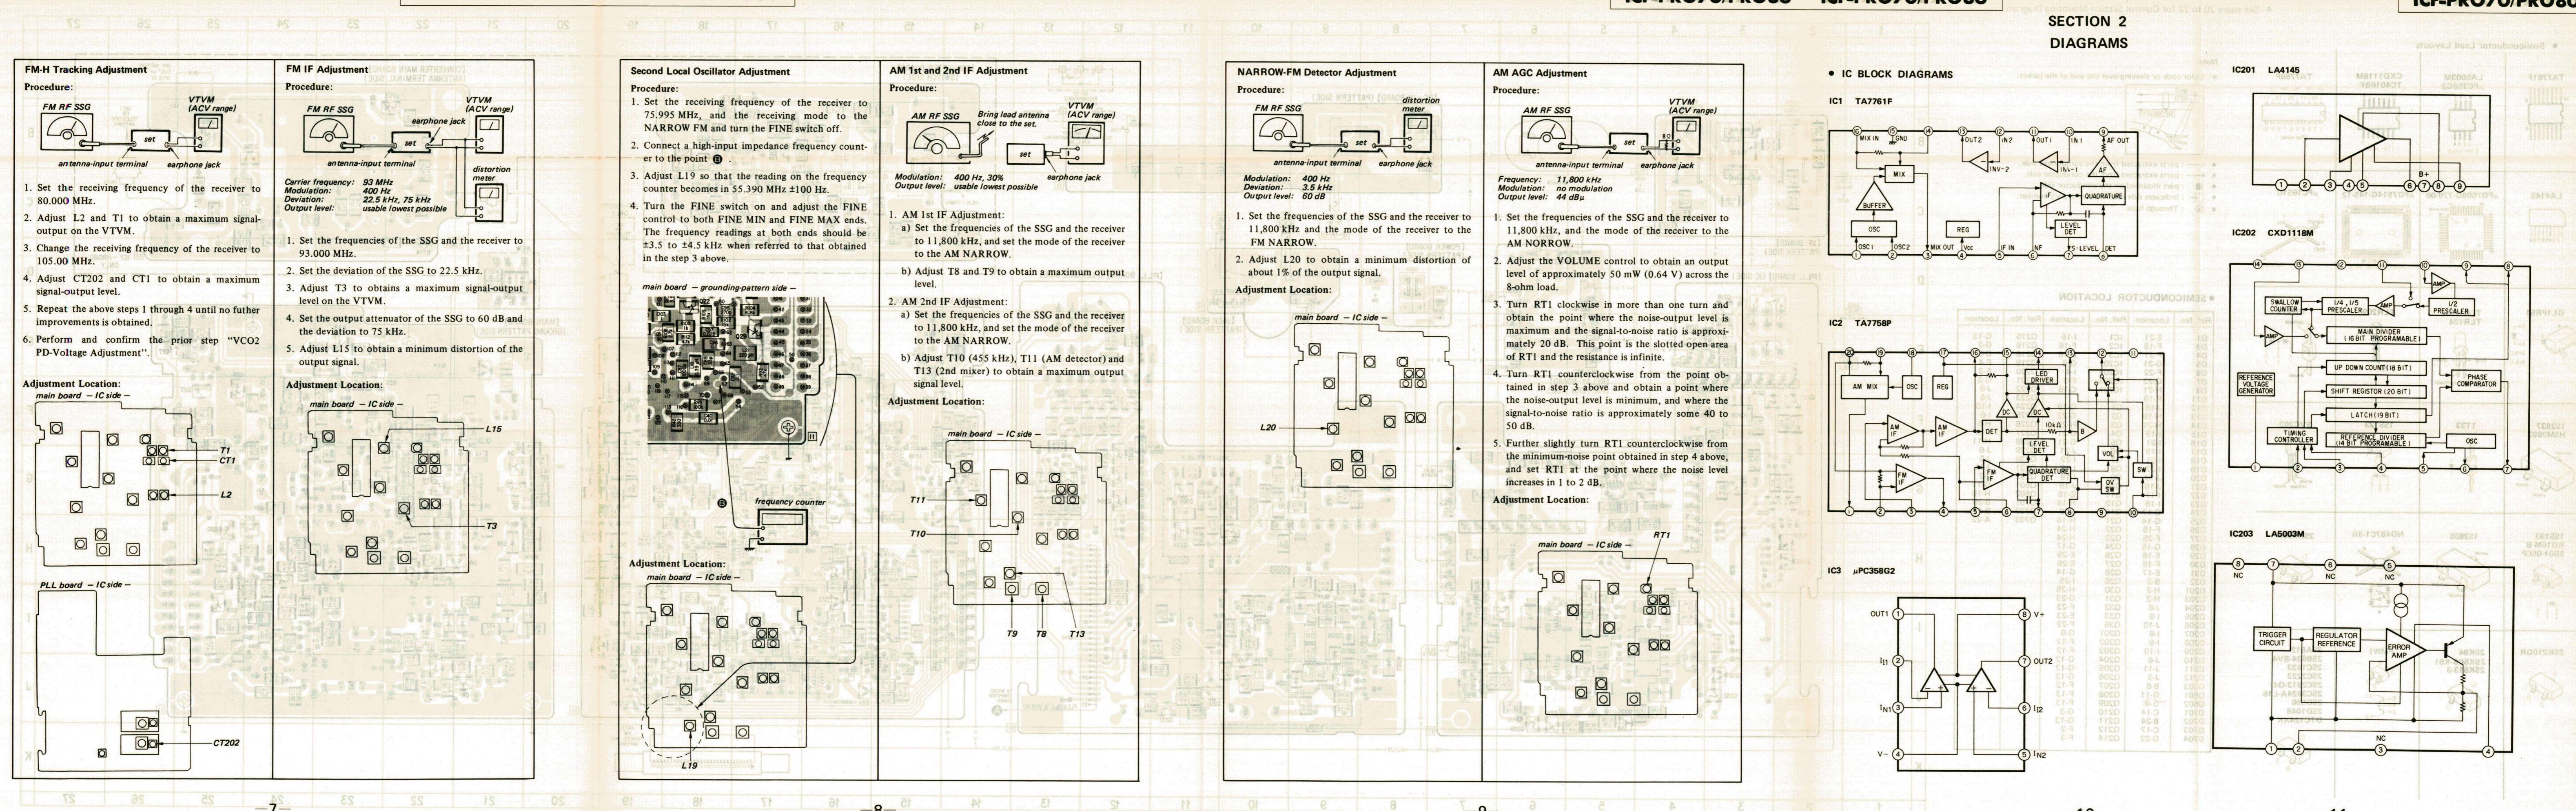


2-1. MAIN SECTION MOUNTING DIAGRAM
• See pages 20 to 22 for Control Section Mounting Diagram.

ICF-PRO70/PRO80 ICF-PRO70/PRO80

ICF-PRO70/PRO80 ICF-PRO70/PRO80

• Semiconductor Lead Layouts

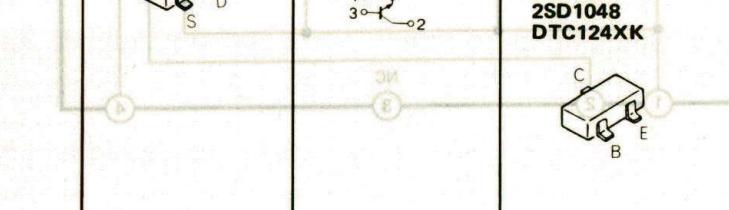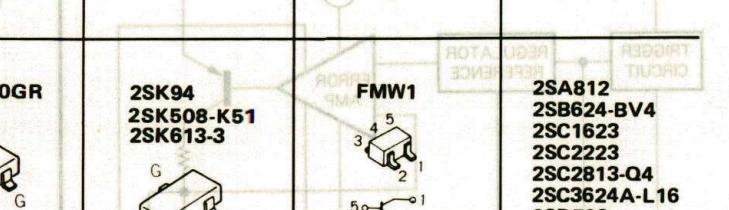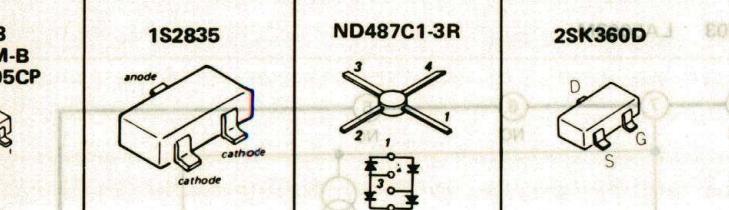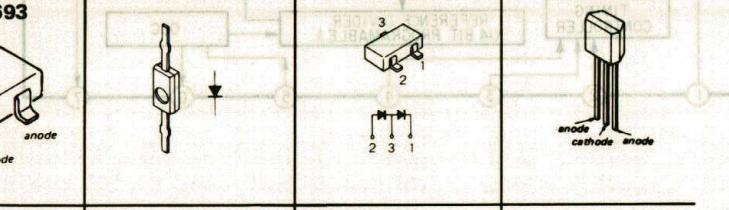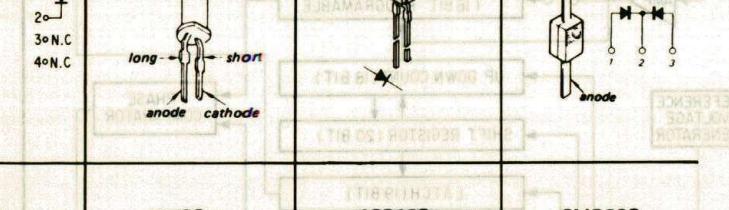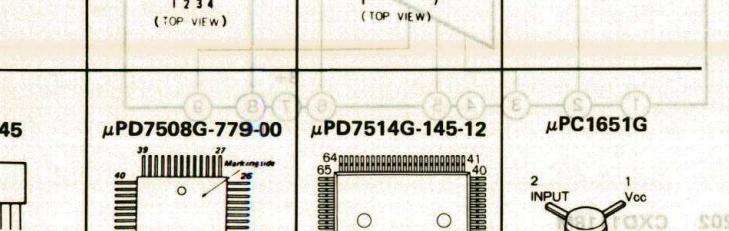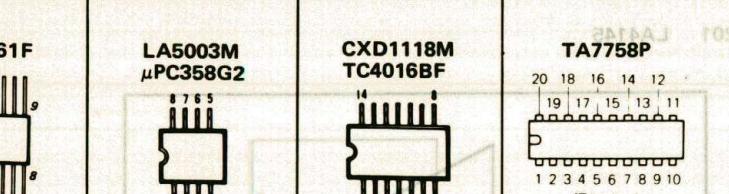


Note:


- Color code or sleeving over the end of the jacket.
- WHT (RED) (RED(GRY))
- ○ : parts extracted from the component side.
- ● : parts extracted from the conductor side.
- ■ : part mounted on the conductor side.
- □ : indicates side identified with part number.
- ✕ : Through hole.

• SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	E-21	IC1	I-15	Q215	G-13
D3	F-18	IC2	F-16	Q216	G-2
D4	F-21	IC3	E-16	Q218	D-3
D5	G-21	IC201	G-6	Q219	E-4
D6	F-22	IC202	I-4	Q220	E-3
D7	G-22	IC203	F-3	Q221	G-3
D8	H-21	IC701	C-16	Q222	J-9
D11	F-19			Q223	J-5
D12	J-18	Q1	G-19	Q224	I-10
D13	H-19	Q2	G-22	Q225	I-6
D14	H-21	Q3	H-22	Q226	H-5
D15	I-19	Q4	G-21	Q227	I-10
D16	I-21	Q5	G-21	Q228	H-11
D17	I-21	Q6	J-21	Q229	H-11
D18	I-21	Q7	I-22	Q230	J-5
D19	J-22	Q8	I-18	Q231	J-11
D20	J-19	Q9	I-19	Q232	J-3
D21	J-16	Q10	J-19	Q501	G-11
D22	I-17	Q11	E-18	Q502	H-10
D23	I-16	Q12	H-18	Q701	B-25
D24	G-17	Q13	J-24	Q702	B-17
D25	G-14	Q21	H-16	Q703	A-22
D26	F-15	Q22	H-24		
D27	F-25	Q23	H-24		
D28	G-15	Q24	G-17		
D29	E-16	Q25	E-25		
D30	F-18	Q26	E-26		
D31	E-17	Q27	G-14		
D32	B-3	Q28	I-25		
D201	H-2	Q30	H-25		
D203	H-2	Q31	G-23		
D204	J-8	Q32	F-23		
D205	I-9	Q33	E-23		
D206	J-10	Q34	F-22		
D207	I-8	Q201	G-9		
D208	I-9	Q202	F-12		
D209	I-10	Q203	F-12		
D210	J-6	Q204	G-12		
D211	J-11	Q205	G-12		
D212	J-3	Q206	G-12		
D303	B-8	Q207	F-12		
D501	G-4	Q208	F-13		
D502	G-4	Q209	F-13		
D701	C-14	Q210	F-3		
D702	B-24	Q211	G-3		
D703	C-17	Q212	F-2		
D704	D-22	Q214	F-3		

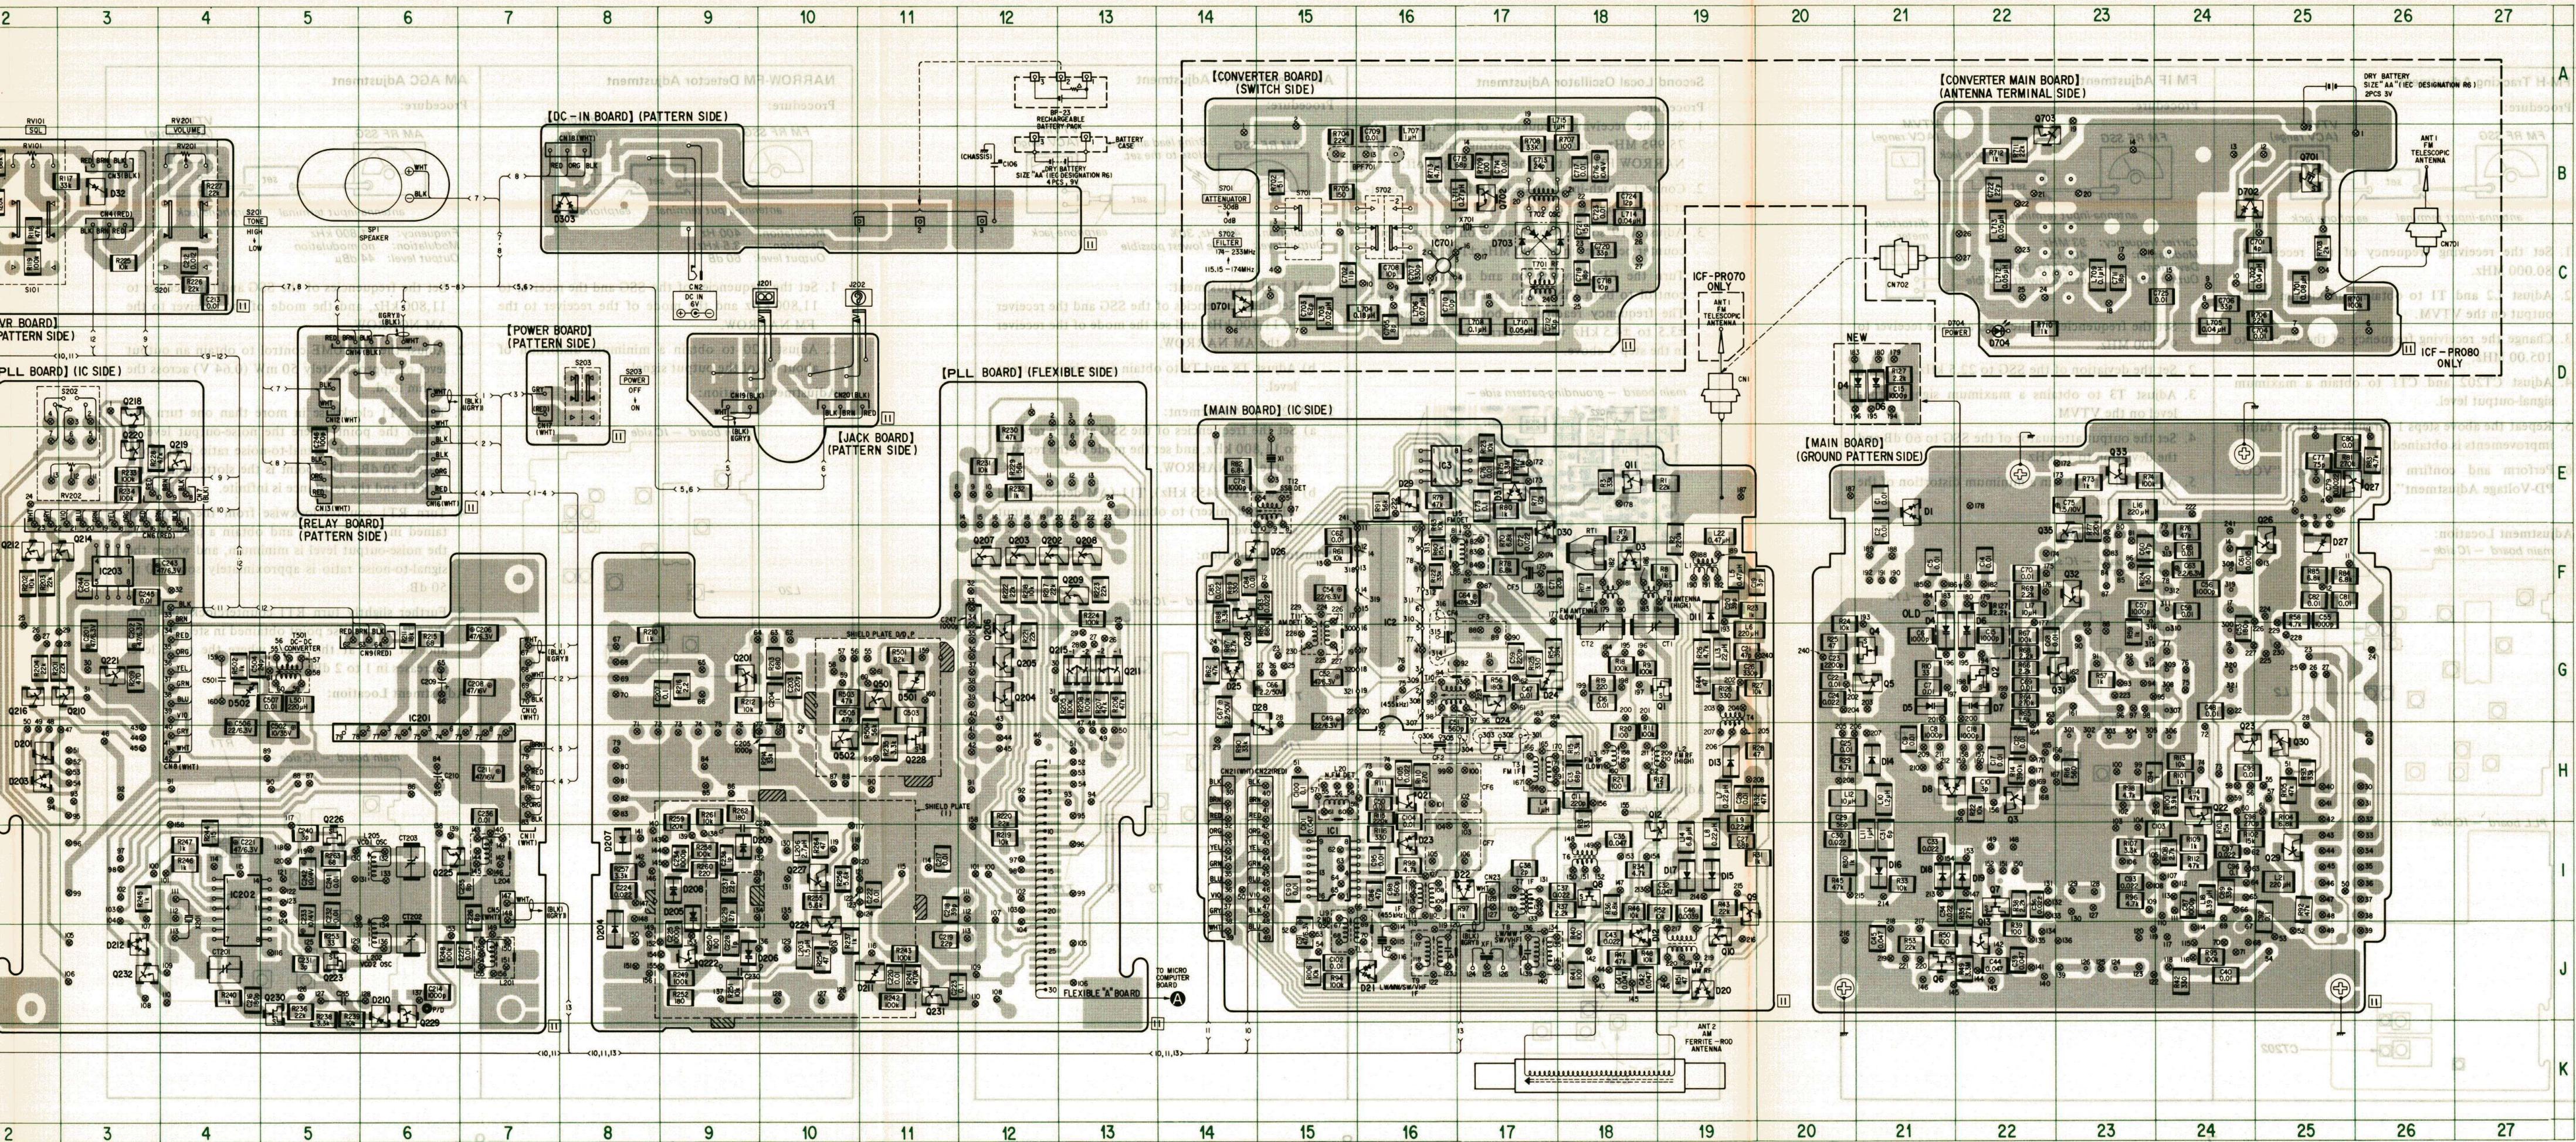


- 2-2. SCHEMATIC DIAGRAM
- See pages 10, 11 for IC Block Diagrams.
 - See pages 20, 21 for Converter Board Schematic Diagram (Only for ICF-PRO80).
 - See pages 20 to 22 for Control Section Mounting Diagram.
 - See pages 21, 22 for notes.

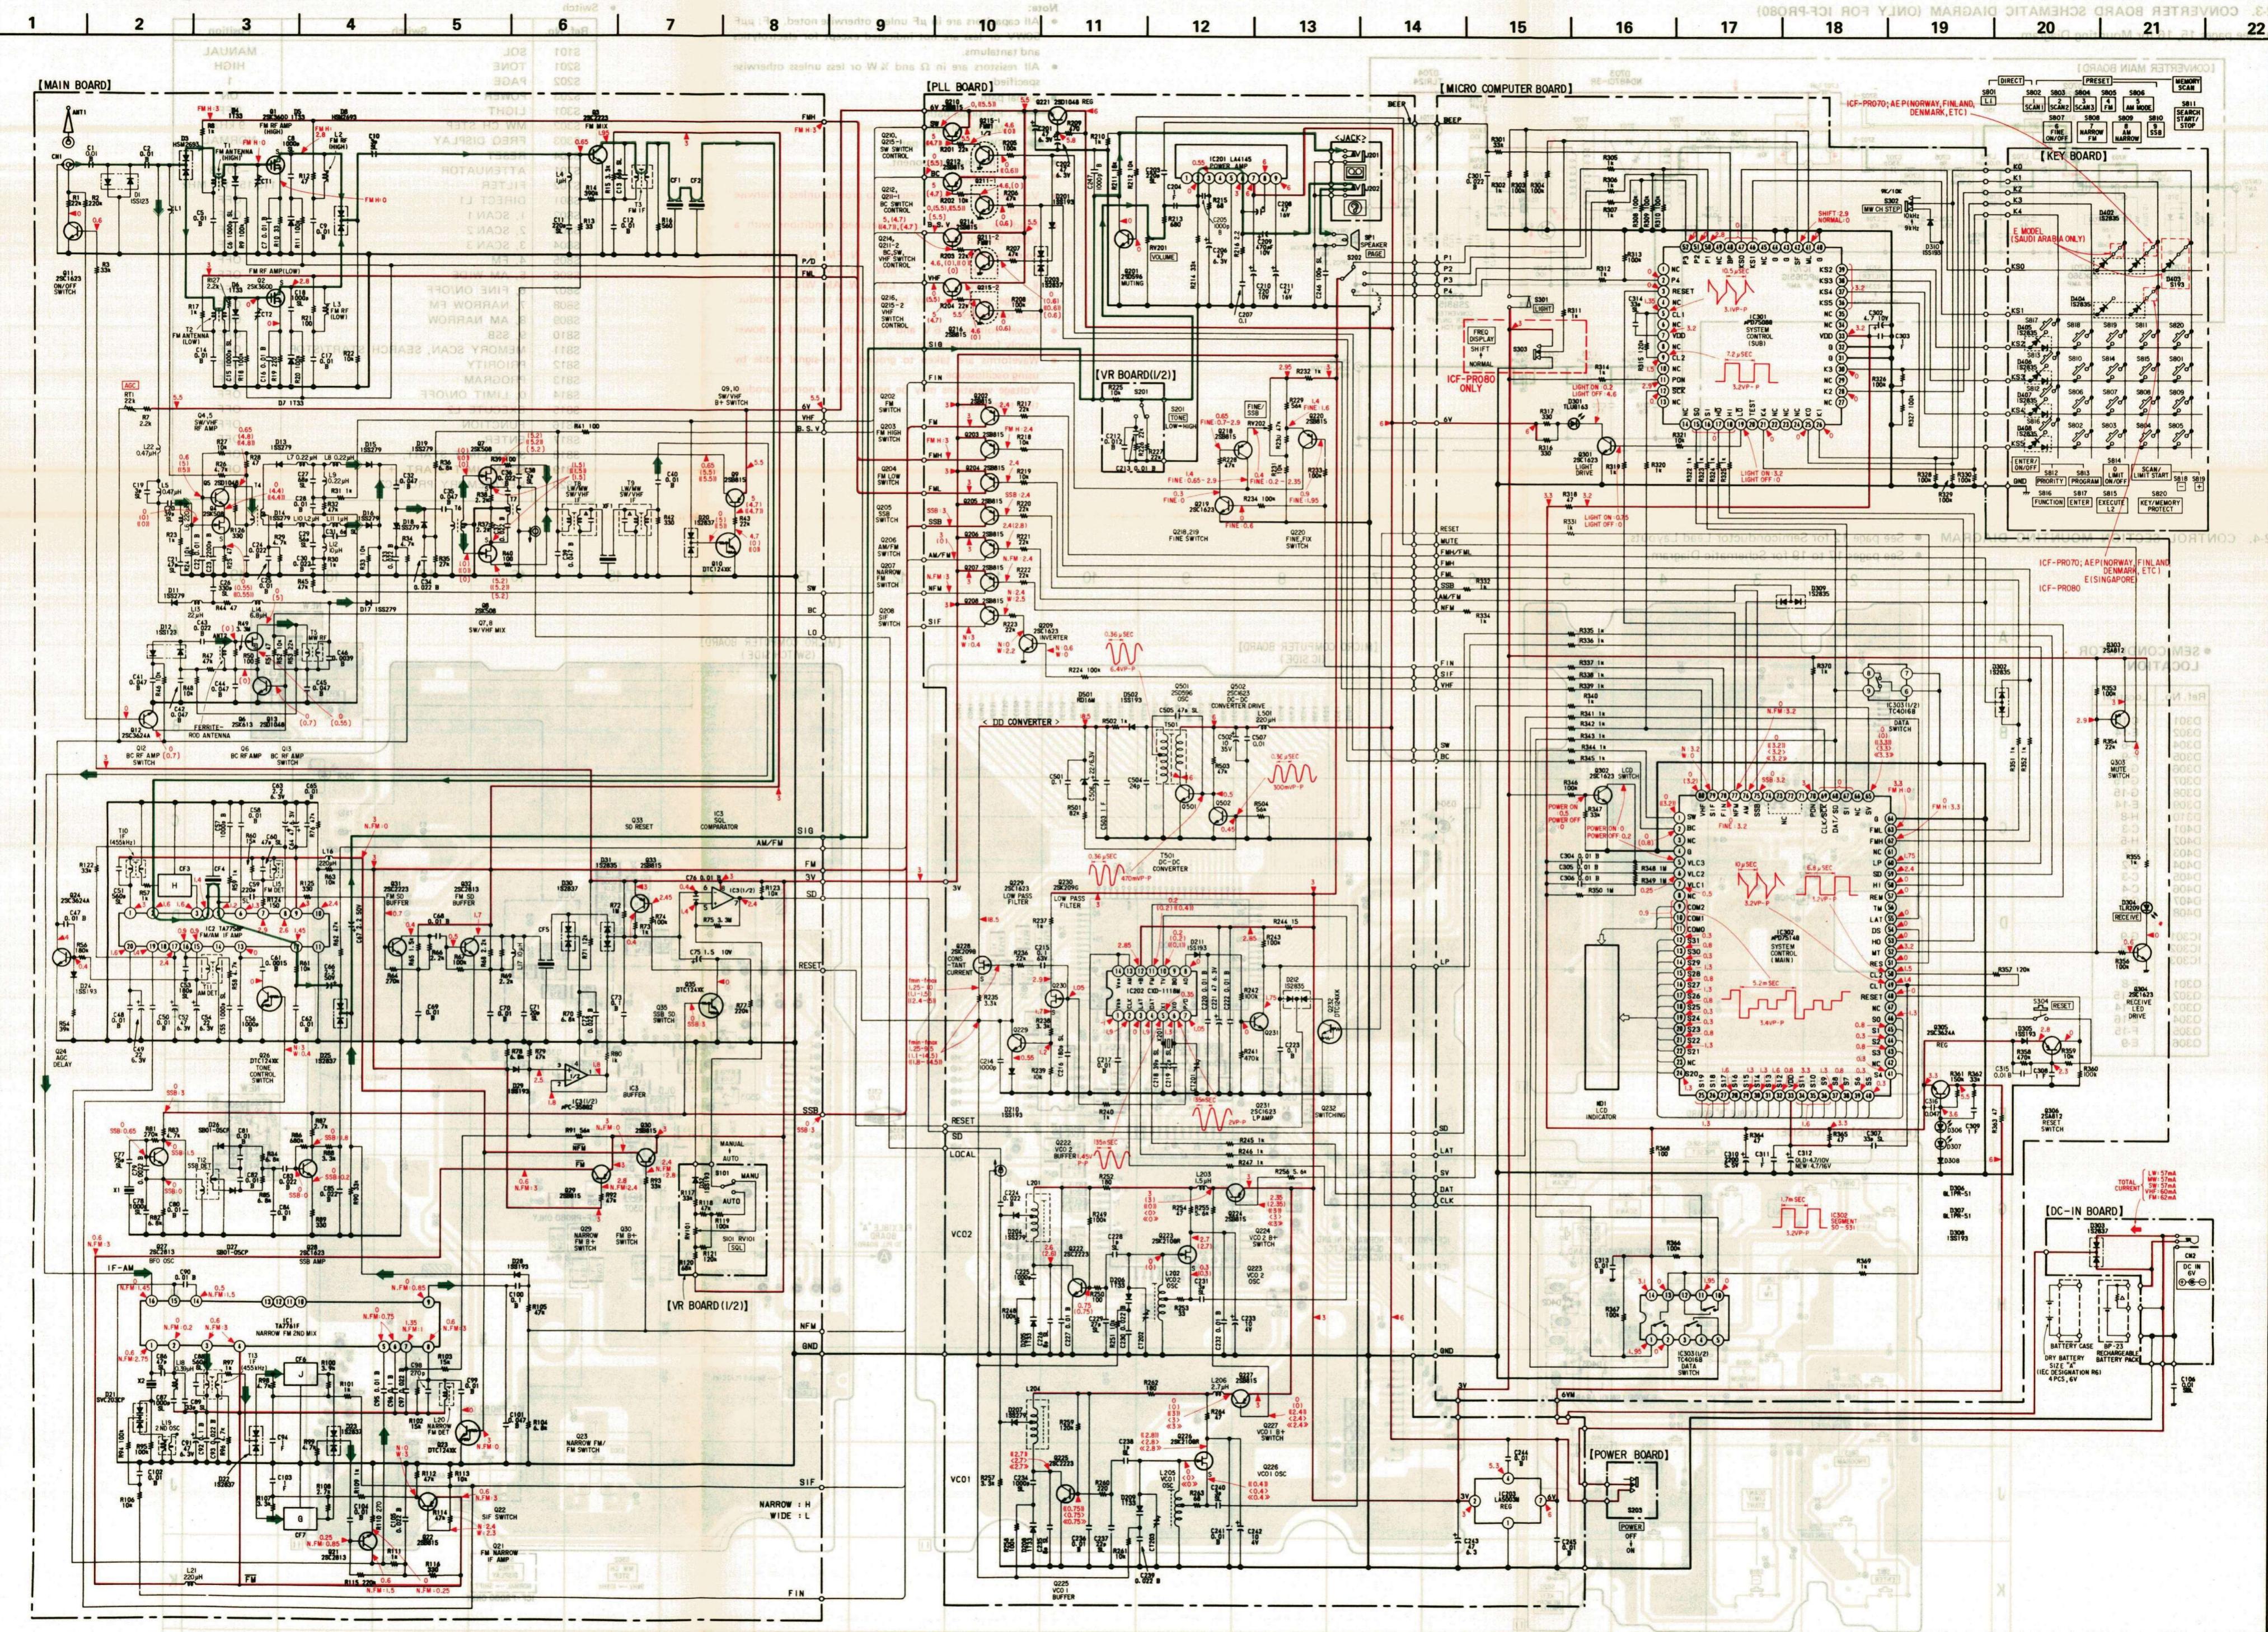

2-3. CONVERTER BOARD SCHEMATIC DIAGRAM (ONLY FOR ICF-PRO80)

- See pages 15, 16 for Mounting Diagram.

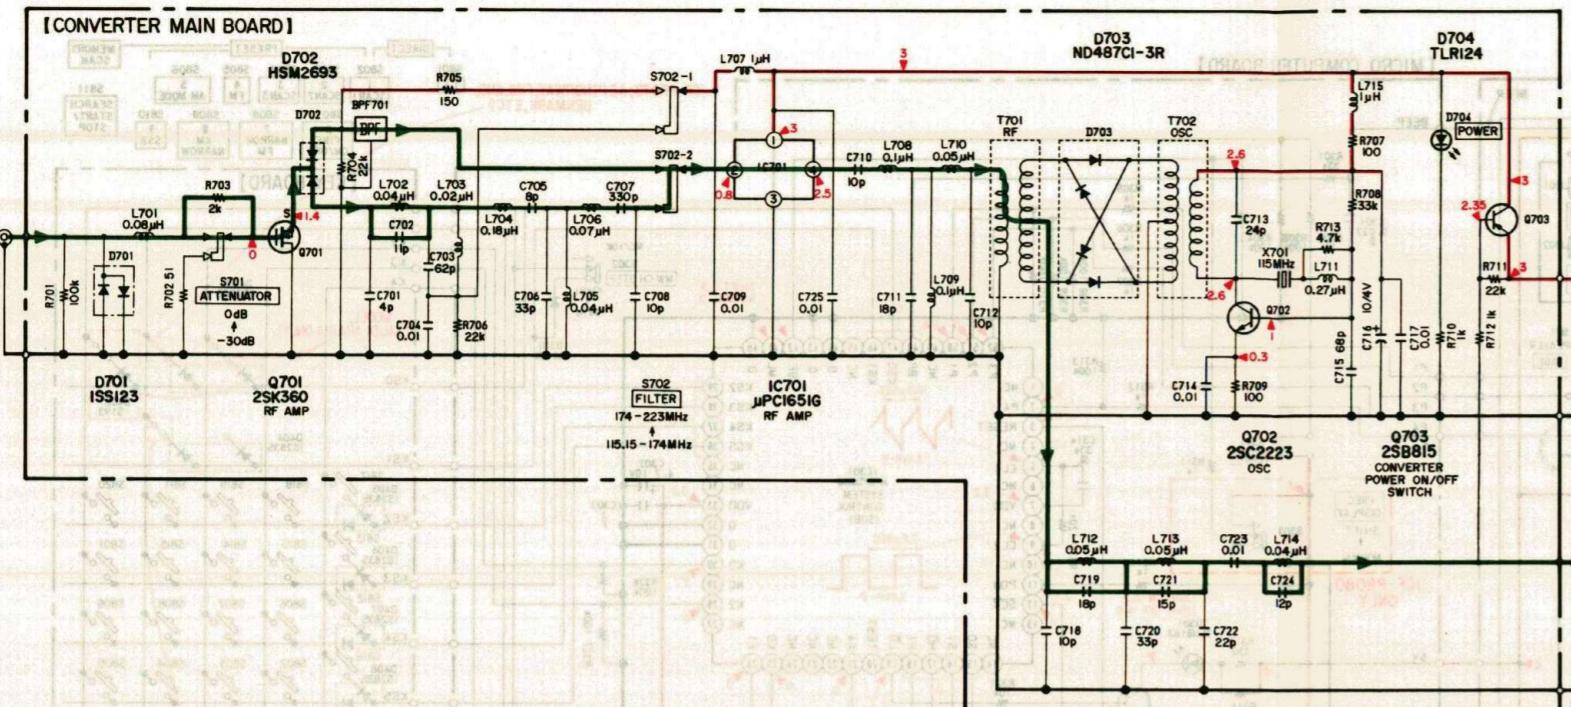**Note:**

- All capacitors are in μF unless otherwise noted. pF : μF 50W or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{2}\text{W}$ or less unless otherwise specified.
- Signal path:
 - FM signal path:
 - MW signal path:
 - SW, VHF signal path:
- Δ : internal component.
- $\text{B}+$ bus.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under detuned conditions with a VOM (50 k Ω /V).
 - no mark: FM []: BC N: FM: NARROW FM
 - (): VHF < : MW N: AM NARROW
 - (): SW <> : LW W: AM WIDE
- Voltage variations may be noted due to normal production tolerances.
- Power voltage is 6 V and fed with regulated dc power supply from battery terminal.
- Waveforms are taken to ground in no-signal mode by using oscilloscope.
 Voltage variations may be noted due to normal production tolerances.

• Switch


Ref. No.	Switch	Position
S101	SQL	MANUAL HIGH
S201	TONE	1 ON
S202	PAGE	OFF
S203	POWER	9 kHz NORMAL
S301	LIGHT	OFF
S302	MW CH STEP	ATTENUATOR
S303	FREQ DISPLAY	115.15-174 MHz
S304	RESET	-30 dB
S701	ATTENUATOR	OFF
S702	FILTER	OFF
S801	DIRECT L1	1, SCAN 1 OFF
S802	SCAN 2	2, SCAN 2 OFF
S803	SCAN 3	3, SCAN 3 OFF
S804	4, FM	OFF
S805	5, AM WIDE	OFF
S806	6, FINE ON/OFF	OFF
S807	7, NARROW FM	OFF
S808	8, AM NARROW	OFF
S809	9, SSB	OFF
S810	MEMORY SCAN, SEARCH START/STOP	OFF
S811	PRIORITY	OFF
S812	PROGRAM	OFF
S813	0, LIMIT ON/OFF	OFF
S814	EXECUTE L2	OFF
S815	FUNCTION	OFF
S816	ENTER	OFF
S817	SCAN/LIMIT START, -	OFF
S818	SCAN/LIMIT START, +	OFF
S819	KEY/MEMORY PROTECT	OFF
S820		OFF

2-4. CONTROL SECTION MOUNTING DIAGRAM

- See page 12 for Semiconductor Lead Layouts.
- See pages 17 to 19 for Schematic Diagram.

• SEMICONDUCTOR LOCATION

Ref. No.	Location
D301	C-18
D302	E-14
D304	C-6
D305	F-9
D306	G-15
D307	G-15
D308	G-15
D309	E-14
D310	H-8
D401	C-3
D402	H-5
D403	I-5
D404	C-2
D405	C-3
D406	C-4
D407	C-2
D408	D-3
IC301	G-9
IC302	D-9
IC303	F-10
Q301	F-8
Q302	D-15
Q303	F-14
Q304	E-16
Q305	F-15
Q306	E-9

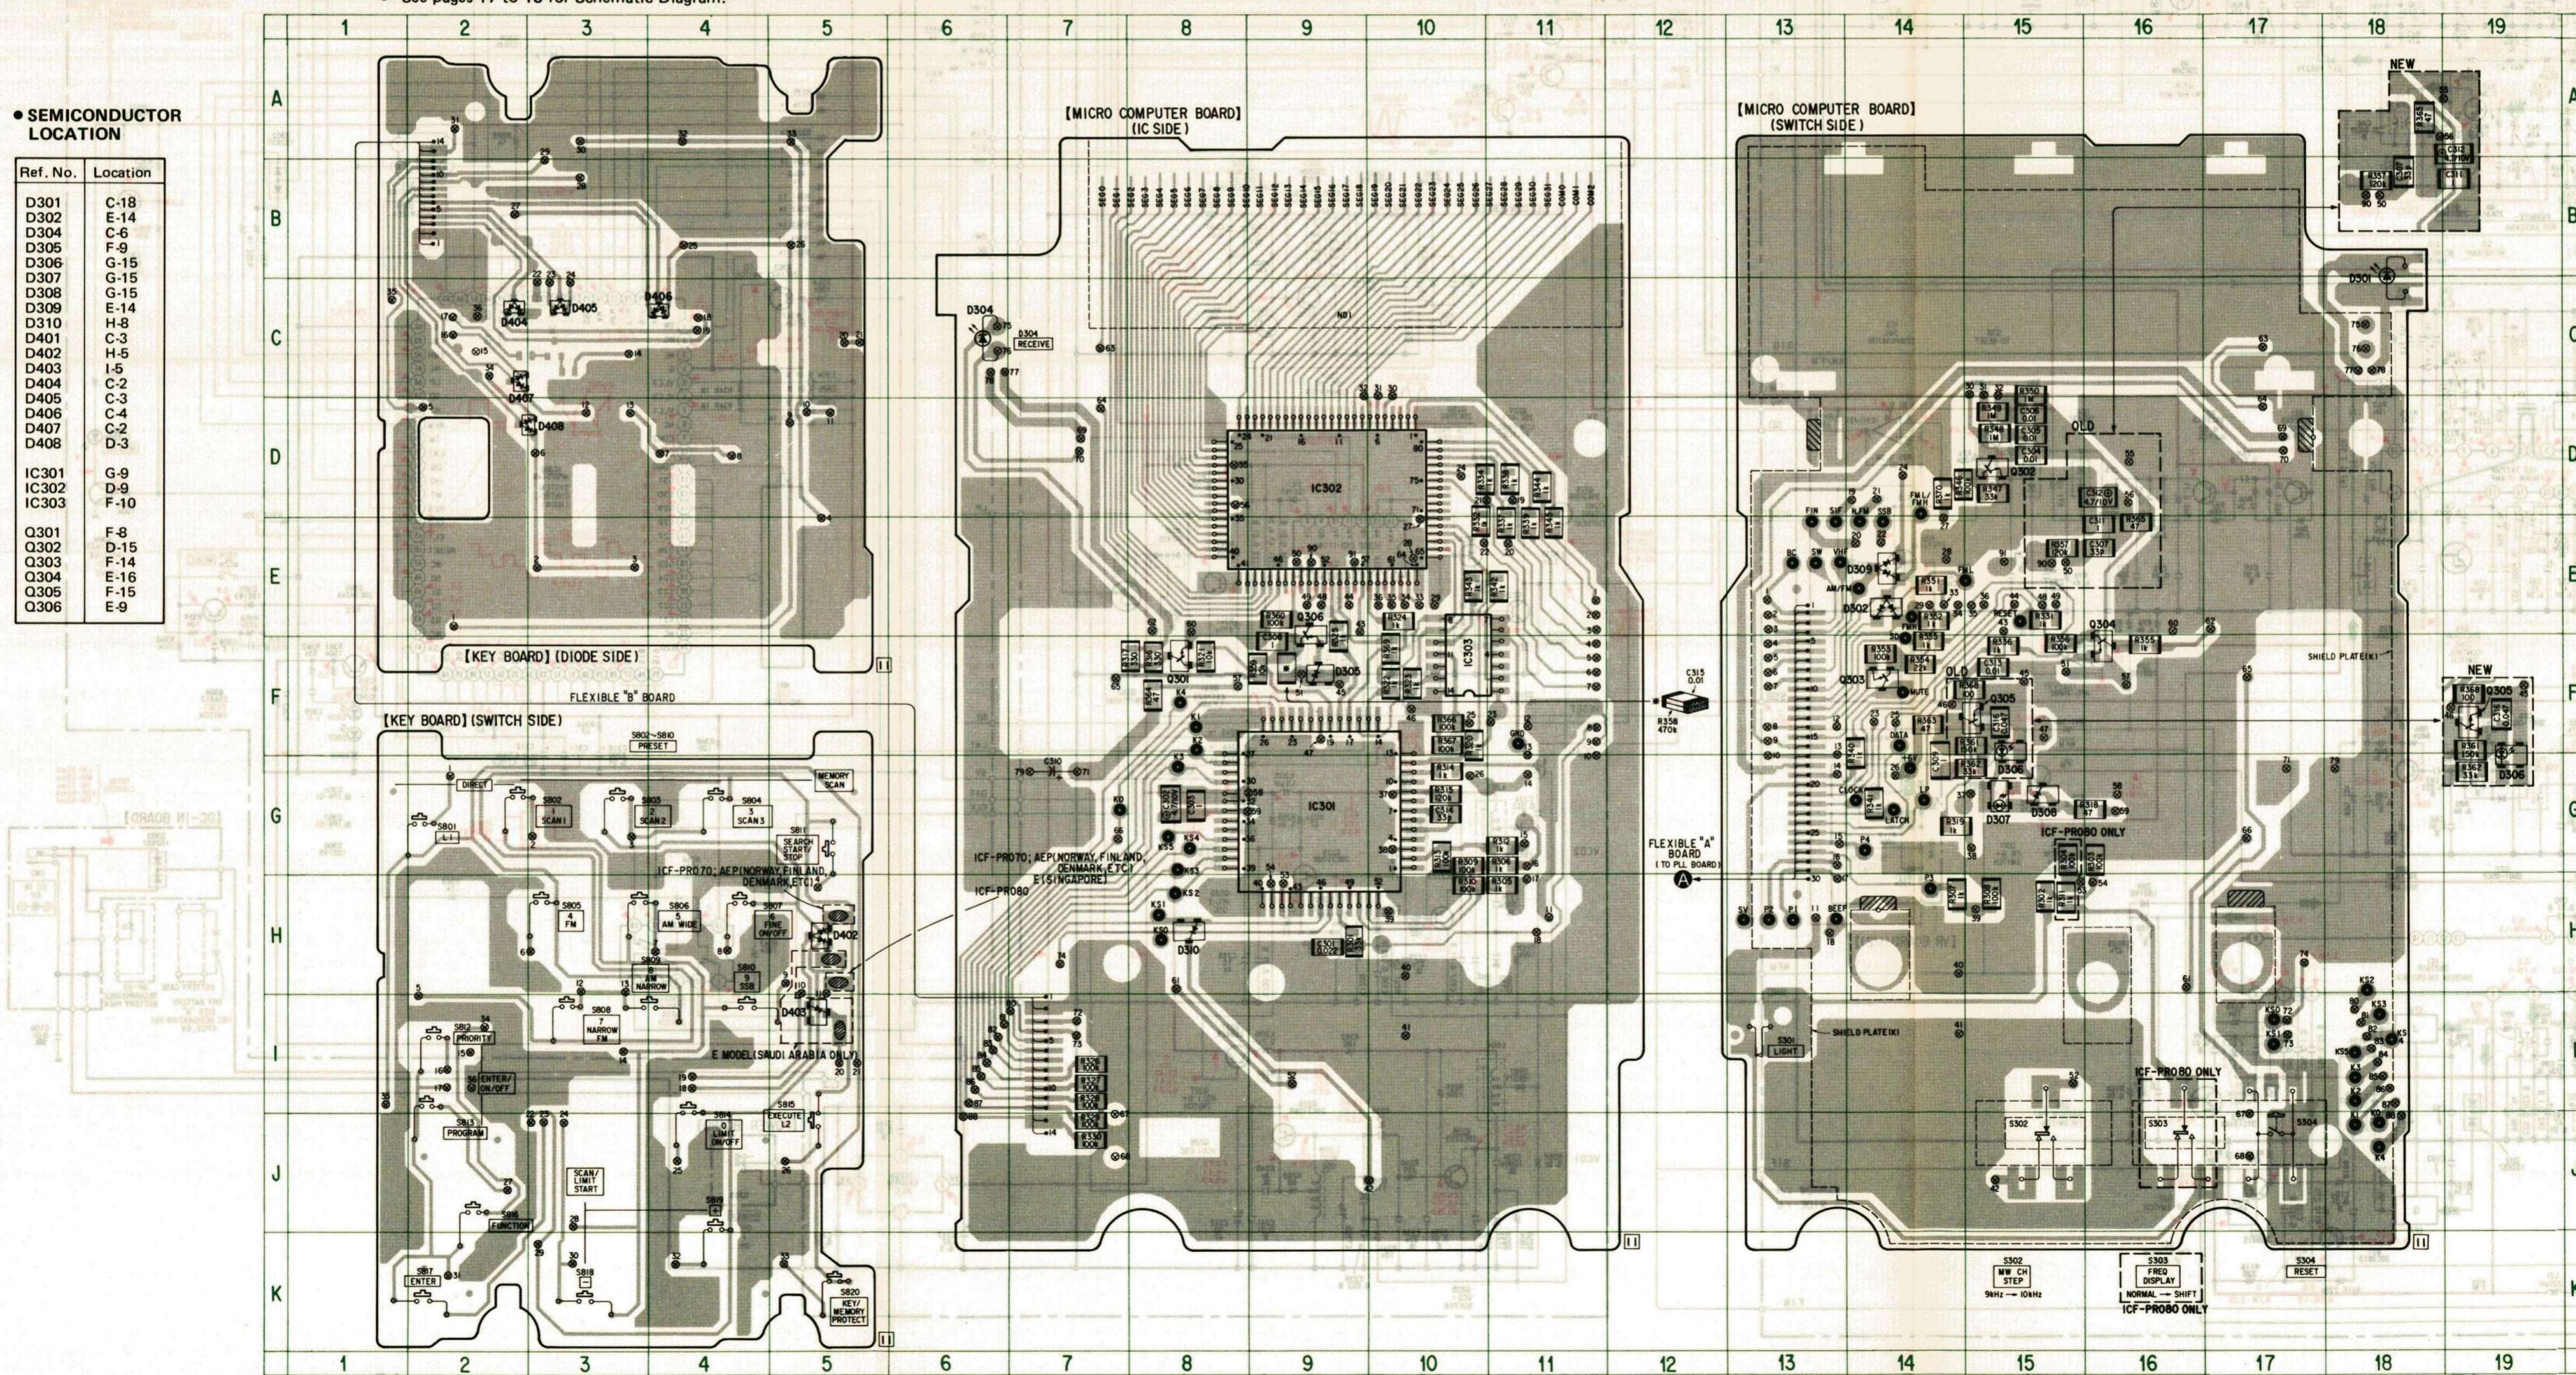


SECTION 3

EXPLODED VIEWS AND PARTS LIST

NOTE:


- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The construction parts of an assembled part are indicated with a callout number in the remark column.

(1)

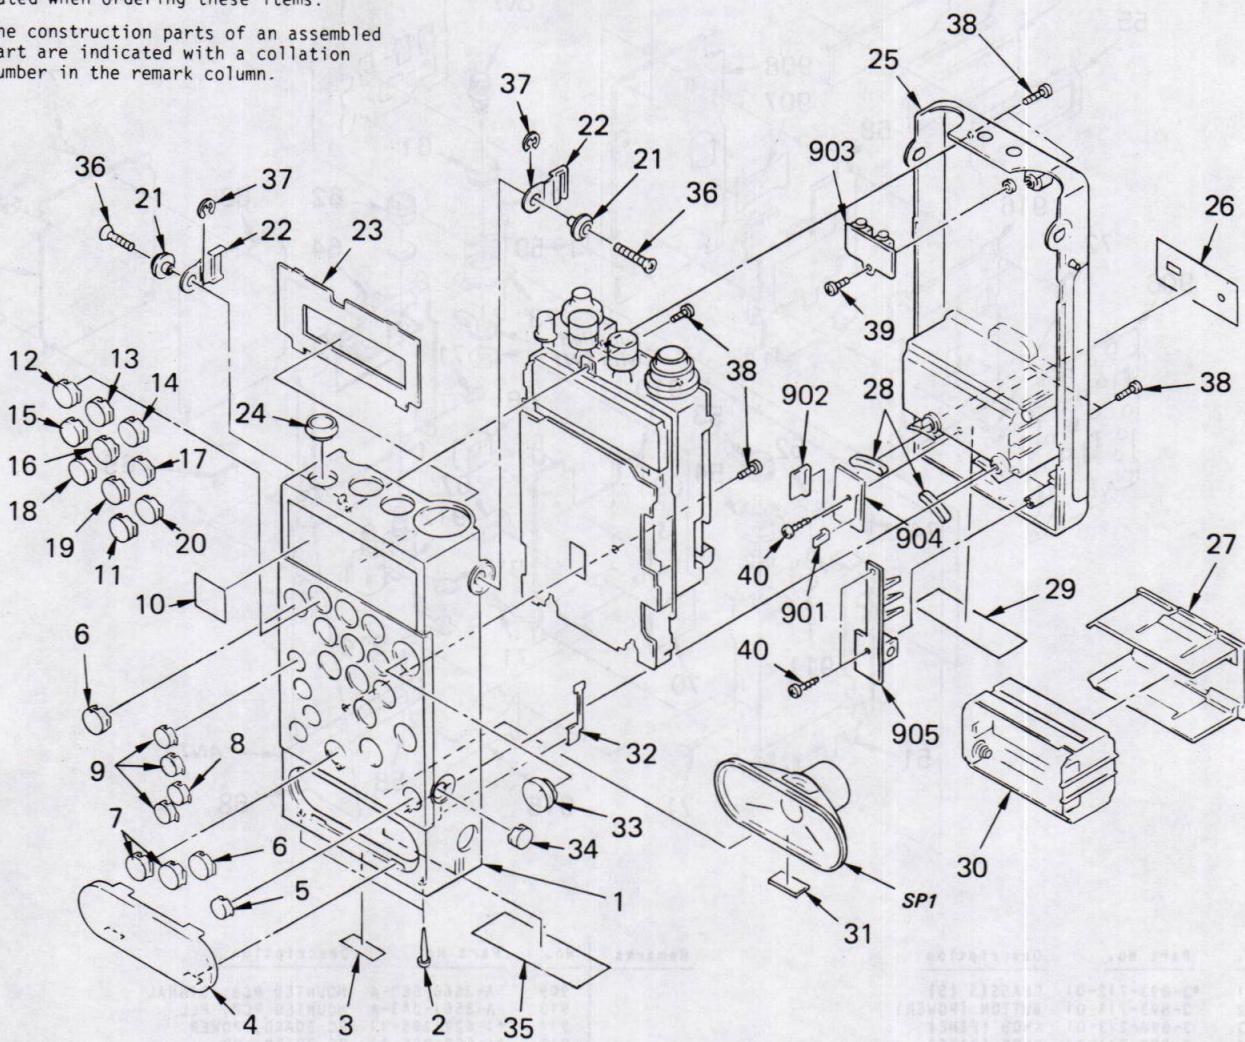


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	X-3893-707-1	(ICF-PRO70:Saudi Arabia) ...CABINET (FRONT) ASSY		24	3-893-728-01	RING, POWER	
	X-3898-203-1	(ICF-PRO80).....CABINET (FRONT) ASSY		25	3-898-224-01	LID, REAR, CABINET	
	X-3898-204-1	(ICF-PRO70:E,AEP)...CABINET (FRONT) ASSY		26	*3-898-204-01	LABEL, SWITCH	
2	3-427-542-00	STOPER		27	3-893-706-01	HOLDER, BATTERY	
3	*3-701-999-00	LABEL, SERIAL NUMBER		28	3-881-931-00	CUSHION, SPEAKER	
4	3-898-226-01	PANEL, SPEAKER		29	3-893-722-01	PLATE, BLIND	
5	3-893-717-01	BUTTON, KP		30	X-3564-820-0	HOLDER ASSY, BATTERY	
6	3-893-704-01	BUTTON (B), MEMORY		31	9-911-838-XX	CUSHION, SPEAKER	
7	3-893-704-11	BUTTON (B), MEMORY		32	*3-898-215-01	SPRING (2)	
8	3-893-716-21	BUTTON, DOUBLE KEY		33	3-893-715-01	BUTTON, S/S	
9	3-893-716-11	BUTTON, DOUBLE KEY		34	3-893-717-11	BUTTON, KP	
10	3-703-709-00	STICKER, SONY SYMBOL (15)		35	*3-898-202-01	(ICF-PRO80)...LABEL, MODEL NUMBER (U)	
11	3-893-703-91	BUTTON (A), MEMORY		36	7-621-662-80	SCREW +RK 2.6X12	
12	3-893-703-01	BUTTON (A), MEMORY		37	7-624-109-04	STOP RING 5.0, TYPE -E	
13	3-893-703-11	BUTTON (A), MEMORY		38	7-621-284-30	SCREW +P 2.6X8	
14	3-893-703-21	BUTTON (A), MEMORY		39	7-621-259-25	SCREW +P 2.6X4	
15	3-893-703-31	BUTTON (A), MEMORY		40	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
16	3-893-703-41	BUTTON (A), MEMORY		901	*I-560-456-00	PIN, CONNECTOR 2P	
17	3-893-703-51	BUTTON (A), MEMORY		902	*I-560-591-00	PIN, CONNECTOR 7P	
18	3-893-703-61	BUTTON (A), MEMORY		904	*I-622-289-11	PC BOARD, TRANSLATION	
19	3-893-703-71	BUTTON (A), MEMORY		905	*I-622-288-11	PC BOARD, DC-IN	
20	3-893-703-81	BUTTON (A), MEMORY		SP1	I-503-374-11	SPEAKER	
21	3-893-726-01	COLLAR, BELT					
22	3-893-730-01	BRACKET, BELT					
23	3-898-227-01	(ICF-PRO70:E,ICF-PRO80)....PLATE, BACK					
	3-898-227-01	(ICF-PRO70:Saudi Arabia)...PLATE, BACK					
	3-898-227-31	(ICF-PRO70:AEP).....PLATE, BACK					

(2)

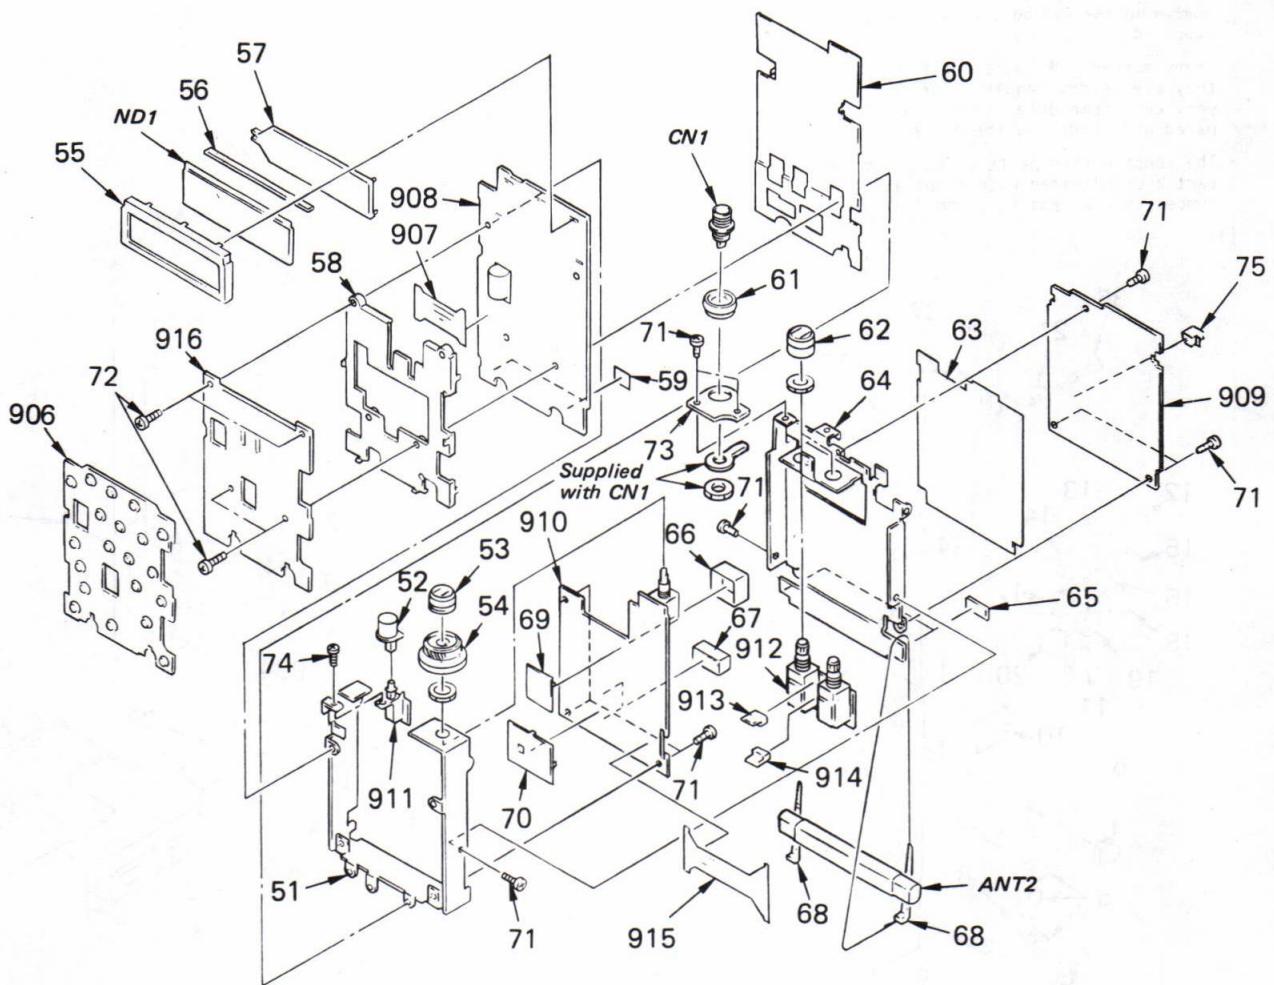

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	*3-893-712-01	CHASSIS (B)		909	A-3660-680-A	MONTEED PCB, SIGNAL	
52	3-893-714-01	BUTTON (POWER)		910	A-3661-043-A	MONTEED PCB, PLL	
53	3-898-213-01	KNOB (FINE)		911	*I-622-285-11	PC BOARD, POWER	
54	3-898-214-01	KNOB (PAGE)		912	*I-622-286-11	PC BOARD, VR	
55	*3-898-216-01	HOLDER, LCD		913	*I-560-466-00	PIN, CONNECTOR 3P	
56	I-535-656-11	CONDUCTOR, CONNECTOR		914	*I-560-466-00	PIN, CONNECTOR 3P	
57	*3-893-721-01	CHIP, ILLUMINATION		915	I-622-335-11	PC BOARD, FLEXIBLE (A)	
58	*3-898-223-01	SPACER		916	*I-622-284-11	PC BOARD, KEY	
59	*3-893-763-01	SPACER, PC BOARD		ANT2	I-402-272-11	ANTENNA, FERRITE-ROD	
60	*X-3893-701-1	PLATE (K) ASSY, SHIELD		CN1	*I-563-956-11	SOCKET, CONNECTOR	
61	3-893-719-01	RING, ANTENNA					
62	3-893-713-01	KNOB (A)					
63	*3-893-755-01	INSULATOR (C)					
64	*3-893-711-01	CHASSIS (A)					
65	9-911-838-XX	CUSHION, SPEAKER					
66	*3-898-220-01	PLATE, SHIELD; D/D,M					
67	*3-898-218-01	PLATE (2), SHIELD					
68	*3-671-893-00	CLAMP (LOW TYPE)					
69	*X-3898-202-1	PLATE (D/D,P) ASSY, SHIELD					
70	*X-3898-201-1	PLATE (1) ASSY, SHIELD					
71	7-621-259-25	SCREW +P 2.6X4					
72	7-621-284-30	SCREW +P 2.6X8					
73	*3-893-720-01	HOLDER, ANTENNA					
74	7-621-255-25	SCREW +P 2X4					
75	*3-893-770-01	CASE (CF), SHIELD					
903	*I-622-287-11	PC BOARD, JACK					
906	I-571-044-11	SWITCH, RUBBER KEY (S801-820)					
907	I-622-336-11	PC BOARD, FLEXIBLE (B)					
908	A-3661-044-A	(ICF-PRO80)...MONTEED PCB, MICRO COMPUTER					
	A-3661-045-A	(ICF-PRO70)...MONTEED PCB, MICRO COMPUTER					

(3) Applicable to ICF-PRO80

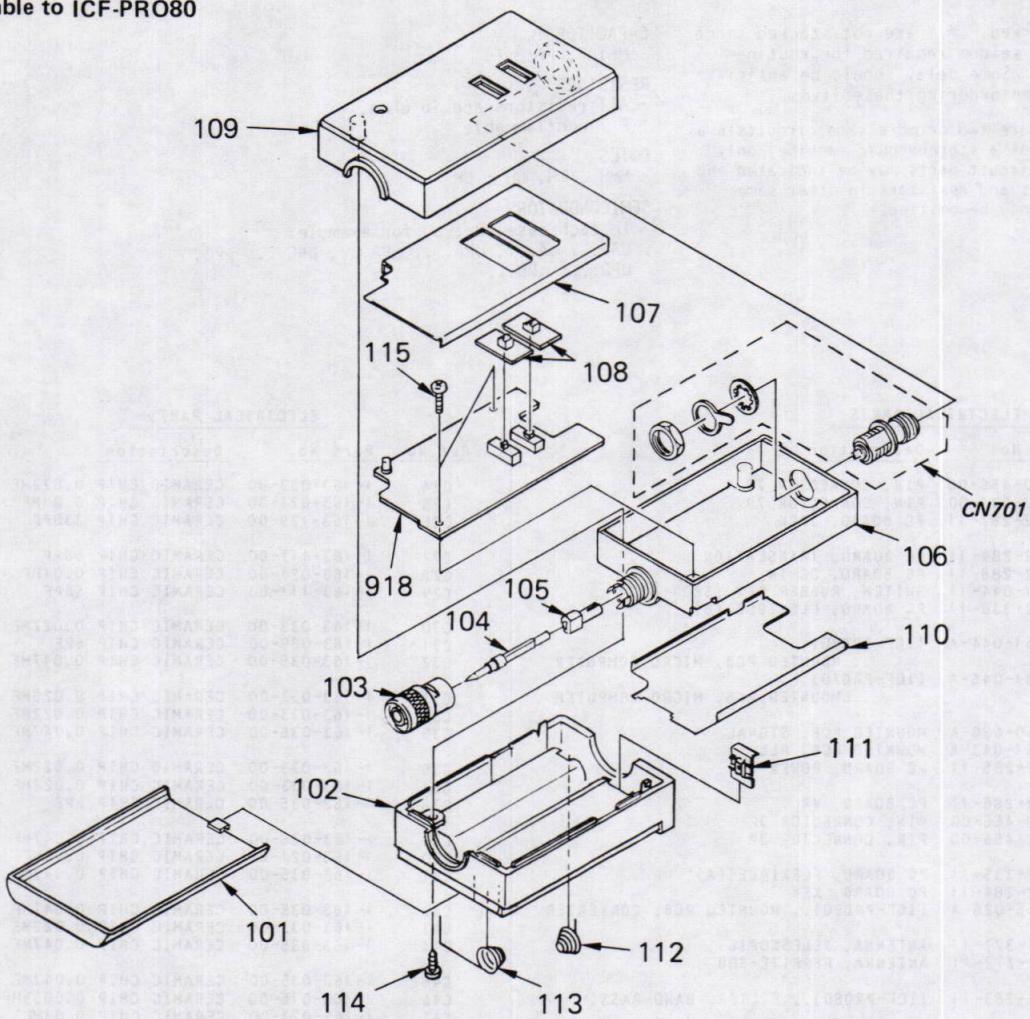

No.	Part No.	Description	Remarks
101	3-898-234-01	(ICF-PRO80)...LID, BATTERY CASE	
102	3-898-242-01	(ICF-PRO80)...COVER (B)	
103	*3-898-239-01	(ICF-PRO80)...SHELL, TNC-P	
104	*3-898-237-01	(ICF-PRO80)...CONTACT	
105	*3-898-238-01	(ICF-PRO80)...SLEEVE	
106	*X-3898-205-1	(ICF-PRO80)...CHASSIS ASSY	
107	*3-898-231-01	(ICF-PRO80)...PLATE (A), SHIELD	
108	3-898-235-01	COVER, SWITCH	
109	3-898-241-01	(ICF-PRO80)...COVER (A)	
110	*3-898-232-01	(ICF-PRO80)...PLATE (B), SHIELD	
111	3-898-229-01	(ICF-PRO80)...TERMINAL BOARD, PLUS	
112	3-898-230-01	(ICF-PRO80)...SPRING	
113	3-898-243-01	(ICF-PRO80)...SPRING	
114	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
115	7-621-259-25	SCREW +P 2.6X4	
918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER	
CN701	*I-563-956-21	(ICF-PRO80)...SOCKET, CONNECTOR	

SECTION 4

ELECTRICAL PARTS LIST

NOTE:

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF:μF, PF:μμF.

RESISTORS

- All resistors are in ohms.
- F : nonflammable

COILS

- MMH : mH, UH : μH

SEMICONDUCTORS

In each case, U : μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC,
UPD...: μPD...

ELECTRICAL PARTS

Ref. No.	Part No.	Description
901	*I-560-456-00	PIN, CONNECTOR 2P
902	*I-560-591-00	PIN, CONNECTOR 7P
903	*I-622-287-11	PC BOARD, JACK
904	*I-622-289-11	PC BOARD, TRANSLATION
905	*I-622-288-11	PC BOARD, DC-IN
906	I-571-044-11	SWITCH, RUBBER KEY (S801-820)
907	I-622-336-11	PC BOARD, FLEXIBLE (B)
908	A-3661-044-A	(ICF-PRO80) ...MOUNTED PCB, MICRO COMPUTER
	A-3661-045-A	(ICF-PRO70) ...MOUNTED PCB, MICRO COMPUTER
909	A-3660-680-A	MOUNTED PCB, SIGNAL
910	A-3661-043-A	MOUNTED PCB, PLL
911	*I-622-285-11	PC BOARD, POWER
912	*I-622-286-11	PC BOARD, VR
913	*I-560-466-00	PIN, CONNECTOR 3P
914	*I-560-466-00	PIN, CONNECTOR 3P
915	I-622-335-11	PC BOARD, FLEXIBLE (A)
916	*I-622-284-11	PC BOARD, KEY
918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER
ANT1	I-501-377-11	ANTENNA, TELESCOPIC
ANT2	I-402-272-11	ANTENNA, FERRITE-ROD
BPF701	I-235-763-11	(ICF-PRO80)...FILTER, BAND PASS
C1	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C2	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C5	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C6	I-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C7	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C8	I-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C9	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C10	I-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C11	I-163-125-00	CERAMIC CHIP 220PF 5% 50V
C12	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C13	I-163-113-00	CERAMIC CHIP 68PF 5% 50V
C14	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C15	I-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C16	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C17	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C18	I-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C19	I-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C20	I-163-107-00	CERAMIC CHIP 39PF 5% 50V
C21	I-163-109-00	CERAMIC CHIP 47PF 5% 50V
C22	I-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C23	I-163-013-00	CERAMIC CHIP 0.0022MF 10% 50V

ELECTRICAL PARTS

Ref. No.	Part No.	Description	10%	25V
C24	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C25	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C26	I-163-129-00	CERAMIC CHIP 330PF	5%	50V
C27	I-163-113-00	CERAMIC CHIP 68PF	5%	50V
C28	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C29	I-163-111-00	CERAMIC CHIP 56PF	5%	50V
C30	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C31	I-163-089-00	CERAMIC CHIP 6PF	0.25PF	50V
C32	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C33	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C34	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C35	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C36	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C37	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C38	I-163-085-00	CERAMIC CHIP 2PF	0.25PF	50V
C39	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C40	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C41	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C42	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C43	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V
C44	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C45	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V
C46	I-163-016-00	CERAMIC CHIP 0.0039MF	10%	50V
C47	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C48	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C49	I-124-778-00	ELECT 22MF	20%	6.3V
C50	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C51	I-163-135-00	CERAMIC CHIP 560PF	5%	50V
C52	I-126-205-00	ELECT 47MF	20%	6.3V
C53	I-163-123-00	CERAMIC CHIP 180PF	5%	50V
C54	I-124-778-00	ELECT 22MF	20%	6.3V
C55	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C56	I-163-141-00	CERAMIC CHIP 0.001MF	10%	50V
C57	I-163-141-00	CERAMIC CHIP 0.001MF	10%	50V
C58	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C59	I-163-125-00	CERAMIC CHIP 220PF	5%	50V
C60	I-163-109-00	CERAMIC CHIP 47PF	5%	50V
C61	I-163-145-00	CERAMIC CHIP 0.0015MF	10%	50V
C62	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C63	I-135-099-00	TANTAL. CHIP 2.2MF	10%	6.3V
C64	I-126-205-00	ELECT 47MF	20%	6.3V
C65	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C66	I-126-195-00	ELECT 2.2MF	20%	50V
C67	I-126-195-00	ELECT 2.2MF	20%	50V
C68	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C69	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C70	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C71	I-163-100-00	CERAMIC CHIP 20PF	5%	50V	
C72	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C73	I-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C74	I-162-611-00	CERAMIC CHIP 1MF		25V	
C75	I-135-095-00	TANTAL. CHIP 1.5MF	10%	10V	
C76	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C77	I-163-114-00	CERAMIC CHIP 75PF	5%	50V	
C78	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C79	I-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	
C80	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C81	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C82	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C83	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C84	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C85	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C86	I-163-598-91	CERAMIC CHIP 47PF	5%	50V	
C87	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C88	I-163-135-00	CERAMIC CHIP 560PF	5%	50V	
C89	I-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C90	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C91	I-126-205-00	ELECT 47MF	20%	6.3V	
C92	I-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C93	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C94	I-162-638-11	CERAMIC CHIP 1MF		16V	
C95	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C96	I-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C97	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C98	I-163-127-00	CERAMIC CHIP 270PF	5%	50V	
C99	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C100	I-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C101	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V	
C102	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C103	I-162-611-00	CERAMIC CHIP 1MF		25V	
C104	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C105	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C201	I-126-205-00	ELECT 47MF	20%	6.3V	
C202	I-126-205-00	ELECT 47MF	20%	6.3V	
C203	I-163-125-00	CERAMIC CHIP 220PF	5%	50V	
C204	I-162-611-00	CERAMIC CHIP 1MF		25V	
C205	I-163-141-00	CERAMIC CHIP 0.001MF	10%	50V	
C206	I-126-205-00	ELECT 47MF	20%	6.3V	
C207	I-163-077-11	CERAMIC CHIP 0.1MF		16V	
C208	I-126-204-11	ELECT 47MF	20%	16V	
C209	I-124-472-11	ELECT 470MF	20%	10V	
C210	I-124-444-00	ELECT 220MF	20%	10V	
C211	I-126-204-11	ELECT 47MF	20%	16V	
C212	I-163-022-00	CERAMIC CHIP 0.012MF	10%	50V	
C213	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C214	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C215	I-130-768-00	FILM 0.1MF	10%	63V	
C216	I-163-123-00	CERAMIC CHIP 180PF	5%	50V	
C217	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C218	I-163-107-00	CERAMIC CHIP 39PF	5%	50V	
C219	I-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C220	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C221	I-126-205-00	ELECT 47MF	20%	6.3V	
C222	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C223	I-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	
C224	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C225	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C226	I-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V	
C227	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C228	I-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V	
C229	I-163-103-00	CERAMIC CHIP 27PF	5%	50V	
C230	I-161-055-00	CERAMIC 0.022MF	20%	25V	
C231	I-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V	
C232	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C233	I-135-104-00	TANTAL. CHIP 10MF	10%	4V	
C234	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C235	I-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V	
C236	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C237	I-163-101-00	CERAMIC CHIP 22PF	5%	50V	
C238	I-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V	
C239	I-161-055-00	CERAMIC 0.022MF	20%	25V	
C240	I-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V	
C241	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C242	I-135-104-00	TANTAL. CHIP 10MF	10%	4V	
C243	I-126-205-00	ELECT 47MF	20%	6.3V	
C244	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C245	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C246	I-163-117-00	CERAMIC CHIP 100PF	5%	50V	
C247	I-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	
C301	I-163-033-00	CERAMIC CHIP 0.022MF	10%	25V	
C302	I-135-096-21	TANTAL. CHIP 4.7MF	10%	10V	
C303	I-162-611-00	CERAMIC CHIP 1MF		25V	
C304	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C305	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C306	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C307	I-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C308	I-162-611-00	CERAMIC CHIP 1MF		25V	
C309	I-162-611-00	CERAMIC CHIP 1MF		25V	
C310	I-126-166-11	ELECT 2200MF		5.5V	
C311	I-162-611-00	CERAMIC CHIP 1MF		25V	
C312	I-135-096-21	TANTAL. CHIP 4.7MF	10%	10V	
C313	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C314	I-163-105-00	CERAMIC CHIP 33PF	5%	50V	
C315	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C316	I-163-035-00	CERAMIC CHIP 0.047MF	10%	25V	
C501	I-130-768-00	FILM 0.1MF	10%	63V	
C502	I-126-200-00	ELECT 10MF	20%	35V	
C503	I-162-611-00	CERAMIC CHIP 1MF		25V	
C504	I-163-102-00	CERAMIC CHIP 24PF	0.25PF	50V	
C505	I-163-109-00	CERAMIC CHIP 47PF	5%	50V	
C506	I-124-778-00	ELECT 22MF	20%	6.3V	
C507	I-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	
C701	I-163-087-00	(ICF-PRO80) ...CERAMIC CHIP 4PF	0.25PF	50V	
C702	I-163-094-00	(ICF-PRO80) ...CERAMIC CHIP 11PF	5%	50V	
C703	I-163-112-00	(ICF-PRO80)			
C704	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 62PF	5%	50V	
		...CERAMIC CHIP 0.01MF	10%	50V	

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C705	I-163-091-00	(ICF-PRO80) ...CERAMIC CHIP 8PF	0.25PF	50V	
C706	I-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5%	50V	
C707	I-163-129-00	(ICF-PRO80) ...CERAMIC CHIP 330PF	5%	50V	
C708	I-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V	
C709	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V	
C710	I-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V	
C711	I-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5%	50V	
C712	I-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V	
C713	I-163-103-00	(ICF-PRO80) ...CERAMIC CHIP 27PF	5%	50V	
C714	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V	
C715	I-163-113-00	(ICF-PRO80) ...CERAMIC CHIP 68PF	5%	50V	
C716	I-135-104-00	(ICF-PRO80) ...TANTAL. CHIP 10MF	20%	4V	
C717	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V	
C718	I-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5%	50V	
C719	I-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5%	50V	
C720	I-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5%	50V	
C721	I-163-097-00	(ICF-PRO80) ...CERAMIC CHIP 15PF	5%	50V	
C722	I-163-101-00	(ICF-PRO80) ...CERAMIC CHIP 22PF	5%	50V	
C723	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V	
C724	I-163-095-00	(ICF-PRO80) ...CERAMIC CHIP 12PF	5%	50V	
C725	I-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10%	50V	
CF1	- - -	FILTER, CERAMIC			
CF2	- - -	FILTER, CERAMIC			
CF3	I-567-844-II	FILTER, CERAMIC			
CF4	- - -	FILTER, CERAMIC			
CF5	I-527-483-00	FILTER, CERAMIC			
CF6	I-567-846-II	FILTER, CERAMIC			
CF7	I-567-845-II	FILTER, CERAMIC			
CN1	* I-563-956-II	SOCKET, CONNECTOR			
CN2	I-507-954-II	JACK, EXTERNAL POWER (DC IN 6V)			
CN701	* I-563-956-2I	(ICF-PRO80)...SOCKET, CONNECTOR			
CT1	I-141-329-II	CAP, VAR, TRIMMER (CHIP)			
CT2	I-141-329-II	CAP, VAR, TRIMMER (CHIP)			
CT201	I-141-311-II	CAP, VAR, TRIMMER (CHIP)			
CT202	I-141-311-II	CAP, VAR, TRIMMER (CHIP)			
CT203	I-141-329-II	CAP, VAR, TRIMMER (CHIP)			
D1	8-719-101-23	DIODE ISS123			
D3	8-719-941-25	DIODE HSM2693			
D4	8-713-300-00	DIODE IT33			

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
D5	8-713-300-00	DIODE IT33			
D6	8-713-300-00	DIODE IT33			
D7	8-713-300-00	DIODE IT33			
D8	8-719-941-25	DIODE HSM2693			
D11	8-719-123-79	DIODE ISS279			
D12	8-719-101-23	DIODE ISS123			
D13	8-719-123-79	DIODE ISS279			
D14	8-719-123-79	DIODE ISS279			
D15	8-719-123-79	DIODE ISS279			
D16	8-719-123-79	DIODE ISS279			
D17	8-719-123-79	DIODE ISS279			
D18	8-719-123-79	DIODE ISS279			
D19	8-719-123-79	DIODE ISS279			
D20	8-719-101-05	DIODE IS2837			
D21	8-719-908-57	DIODE SYC203			
D22	8-719-100-05	DIODE IS2837			
D23	8-719-100-05	DIODE IS2837			
D24	8-719-801-48	DIODE ISS193			
D25	8-719-100-05	DIODE IS2837			
D26	8-719-938-72	DIODE SBO1-05CP			
D27	8-719-938-72	DIODE SBO1-05CP			
D28	8-719-801-48	DIODE ISS193			
D29	8-719-801-48	DIODE ISS193			
D30	8-719-100-05	DIODE IS2837			
D31	8-719-801-03	DIODE IS2835			
D32	8-719-801-48	DIODE ISS193			
D201	8-719-801-48	DIODE ISS193			
D203	8-719-100-05	DIODE IS2837			
D204	8-719-123-79	DIODE ISS279			
D205	8-713-300-00	DIODE IT33			
D206	8-713-300-00	DIODE IT33			
D207	8-719-123-79	DIODE ISS279			
D208	8-713-300-00	DIODE IT33			
D209	8-713-300-00	DIODE IT33			
D210	8-719-801-48	DIODE ISS193			
D211	8-719-801-48	DIODE ISS193			
D212	8-719-100-03	DIODE IS2835			
D301	8-719-812-33	DIODE TLG123A			
D302	8-719-100-03	DIODE IS2835			
D303	8-719-100-05	DIODE IS2837			
D304	8-719-800-67	DIODE TLR209			
D305	8-719-801-48	DIODE ISS193			
D306	8-719-940-16	DIODE GLIPR51			
D307	8-719-940-16	DIODE GLIPR51			
D308	8-719-801-48	DIODE ISS193			
D309	8-719-100-03	DIODE IS2835			
D310	8-719-801-48	DIODE ISS193			
D402	8-719-100-03	DIODE IS2835			
D403	8-719-801-48	DIODE ISS193			
D405	8-719-100-03	DIODE IS2835			
D406	8-719-100-03	DIODE IS2835			
D407	8-719-100-03	DIODE IS2835			
D408	8-719-100-03	DIODE IS2835			
D501	8-719-106-98	DIODE RD16M-B			
D502	8-719-801-48	DIODE ISS193			
D701	8-719-101-23	(ICF-PRO80)...DIODE ISS123			

ELECTRICAL PARTS

Ref. No.	Part No.	Description
D702	8-719-941-25	(ICF-PRO80)...DIODE HSM2693
D703	8-719-118-32	(ICF-PRO80)...DIODE ND487C1
D704	8-719-812-41	(ICF-PRO80)...DIODE TLR124
IC1	8-759-208-37	IC TA776IF
IC2	8-759-208-38	IC TA7758P
IC3	8-759-100-94	IC UPC358G2
IC201	8-759-801-65	IC LA4145
IC202	8-752-323-84	IC CXD1118M
IC203	8-759-801-15	IC LA5003M
IC301	8-759-140-45	IC UPD7508G-798-00
IC302	8-759-140-41	IC UPD7514G-296-12
IC303	8-759-207-82	IC TC4016B
IC701	8-759-107-67	(ICF-PRO80)...IC UPC1651G
J201	I-507-921-00	JACK (EARPHONE)
J202	I-507-921-00	JACK (TAPE)
L1	I-426-308-II	TRANSFORMER, HIGH FREQUENCY
L2	I-459-720-II	COIL (WITH CORE)
L3	I-459-721-II	COIL (WITH CORE)
L4	I-410-192-51	INDUCTOR CHIP IUH
L5	I-410-188-51	INDUCTOR CHIP 0.47UH
L6	I-410-220-31	INDUCTOR CHIP 220UH
L7	I-410-184-51	INDUCTOR CHIP 0.22UH
L8	I-410-184-51	INDUCTOR CHIP 0.22UH
L9	I-410-184-51	INDUCTOR CHIP 0.22UH
L10	I-410-193-41	INDUCTOR CHIP 1.2UH
L11	I-410-192-51	INDUCTOR CHIP IUH
L12	I-410-204-41	INDUCTOR CHIP 10UH
L13	I-410-208-41	INDUCTOR CHIP 22UH
L14	I-410-202-51	INDUCTOR CHIP 6.8UH
L15	I-404-725-II	TRANSFORMER, IF
L16	I-410-220-31	INDUCTOR CHIP 220UH
L17	I-410-204-41	INDUCTOR CHIP 10UH
L18	I-410-187-41	INDUCTOR CHIP 0.39UH
L19	I-406-232-II	COIL (OSC)
L20	I-404-728-II	TRANSFORMER, IF
L21	I-410-220-31	INDUCTOR CHIP 220UH
L22	I-410-188-51	INDUCTOR CHIP 0.47UH
L201	I-459-722-II	COIL (WITH CORE)
L202	I-459-716-II	COIL (WITH CORE)
L203	I-410-194-41	INDUCTOR CHIP 1.5UH
L204	I-459-723-II	COIL (WITH CORE)
L205	I-459-717-II	COIL (WITH CORE)
L206	I-410-197-II	INDUCTOR CHIP 2.7UH
L501	I-410-220-31	INDUCTOR CHIP 220UH
L701	I-410-806-II	(ICF-PRO80)...INDUCTOR CHIP 0.08UH
L702	I-410-802-II	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L703	I-410-797-II	(ICF-PRO80)...INDUCTOR CHIP 0.02UH
L704	I-410-732-21	(ICF-PRO80)...INDUCTOR CHIP 0.18UH
L705	I-410-802-II	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L706	I-410-805-II	(ICF-PRO80)...INDUCTOR CHIP 0.07UH
L707	I-410-192-51	(ICF-PRO80)...INDUCTOR CHIP IUH
L708	I-410-807-II	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
L709	I-410-807-II	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
L710	I-410-803-II	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L711	I-410-734-II	(ICF-PRO80)...INDUCTOR CHIP 0.27UH
L712	I-410-803-II	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L713	I-410-803-II	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
L714	I-410-802-II	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
L715	I-410-192-51	(ICF-PRO80)...INDUCTOR CHIP IUH

ELECTRICAL PARTS

Ref. No.	Part No.	Description
ND1	I-807-822-II	DISPLAY PANEL, LIQUID CRYSTAL
Q1	8-729-304-13	TRANSISTOR 2SK360D
Q2	8-729-304-13	TRANSISTOR 2SK360D
Q3	8-729-102-06	TRANSISTOR 2SC2223
Q4	8-729-116-64	TRANSISTOR 2SK508-K51
Q5	8-729-800-36	TRANSISTOR 2SD1048
Q6	8-769-401-59	TRANSISTOR 2SK613-3
Q7	8-729-116-64	TRANSISTOR 2SK508-K51
Q8	8-729-116-64	TRANSISTOR 2SK508-K51
Q9	8-729-162-44	TRANSISTOR 2SB624-BY4
Q10	8-729-901-02	TRANSISTOR DTC124XK
Q11	8-729-100-66	TRANSISTOR 2SC1623
Q12	8-729-107-45	TRANSISTOR 2SC3624A-L16
Q13	8-729-800-36	TRANSISTOR 2SD1048
Q21	8-729-801-08	TRANSISTOR 2SC2813Q4
Q22	8-729-162-44	TRANSISTOR 2SB624-BY4
Q23	8-729-901-02	TRANSISTOR DTC124XK
Q24	8-729-107-45	TRANSISTOR 2SC3624A-L16
Q26	8-729-901-02	TRANSISTOR DTC124XK
Q27	8-729-801-08	TRANSISTOR 2SC2813Q4
Q28	8-729-100-66	TRANSISTOR 2SC1623
Q29	8-729-162-44	TRANSISTOR 2SB624-BY4
Q30	8-729-162-44	TRANSISTOR 2SB624-BY4
Q31	8-729-102-06	TRANSISTOR 2SC2223
Q32	8-729-801-08	TRANSISTOR 2SC2813Q4
Q33	8-729-162-44	TRANSISTOR 2SB623-BY4
Q35	8-729-901-02	TRANSISTOR DTC124XK
Q201	8-729-159-64	TRANSISTOR 2SD596
Q202	8-729-162-44	TRANSISTOR 2SB624-BY4
Q203	8-729-162-44	TRANSISTOR 2SB624-BY4
Q204	8-729-162-44	TRANSISTOR 2SB624-BY4
Q205	8-729-162-44	TRANSISTOR 2SB624-BY4
Q206	8-729-162-44	TRANSISTOR 2SB624-BY4
Q207	8-729-162-44	TRANSISTOR 2SB624-BY4
Q208	8-729-162-44	TRANSISTOR 2SB624-BY4
Q209	8-729-100-66	TRANSISTOR 2SC1623
Q210	8-729-162-44	TRANSISTOR 2SB624-BY4
Q211	8-729-903-10	TRANSISTOR FMWI
Q212	8-729-162-44	TRANSISTOR 2SB624-BY4
Q214	8-729-162-44	TRANSISTOR 2SB624-BY4
Q215	8-729-903-10	TRANSISTOR FMWI
Q216	8-729-162-44	TRANSISTOR 2SB624-BY4
Q218	8-729-162-44	TRANSISTOR 2SB624-BY4
Q219	8-729-100-66	TRANSISTOR 2SC1623
Q220	8-729-162-44	TRANSISTOR 2SB624-BY4
Q221	8-729-159-64	TRANSISTOR 2SD596
Q222	8-729-102-06	TRANSISTOR 2SC2223
Q223	8-729-208-47	TRANSISTOR 2SK210GR
Q224	8-729-162-44	TRANSISTOR 2SB624-BY4
Q225	8-729-102-06	TRANSISTOR 2SC2223
Q226	8-729-208-47	TRANSISTOR 2SK210GR
Q227	8-729-162-44	TRANSISTOR 2SB624-BY4
Q228	8-729-109-44	TRANSISTOR 2SK94
Q229	8-729-100-66	TRANSISTOR 2SC1623
Q230	8-729-109-44	TRANSISTOR 2SK94
Q231	8-729-100-66	TRANSISTOR 2SC1623
Q232	8-729-901-02	TRANSISTOR DTC124XK
Q301	8-729-100-66	TRANSISTOR 2SC1623

ELECTRICAL PARTS

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	
Q302	8-729-100-66	TRANSISTOR 2SC1623	
Q303	8-729-100-76	TRANSISTOR 2SA812	
Q304	8-729-100-66	TRANSISTOR 2SC1623	
Q305	8-729-107-45	TRANSISTOR 2SC3624A-L16	
Q306	8-729-100-76	TRANSISTOR 2SA812	
Q501	8-729-159-64	TRANSISTOR 2SD596	
Q502	8-729-100-66	TRANSISTOR 2SC1623	
Q701	8-729-304-13	(ICF-PRO80)...TRANSISTOR 2SK360D	
Q702	8-729-102-06	(ICF-PRO80)...TRANSISTOR 2SC2223	
Q703	8-729-162-44	(ICF-PRO80)...TRANSISTOR 2SB624-BY4	
R1	I-216-081-00	METAL CHIP 22K 5% 1/10W	
R2	I-216-105-00	METAL CHIP 220K 5% 1/10W	
R3	I-216-085-00	METAL CHIP 33K 5% 1/10W	
R7	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R8	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R9	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R10	I-216-013-00	METAL CHIP 33 5% 1/10W	
R11	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R12	I-216-017-00	METAL CHIP 47 5% 1/10W	
R13	I-216-013-00	METAL CHIP 33 5% 1/10W	
R14	I-216-111-00	METAL CHIP 390K 5% 1/10W	
R15	I-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R16	I-216-043-00	METAL CHIP 560 5% 1/10W	
R17	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R18	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R19	I-216-013-00	METAL CHIP 220 5% 1/10W	
R20	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R21	I-216-025-00	METAL CHIP 100 5% 1/10W	
R22	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R23	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R24	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R25	I-216-017-00	METAL CHIP 47 5% 1/10W	
R26	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R27	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R28	I-216-017-00	METAL CHIP 47 5% 1/10W	
R29	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R30	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R31	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R32	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R33	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R34	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R35	I-216-083-00	METAL CHIP 27K 5% 1/10W	
R36	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R37	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R38	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R39	I-216-025-00	METAL CHIP 100 5% 1/10W	
R40	I-216-025-00	METAL CHIP 100 5% 1/10W	
R41	I-216-025-00	METAL CHIP 100 5% 1/10W	
R42	I-216-037-00	METAL CHIP 330 5% 1/10W	
R43	I-216-081-00	METAL CHIP 22K 5% 1/10W	
R44	I-216-017-00	METAL CHIP 47 5% 1/10W	
R45	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R46	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R47	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R48	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R49	I-216-133-00	METAL CHIP 3.3M 5% 1/10W	
R50	I-216-025-00	METAL CHIP 100 5% 1/10W	
R51	I-216-017-00	METAL CHIP 47 5% 1/10W	

ELECTRICAL PARTS

<u>Ref.No.</u>	<u>Part No.</u>	<u>Description</u>	
R52	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R53	I-216-081-00	METAL CHIP 22K 5% 1/10W	
R54	I-216-748-11	METAL CHIP 39K 5% 1/10W	
R56	I-216-103-00	METAL CHIP 180K 5% 1/10W	
R57	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R58	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R59	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R60	I-216-077-00	METAL CHIP 15K 5% 1/10W	
R61	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R62	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R63	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R64	I-216-107-00	METAL CHIP 270K 5% 1/10W	
R65	I-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R66	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R67	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R68	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R69	I-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R70	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R71	I-216-075-00	METAL CHIP 12K 5% 1/10W	
R72	I-216-121-00	METAL CHIP 1M 5% 1/10W	
R73	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R74	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R75	I-216-133-00	METAL CHIP 3.3M 5% 1/10W	
R76	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R77	I-216-105-00	METAL CHIP 220K 5% 1/10W	
R78	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R79	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R80	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R81	I-216-107-00	METAL CHIP 270K 5% 1/10W	
R82	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R83	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R84	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R85	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R86	I-216-117-00	METAL CHIP 680K 5% 1/10W	
R87	I-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R88	I-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R89	I-216-037-00	METAL CHIP 330 5% 1/10W	
R90	I-216-085-00	METAL CHIP 33K 5% 1/10W	
R91	I-216-091-00	METAL CHIP 56K 5% 1/10W	
R92	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R93	I-216-085-00	METAL CHIP 33K 5% 1/10W	
R94	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R95	I-216-097-00	METAL CHIP 100K 5% 1/10W	
R96	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R97	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R98	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R99	I-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R100	I-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R101	I-216-049-00	METAL CHIP 1K 5% 1/10W	
R102	I-216-077-00	METAL CHIP 15K 5% 1/10W	
R103	I-216-077-00	METAL CHIP 15K 5% 1/10W	
R104	I-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R105	I-216-089-00	METAL CHIP 47K 5% 1/10W	
R106	I-216-073-00	METAL CHIP 10K 5% 1/10W	
R107	I-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R108	I-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R109	I-216-049-00	METAL CHIP 1K 5% 1/10W	

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Unit	Quantity
R110	I-216-035-00	METAL CHIP	270	5%	1/10W
R111	I-216-049-00	METAL CHIP	1K	5%	1/10W
R112	I-216-089-00	METAL CHIP	47K	5%	1/10W
R113	I-216-073-00	METAL CHIP	10K	5%	1/10W
R114	I-216-089-00	METAL CHIP	47K	5%	1/10W
R115	I-216-105-00	METAL CHIP	220K	5%	1/10W
R116	I-216-037-00	METAL CHIP	330	5%	1/10W
R117	I-216-085-00	METAL CHIP	33K	5%	1/10W
R118	I-216-089-00	METAL CHIP	47K	5%	1/10W
R119	I-216-097-00	METAL CHIP	100K	5%	1/10W
R120	I-216-093-00	METAL CHIP	68K	5%	1/10W
R121	I-216-099-00	METAL CHIP	120K	5%	1/10W
R122	I-216-085-00	METAL CHIP	33K	5%	1/10W
R123	I-216-073-00	METAL CHIP	10K	5%	1/10W
R124	I-216-029-00	METAL CHIP	150	5%	1/10W
R125	I-216-037-00	METAL CHIP	330	5%	1/10W
R126	I-216-037-00	METAL CHIP	330	5%	1/10W
R127	I-216-057-00	METAL CHIP	2.2K	5%	1/10W
R201	I-216-081-00	METAL CHIP	22K	5%	1/10W
R202	I-216-073-00	METAL CHIP	10K	5%	1/10W
R203	I-216-081-00	METAL CHIP	22K	5%	1/10W
R204	I-216-081-00	METAL CHIP	22K	5%	1/10W
R205	I-216-097-00	METAL CHIP	100K	5%	1/10W
R206	I-216-089-00	METAL CHIP	47K	5%	1/10W
R207	I-216-089-00	METAL CHIP	47K	5%	1/10W
R208	I-216-097-00	METAL CHIP	100K	5%	1/10W
R209	I-216-041-00	METAL CHIP	470	5%	1/10W
R210	I-216-049-00	METAL CHIP	IK	5%	1/10W
R211	I-216-079-00	METAL CHIP	18K	5%	1/10W
R212	I-216-073-00	METAL CHIP	10K	5%	1/10W
R213	I-216-045-00	METAL CHIP	680	5%	1/10W
R214	I-216-085-00	METAL CHIP	33K	5%	1/10W
R215	I-216-021-00	METAL CHIP	68	5%	1/10W
R216	I-216-298-00	METAL CHIP	2.2	5%	1/10W
R217	I-216-081-00	METAL CHIP	22K	5%	1/10W
R218	I-216-073-00	METAL CHIP	10K	5%	1/10W
R219	I-216-073-00	METAL CHIP	10K	5%	1/10W
R220	I-216-081-00	METAL CHIP	22K	5%	1/10W
R221	I-216-081-00	METAL CHIP	22K	5%	1/10W
R222	I-216-081-00	METAL CHIP	22K	5%	1/10W
R223	I-216-081-00	METAL CHIP	22K	5%	1/10W
R224	I-216-097-00	METAL CHIP	100K	5%	1/10W
R225	I-216-073-00	METAL CHIP	10K	5%	1/10W
R226	I-216-081-00	METAL CHIP	22K	5%	1/10W
R227	I-216-081-00	METAL CHIP	22K	5%	1/10W
R228	I-216-089-00	METAL CHIP	47K	5%	1/10W
R229	I-216-091-00	METAL CHIP	56K	5%	1/10W
R230	I-216-089-00	METAL CHIP	47K	5%	1/10W
R231	I-216-073-00	METAL CHIP	10K	5%	1/10W
R232	I-216-049-00	METAL CHIP	IK	5%	1/10W
R233	I-216-097-00	METAL CHIP	100K	5%	1/10W
R234	I-216-097-00	METAL CHIP	100K	5%	1/10W
R235	I-216-061-00	METAL CHIP	3.3K	5%	1/10W
R236	I-216-081-00	METAL CHIP	22K	5%	1/10W
R237	I-216-049-00	METAL CHIP	IK	5%	1/10W
R238	I-216-061-00	METAL CHIP	3.3K	5%	1/10W
R239	I-216-073-00	METAL CHIP	10K	5%	1/10W
R240	I-216-049-00	METAL CHIP	IK	5%	1/10W

ELECTRICAL PARTS

Ref.No.	Part No.	Description	Value	Unit	Quantity
R241	I-216-113-00	METAL CHIP	470K	5%	1/10W
R242	I-216-097-00	METAL CHIP	100K	5%	1/10W
R243	I-216-097-00	METAL CHIP	100K	5%	1/10W
R244	I-216-005-00	METAL CHIP	15	5%	1/10W
R245	I-216-049-00	METAL CHIP	IK	5%	1/10W
R246	I-216-049-00	METAL CHIP	IK	5%	1/10W
R247	I-216-049-00	METAL CHIP	IK	5%	1/10W
R248	I-216-097-00	METAL CHIP	100K	5%	1/10W
R249	I-216-097-00	METAL CHIP	100K	5%	1/10W
R250	I-216-025-00	METAL CHIP	100	5%	1/10W
R251	I-216-073-00	METAL CHIP	10K	5%	1/10W
R252	I-216-031-00	METAL CHIP	180	5%	1/10W
R253	I-216-013-00	METAL CHIP	33	5%	1/10W
R254	I-216-017-00	METAL CHIP	47	5%	1/10W
R255	I-216-067-00	METAL CHIP	5.6K	5%	1/10W
R256	I-216-067-00	METAL CHIP	5.6K	5%	1/10W
R257	I-216-061-00	METAL CHIP	3.3K	5%	1/10W
R258	I-216-097-00	METAL CHIP	100K	5%	1/10W
R259	I-216-099-00	METAL CHIP	120K	5%	1/10W
R260	I-216-033-00	METAL CHIP	220	5%	1/10W
R261	I-216-073-00	METAL CHIP	10K	5%	1/10W
R262	I-216-031-00	METAL CHIP	180	5%	1/10W
R263	I-216-021-00	METAL CHIP	68	5%	1/10W
R264	I-216-017-00	METAL CHIP	47	5%	1/10W
R301	I-216-085-00	METAL CHIP	33K	5%	1/10W
R302	I-216-049-00	METAL CHIP	IK	5%	1/10W
R303	I-216-097-00	METAL CHIP	100K	5%	1/10W
R304	I-216-097-00	(ICF-PRO80)...METAL CHIP	100K	5%	1/10W
R305	I-216-049-00	METAL CHIP	IK	5%	1/10W
R306	I-216-049-00	METAL CHIP	IK	5%	1/10W
R307	I-216-049-00	METAL CHIP	IK	5%	1/10W
R308	I-216-097-00	METAL CHIP	100K	5%	1/10W
R309	I-216-097-00	METAL CHIP	100K	5%	1/10W
R310	I-216-097-00	METAL CHIP	100K	5%	1/10W
R311	I-216-049-00	(ICF-PRO80)...METAL CHIP	IK	5%	1/10W
R312	I-216-049-00	METAL CHIP	IK	5%	1/10W
R313	I-216-097-00	METAL CHIP	100K	5%	1/10W
R314	I-216-049-00	METAL CHIP	IK	5%	1/10W
R315	I-216-099-00	METAL CHIP	120K	5%	1/10W
R316	I-216-037-00	METAL CHIP	330	5%	1/10W
R317	I-216-037-00	METAL CHIP	330	5%	1/10W
R318	I-216-017-00	METAL CHIP	47	5%	1/10W
R319	I-216-049-00	METAL CHIP	IK	5%	1/10W
R320	I-216-049-00	METAL CHIP	IK	5%	1/10W
R321	I-216-073-00	METAL CHIP	10K	5%	1/10W
R322	I-216-049-00	METAL CHIP	IK	5%	1/10W
R323	I-216-049-00	METAL CHIP	IK	5%	1/10W
R324	I-216-049-00	METAL CHIP	IK	5%	1/10W
R325	I-216-049-00	METAL CHIP	IK	5%	1/10W
R326	I-216-097-00	METAL CHIP	100K	5%	1/10W
R327	I-216-097-00	METAL CHIP	100K	5%	1/10W
R328	I-216-097-00	METAL CHIP	100K	5%	1/10W
R329	I-216-097-00	METAL CHIP	100K	5%	1/10W
R330	I-216-097-00	METAL CHIP	100K	5%	1/10W
R331	I-216-049-00	METAL CHIP	IK	5%	1/10W
R332	I-216-049-00	METAL CHIP	IK	5%	1/10W
R334	I-216-049-00	METAL CHIP	IK	5%	1/10W
R335	I-216-049-00	METAL CHIP	IK	5%	1/10W

ELECTRICAL PARTS

Ref. No.	Part No.	Description	Value	Unit	QTY
R336	I-216-049-00	METAL CHIP	IK	5%	1/10W
R337	I-216-049-00	METAL CHIP	IK	5%	1/10W
R338	I-216-049-00	METAL CHIP	IK	5%	1/10W
R339	I-216-049-00	METAL CHIP	IK	5%	1/10W
R340	I-216-049-00	METAL CHIP	IK	5%	1/10W
R341	I-216-049-00	METAL CHIP	IK	5%	1/10W
R342	I-216-049-00	METAL CHIP	IK	5%	1/10W
R343	I-216-049-00	METAL CHIP	IK	5%	1/10W
R344	I-216-049-00	METAL CHIP	IK	5%	1/10W
R345	I-216-049-00	METAL CHIP	IK	5%	1/10W
R346	I-216-097-00	METAL CHIP	100K	5%	1/10W
R347	I-216-085-00	METAL CHIP	33K	5%	1/10W
R348	I-216-121-00	METAL CHIP	1M	5%	1/10W
R349	I-216-121-00	METAL CHIP	1M	5%	1/10W
R350	I-216-121-00	METAL CHIP	1M	5%	1/10W
R351	I-216-049-00	METAL CHIP	IK	5%	1/10W
R352	I-216-049-00	METAL CHIP	IK	5%	1/10W
R353	I-216-097-00	METAL CHIP	100K	5%	1/10W
R354	I-216-081-00	METAL CHIP	22K	5%	1/10W
R355	I-216-049-00	METAL CHIP	IK	5%	1/10W
R356	I-216-097-00	METAL CHIP	100K	5%	1/10W
R357	I-216-099-00	METAL CHIP	120K	5%	1/10W
R358	I-216-113-00	METAL CHIP	470K	5%	1/10W
R359	I-216-073-00	METAL CHIP	10K	5%	1/10W
R360	I-216-097-00	METAL CHIP	100K	5%	1/10W
R361	I-216-101-00	METAL CHIP	150K	5%	1/10W
R362	I-216-085-00	METAL CHIP	33K	5%	1/10W
R363	I-216-017-00	METAL CHIP	47	5%	1/10W
R364	I-216-017-00	METAL CHIP	47	5%	1/10W
R365	I-216-017-00	METAL CHIP	47	5%	1/10W
R366	I-216-097-00	METAL CHIP	100K	5%	1/10W
R367	I-216-097-00	METAL CHIP	100K	5%	1/10W
R368	I-216-025-00	METAL CHIP	100	5%	1/10W
R369	I-216-049-00	METAL CHIP	IK	5%	1/10W
R370	I-216-049-00	METAL CHIP	IK	5%	1/10W
R501	I-216-095-00	METAL CHIP	82K	5%	1/10W
R502	I-216-049-00	METAL CHIP	IK	5%	1/10W
R503	I-216-089-00	METAL CHIP	47K	5%	1/10W
R504	I-216-091-00	METAL CHIP	56K	5%	1/10W
R701	I-216-097-00	(ICF-PRO80)...METAL CHIP	100K	5%	1/10W
R702	I-216-018-00	(ICF-PRO80)...METAL CHIP	51	5%	1/10W
R703	I-216-056-00	(ICF-PRO80)...METAL CHIP	2K	5%	1/10W
R704	I-216-081-00	(ICF-PRO80)...METAL CHIP	22K	5%	1/10W
R705	I-216-029-00	(ICF-PRO80)...METAL CHIP	150	5%	1/10W
R706	I-216-081-00	(ICF-PRO80)...METAL CHIP	22K	5%	1/10W
R707	I-216-025-00	(ICF-PRO80)...METAL CHIP	100	5%	1/10W
R708	I-216-085-00	(ICF-PRO80)...METAL CHIP	33K	5%	1/10W
R709	I-216-025-00	(ICF-PRO80)...METAL CHIP	100	5%	1/10W
R710	I-216-049-00	(ICF-PRO80)...METAL CHIP	IK	5%	1/10W
R711	I-216-081-00	(ICF-PRO80)...METAL CHIP	22K	5%	1/10W
R712	I-216-049-00	(ICF-PRO80)...METAL CHIP	IK	5%	1/10W
R713	I-216-065-00	(ICF-PRO80)...METAL CHIP	4.7K	5%	1/10W

ELECTRICAL PARTS

Ref. No.	Part No.	Description
RT1	I-237-406-21	RES, ADJ, METAL GLAZE 22K
RV101	I-230-538-11	RES, VAR, CARBON (WITH SW) 50K(SQL)
RY201	J-237-670-11	RES, VAR, CARBON (WITH SW) 20K (VOLUME,TONE)
RY202	I-237-651-11	RES, VAR, CARBON (WITH SW) 100K (FINE/SSB,PAGE)
S203	I-554-957-11	SWITCH, PUSH (1 KEY)(POWER)
S301	I-554-956-11	SWITCH, LEAF (LIGHT)
S302	I-553-977-31	SWITCH, SLIDE (WM CH STEP)
S303	I-553-977-31	(ICF-PRO80)...SWITCH, SLIDE (FREQ DISPLAY)
S304	I-554-371-00	SWITCH, TACT (RESET)
S701	I-554-903-21	(ICF-PRO80)...SWITCH, SLIDE (ATTENUATOR)
S702	I-554-903-21	(ICF-PRO80)...SWITCH, SLIDE (FILTER)
SP1	I-503-374-11	SPEAKER
T1	I-459-718-11	COIL (WITH CORE)
T2	I-459-719-11	COIL (WITH CORE)
T3	I-404-729-11	TRANSFORMER, IF
T4	I-426-309-11	TRANSFORMER, HIGH FREQUENCY
T5	I-426-311-11	TRANSFORMER, HIGH FREQUENCY
T6	I-426-308-11	TRANSFORMER, HIGH FREQUENCY
T7	I-426-310-11	TRANSFORMER, HIGH FREQUENCY
T8	I-404-731-11	TRANSFORMER, IF
T9	I-404-730-11	TRANSFORMER, IF
T10	I-404-727-11	TRANSFORMER, IF
T11	I-404-648-11	TRANSFORMER, IF
T12	I-404-726-11	TRANSFORMER, IF
T501	I-406-231-11	COIL (OSC)
T701	I-426-312-11	(ICF-PRO80) ...TRANSFORMER, HIGH FREQUENCY
T702	I-406-236-11	(ICF-PRO80)...COIL (OSC)
X1	I-567-841-11	VIBRATOR, CERAMIC
X2	I-567-843-11	VIBRATOR, CRYSTAL
X201	I-567-847-11	VIBRATOR, CRYSTAL
X701	I-567-871-11	(ICF-PRO80)...VIBRATOR, CRYSTAL
XF1	I-567-842-11	FILTER, CRYSTAL
ACCESSORY & PACKING MATERIAL		
Part No.	Description	
R701	I-501-377-11	ANTENNA, TELESCOPIC
R702	I-504-059-11	MAGNETIC EARPHONE(ME-20H)
R703	I-566-456-11	ADAPTOR, PLUG (TNC-BNC)
*3-701-616-00	BAG, POLYETHYLENE	
3-890-830-00	BAG, POLYETHYLENE	
*3-701-617-00	(ICF-PRO80)...BAG, POLYETHYLENE, STANDARD	
3-887-285-06	(ICF-PRO70:Saudi Arabia)...GUIDE BOOK, RADIO WAVE	
3-893-708-01	BELT, CARRYING	
3-893-761-01	(ICF-PRO70:E,ICF-PRO80:US,Canadian,E)...SPACER	
3-893-771-01	HOLDER, TELESCOPIC ANTENNA	
3-893-802-03	(ICF-PRO70:E,AEP,ICF-PRO80)...BOOK, GUIDE, WAVE	
*3-898-203-01	(ICF-PRO70)...LABEL, SWITCH	
*3-898-204-01	(ICF-PRO80:US,Canadian)...LABEL, SWITCH	
*3-898-205-01	(ICF-PRO70)...LABEL, MODEL NUMBER (E)	
3-898-209-01	CUSHION	
3-898-240-01	CASE, CARRYING	
3-898-206-01	(ICF-PRO70)...CARTON, INDIVIDUAL	
3-898-210-01	(ICF-PRO80)...CARTON, INDIVIDUAL	
3-990-095-11	(ICF-PRO70:E,AEP,ICF-PRO80)...MANUAL, INSTRUCTION	
3-990-095-41	(ICF-PRO70:AEP)...MANUAL, INSTRUCTION	
3-990-095-51	(ICF-PRO70:Saudi Arabia)...MANUAL, INSTRUCTION	

ICF-PRO70/PRO80

SONY® SERVICE MANUAL

*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
ICF-PRO80
AEP Model
E Model
ICF-PRO70*

SUPPLEMENT-1

File this supplement with the service manual.

Subject:


1. Converter Frequency Adjustment is added.
2. Parts No. of C713 on converter main board are added.
3. French model is added in ICF-PRO80.

1. Converter Frequency Adjustment (ICF-PRO80 only)

Note: Frequency converter

FRQ-80: Except French model
FRQ-81: French model only

Procedure:


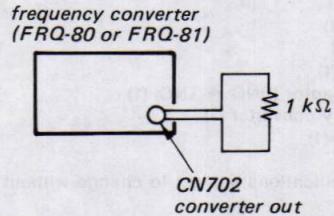


- 1) Connect a frequency counter to the point (A) (output of the OSC frequency).
- 2) Terminate between signal line to ground of CN702 by 1 kΩ. (Refer to figure.)
- 3) Apply dc 3 V from battery terminal of frequency converter.
- 4) Adjust T702 so that the frequency is as shown below. If not, change the capacity of C713 and adjust again.

Frequency converter	Adjustment frequency
FRQ-80	115 MHz ± 0.5 kHz
FRQ-81	100 MHz ± 0.5 kHz

OSC frequency	C713
high	22pF
↓	24pF
low	27pF

Adjustment Location:

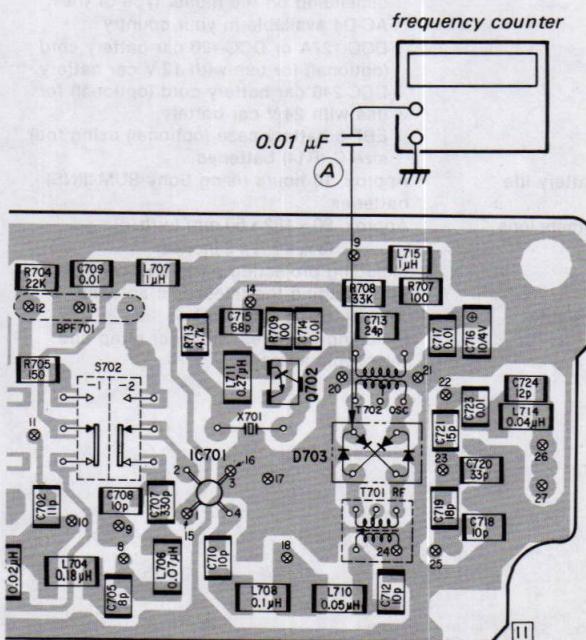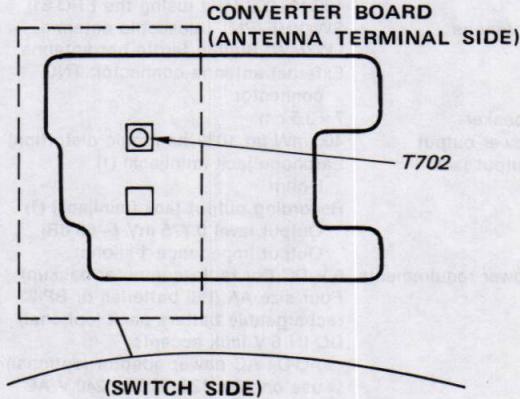

2. There are three types of capacitors as C713 in frequency converter of ICF-PRO80 because it is a capacitor for adjustment.

Ref. No.	Part No.	Description				
C713	1-163-101-00	CERAMIC CHIP	22pF	5%	50V	
C713	1-163-102-00	CERAMIC CHIP	24pF	5%	50V	
C713	1-163-103-00	CERAMIC CHIP	27pF	5%	50V	

3. French model of ICF-PRO80 is the same as AEP model of ICF-PRO80 except for the following portions.

- Model Number Label
- Frequency Converter
- Instruction Manual, Individual Carton

SPECIFICATIONS (ICF-PRO80 French model only)


Circuit system	LW/MW/SW/VHF: Dual conversion superheterodyne FM: Superheterodyne	FRQ-81 frequency converter
Frequency coverage	150 kHz - 108 MHz (without using the FRQ-81 frequency converter) 100.15 - 208 MHz (using the FRQ-81)	Shift frequency 100 MHz Attenuator 0 dB/-30 dB
Antennas	SW/VHF/FM: Telescopic antenna LW/MW: Built-in ferrite bar antenna External antenna connector: TNC connector	Power requirements 3 V DC, two size AA (R6) batteries Battery life Approx. 80 hours using Sony SUM-3(NS) batteries
Speaker	7 x 3.5 cm	Dimensions Approx. 40 x 98 x 31 mm (w/h/d) (15 $\frac{1}{8}$ x 3 $\frac{7}{8}$ x 1 $\frac{1}{4}$ inches)
Power output	400 mW (at 10% harmonic distortion)	Weight Including projecting parts and controls Approx. 120 g (4.2 oz)
Output jack	Earphone Jack (minijack) (1) 8 ohm Recording output jack (minijack) (1) Output level 0.775 mV (-60 dB) Output impedance 1 kilohm	Including batteries
Power requirements	6 V DC (for radio/computer backup) Four size AA (R6) batteries or BP-23 rechargeable battery pack (optional) DC IN 6 V jack accepts: AC-D4 AC power adaptor (optional) for use on 100, 120, 220 or 240 V AC depending on the model type of the AC-D4 available in your country DCC-127A or DCC-120 car battery cord (optional) for use with 12 V car battery DCC-240 car battery cord (optional) for use with 24 V car battery EBP-6 battery case (optional) using four size C (R14) batteries	Accessories supplied Telescopic antenna (1) Earphone (1) Shoulder strap (1) Carrying case (1) Antenna holder (1) Antenna plug adaptor (BNC ↔ TNC) (1) FRQ-81 frequency converter (1) Wave Handbook (1)
Battery life	Approx. 10 hours using Sony SUM-3(NS) batteries	Design and specifications subject to change without notice.
Dimensions	Approx. 90 x 182 x 50 mm (w/h/d) (3 $\frac{5}{8}$ x 7 $\frac{1}{4}$ x 2 inches) Including projecting parts and controls, not including the telescopic antenna	
Weight	Approx. 650 g (1 lb 7 oz) Including batteries, shoulder strap and telescopic antenna	

TO CONVERT THE FREQUENCY COVERAGE (ICF-PRO80 French model only)

The supplied FRQ-81 frequency converter shifts the frequency coverage of the receiver by 100 MHz, i.e. to 100.15–208 MHz, to allow reception of air band, PSB (Public Service Band) and TV VHF channels, etc.


INSTALLATION OF THE FREQUENCY CONVERTER

- Insert the two optional size AA (R6) batteries into the converter.

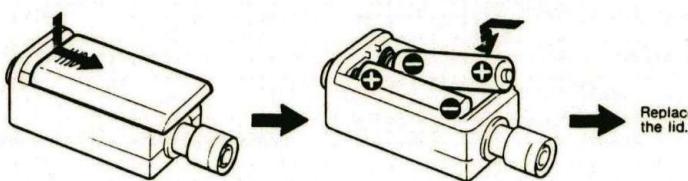

- Detach the telescopic antenna from the receiver.

- Attach the telescopic antenna to the frequency converter, and then the converter to the antenna connector.

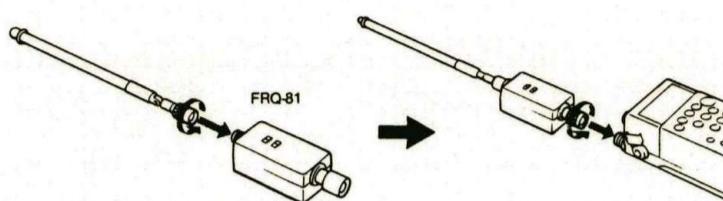

Battery life

Approximately 80 hours of converter operation can be expected with the Sony SUM-3(NS) batteries. When the POWER indicator on the converter becomes dim, replace both batteries.

Note

When the converter is not be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

TO SHIFT THE FREQUENCY DISPLAY

- Remove the battery case from the battery compartment of the receiver.

- Set FREQ.DISPLAY inside the battery compartment to SHIFT.

- Replace the battery case.

- Depress POWER. The S (shift) indicator and a frequency shifted by 100 MHz will appear in the window.

Shift indicator

100.150

- Keeping PROGRAM pressed, press DIRECT. The S indicator will blink.

PROGRAM + DIRECT

- While the S indicator is blinking, input the frequency to be shifted by the converter, 100 MHz, with the number buttons.

1 0 0 0 0 0 0

- Press EXECUTE.

EXECUTE Beep!

100.150

Now the frequencies 100.150–208.000 MHz can be displayed to match the received station frequencies.

TO CONVERT THE FREQUENCY COVERAGE

TUNING

- Depress POWER on the receiver. The converter will be turned on automatically and the POWER indicator on the converter will light.

- Set the ATTENUATOR selector on the converter to 0 dB.


ATTENUATOR
0 dB • [] • -30 dB

- Set the FILTER selector on the converter according to the frequency of the station to be tuned in.
100.15–174 MHz: for 100.15–174 MHz reception (air band, PSB, etc.)
174–208 MHz: for 174–208 MHz reception (TV channels, etc.)

FILTER
100.15–174 MHz • [] • 174–208 MHz

- Tune in the desired station with any of the tuning methods on pages 16–28. If necessary, select the appropriate detection mode. See "To select the detection mode" on page 35.

After listening, press to turn off POWER.

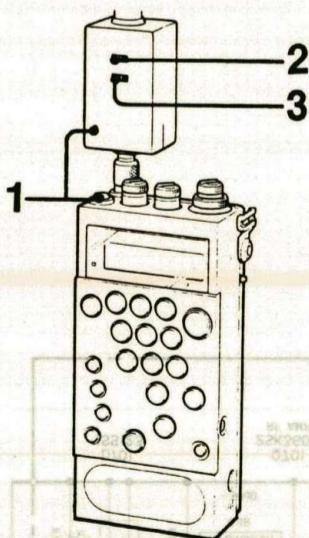

Special notes on tuning in the shifted frequency coverage

Direct tuning

With the converter installed, always input 6 digits of the frequency for direct tuning. Righthand 000 cannot be omitted.

Memory tuning and memory scan tuning

Store the stations in the 100.15–174 MHz range and those in the 174–208 MHz range on separate memory pages. If they are stored in a mixed manner on one page, memory scanning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

Program memory scan tuning


Do not program the stations in the 100.15–174 MHz range and those in the 174–208 MHz range in a mixed manner. Otherwise, program memory scan tuning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

To check the shifted frequency

Keeping FUNCTION pressed, press KEY/MEMORY PROTECT. While the buttons are pressed, the shifted frequency is displayed in the window.

To select the detection mode

The selectable detection modes in the 100.15–208 MHz range are as follows:

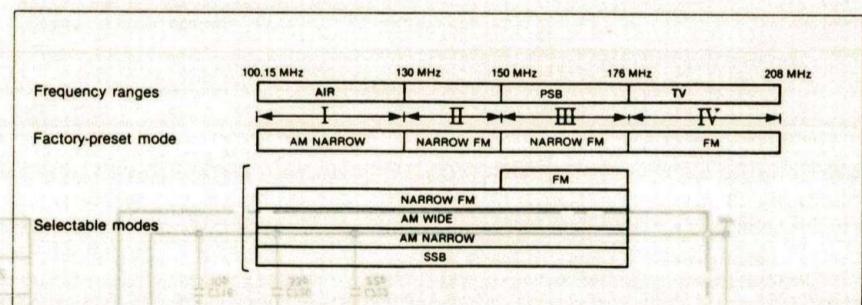

- When tuning in airband, PSB and TV stations, set to the following detection modes.

Air band (118–136 MHz) → AM NARROW
PSB (146–174 MHz) → NARROW FM
TV (174–208 MHz) → FM

- For other types of broadcasts and radio communications, set to the appropriate detection mode.

To resume the original frequency coverage of the receiver

Detach the converter from the antenna connector and replace the telescopic antenna. Set FREQ. DISPLAY inside the battery compartment to NORMAL.

Notice

When using the supplied converter, reception of the signals around 200 MHz may be difficult because of internal spurious signals generated by the built-in oscillators.

For improved reception

If the received sound is distorted or noisy due to interference from an adjacent station, set ATTENUATOR on the converter to -30 dB.


Tuning intervals in the 100.15–208 MHz range

Frequency coverage	Interval
100.150–100.528 MHz	3 kHz
100.531–101.602 MHz	9 kHz*
101.605–149.995 MHz	5 kHz
150.000–175.995 MHz	5 kHz**
176–208 MHz	50 kHz

* The tuning interval can be changed to 10 kHz. See page 14.

** When the detection mode is FM, the interval of this range will be 50 kHz.



different portion
The circuit diagram shown below is different from that of the AEP model.

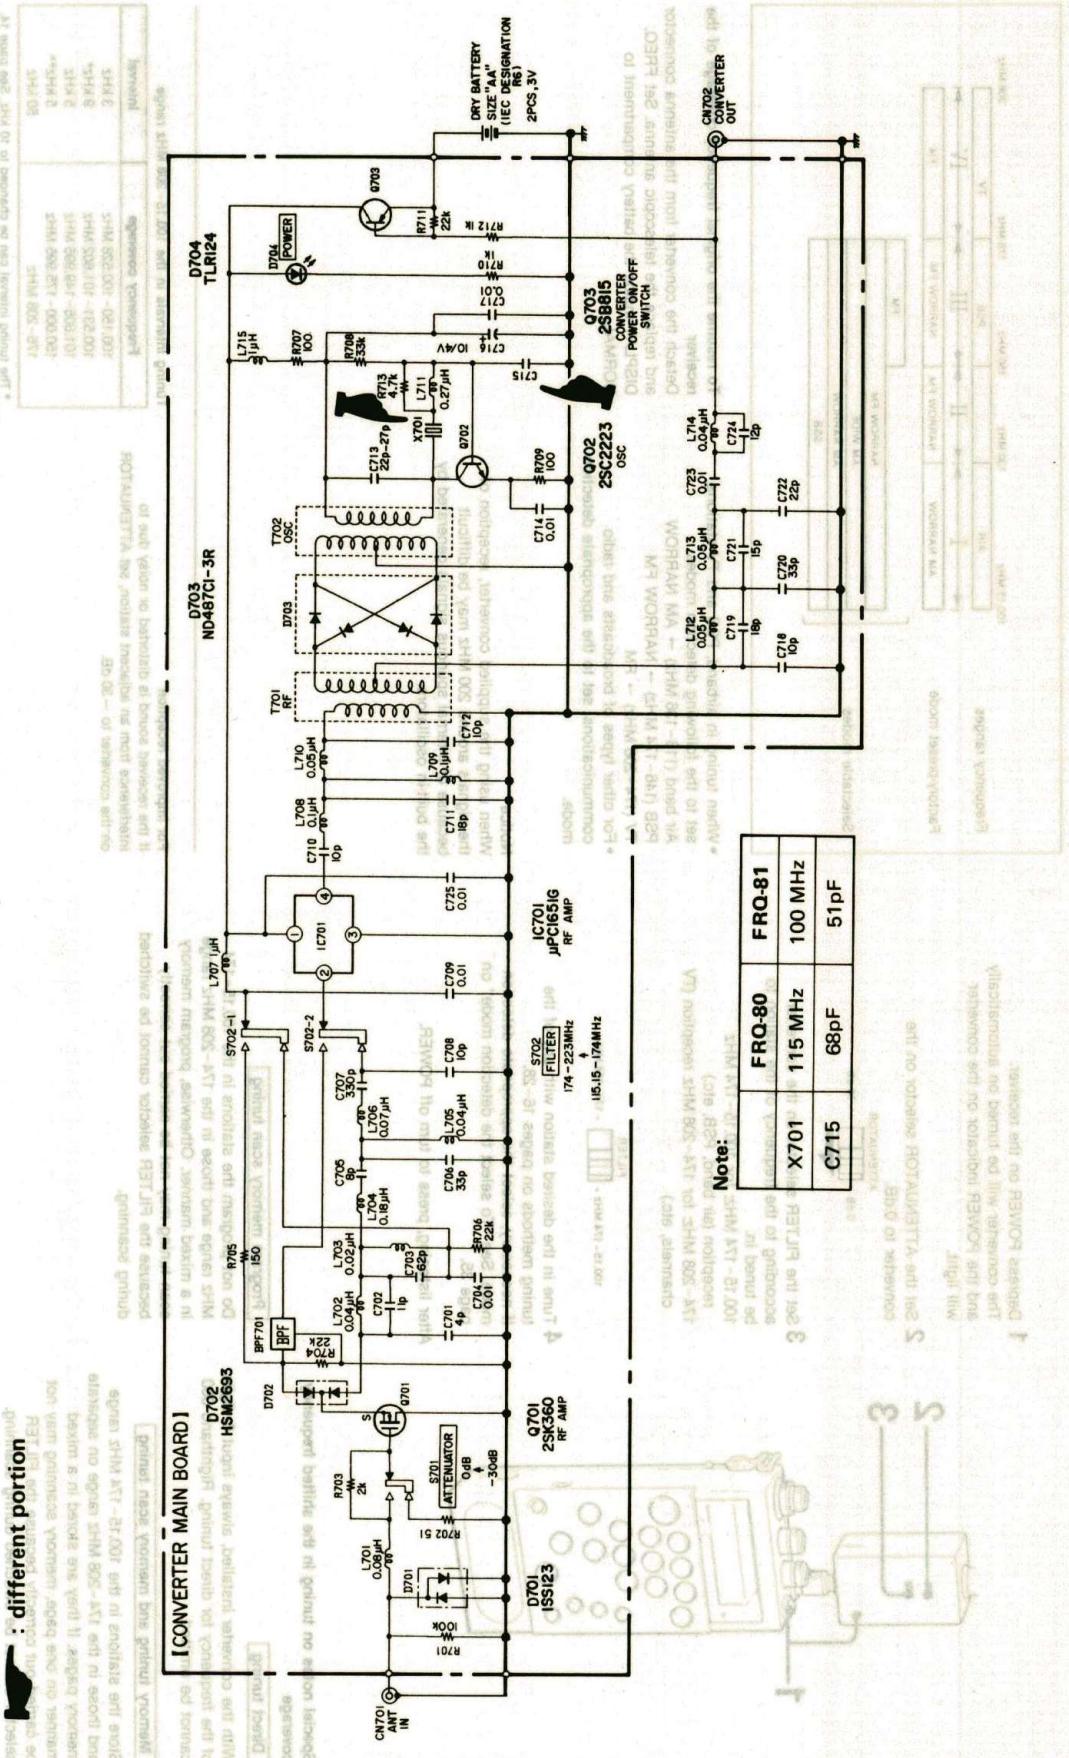

- Only the following parts are different from that of AEP model.

AEP model			
Page	No.	Part No.	Description
33	35	*3-898-202-01	LABEL, MODEL NUMBER (U)
35	101	3-898-234-01	LID, BATTERY CASE
35	109	3-898-241-01	COVER (A)
35, 36	918	A-3665-026-A	MOUNDED PCB, CONVERTER
38	C715	1-163-113-00	CERAMIC CHIP 68pF 5% 50V
43	X701	1-567-871-11	VIBRATOR, CRYSTAL (115MHz)
43		3-898-210-01	CARTON, INDIVIDUAL
43		3-990-095-11	MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)
43		3-990-095-41	MANUAL, INSTRUCTION (GERMAN/DUTCH/SWEDISH)

French model			
Part No.	Part No.	Description	Description
*3-897-860-01	3-898-234-21	LABEL, MODEL NUMBER (AE)	LABEL, MODEL NUMBER (AE)
3-898-241-21	3-898-241-21	COVER (A)	COVER (A)
A-3665-031-A	A-3665-031-A	MOUNDED PCB CONVERTER	MOUNDED PCB CONVERTER
1-163-110-00	1-577-211-11	CERAMIC CHIP 51pF 5% 50V	CERAMIC CHIP 51pF 5% 50V
1-577-211-11		VIBRATOR, CRYSTAL (100MHz)	VIBRATOR, CRYSTAL (100MHz)
*3-893-786-01	3-786-591-11	CARTON, INDIVIDUAL	CARTON, INDIVIDUAL
3-786-591-11		MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)	MANUAL, INSTRUCTION (ENGLISH/FRENCH/SPANISH)

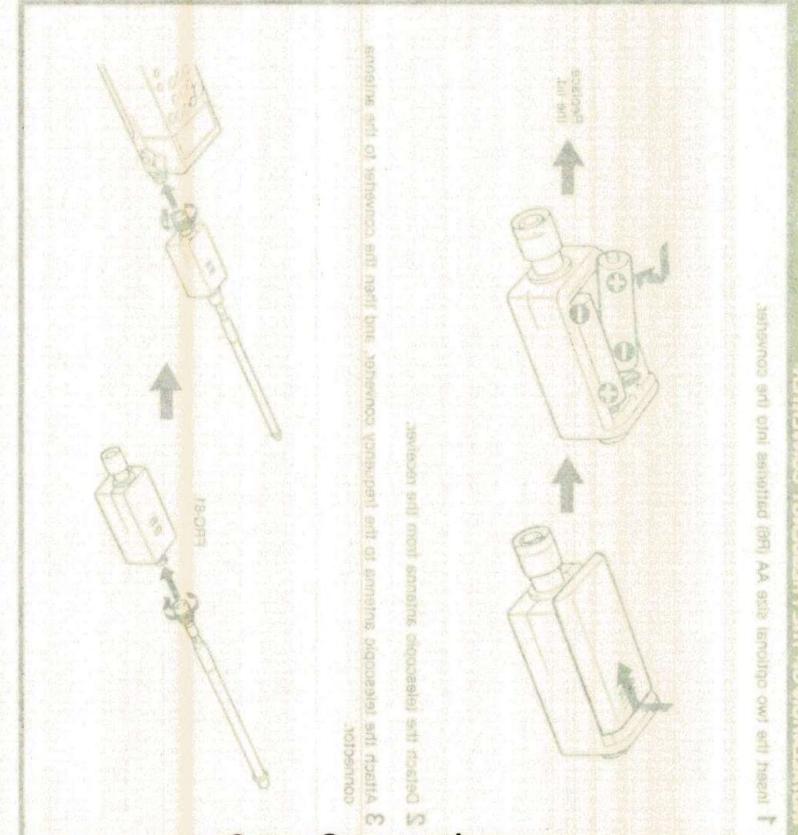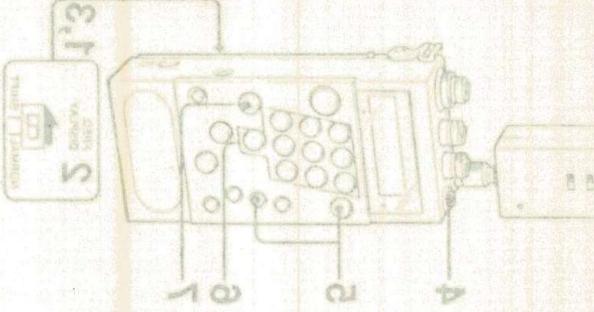

Sony Corporation
Audio Group

ICF-PRO70/PRO80

CORRECTION

Page 22

INCORRECT

μ PD7508G-779-00



μ PD7514G-145-12



CORRECT

μ PD7508G-798-00
 μ PD7508G-E64-00

μ PD7514G-296-12
 μ PD7514G-423-12

Page 39

INCORRECT

IC301 8-759-140-45 (EXCEPT West Germany) ... IC UPD7508G-778-00

IC302 8-759-140-41 (EXCEPT West Germany) ... IC UPD7514G-12



CORRECT

IC301 8-759-140-45 (EXCEPT West Germany) ... IC UPD7508G-798-00

IC302 8-759-140-41 (EXCEPT West Germany) ... IC UPD7514G-296-12

ICF-PRO70/PRO80

SONY SERVICE MANUAL

*US Model**Canadian Model**AEP Model**UK Model**E Model**Australian Model**ICF-PRO80**AEP Model**E Model**ICF-PRO70*

SUPPLEMENT-2

File this supplement with the Service Manual.

Subject : Frequency converter supplied with
 ICF-PRO80 has been supplied for
 assembly.

Destination	Part No.	description
Except French model	A-3614-013-A	Frequency Converter Ass'y (FRQ-80)
French model	A-3614-016-A	Frequency Converter Ass'y (FRQ-81)

ICF-PRO70/PRO80

SERVICE MANUAL REVISED



US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
ICF-PRO80
AEP Model
E Model
ICF-PRO70

Photo: ICF-PRO70

SPECIFICATIONS

Circuit system	LW/MW/SW/VHF: Dual conversion superheterodyne . . . (ICF-PRO70 Type 1 and ICF-PRO80) LW/MW/SW: Dual conversion superheterodyne . . . (ICF-PRO70 Type 2-4) FM: Superheterodyne	DCC-127A or DCC-120 car battery cord (optional) for use with 12 V car battery DCC-240 car battery cord (optional) for use with 24 V car battery EBP-6 battery case (optional) using four size C (R14) batteries
Frequency coverage ICF-PRO70	Type 1: 150 kHz–108 MHz Type 2: 150–29,995 kHz and 87.6–108 MHz Type 3: 150–26,100 kHz and 87.5–108 MHz Type 4: 150–285 kHz, 531–26,100 kHz and 87.6–108 MHz	Battery life Approx. 10 hours using Sony SUM-3(NS) batteries
	ICF-PRO80 150 kHz–108 MHz (without using the FRQ-80 frequency converter) 115.15–223 MHz (using the FRQ-80)	Dimensions Approx. 90 × 182 × 50 mm (w/h/d) (3 ⁵ / ₈ × 7 ¹ / ₄ × 2 inches) including projecting parts and controls, not including the telescopic antenna
Antennas	SW/VHF/FM: Telescopic antenna . . . (ICF-PRO70 Type 1 and ICF-PRO80) SW/FM: Telescopic antenna . . . (ICF-PRO70 Type 2-4) LW/MW: Built-in ferrite bar antenna External antenna connector: TNC connector . . . (except West Germany model)	Weight Approx. 650 g (1 lb 7 oz) including batteries, shoulder strap and telescopic antenna
Speaker	7 × 3.5 cm	
Power output	400 mW (at 10% harmonic distortion)	
Output jack	Earphone jack (minijack) (1) 8 ohm Recording output jack (minijack) (1) Output level 0.775 mV (-60 dB) Output impedance 1 kilohm	FRQ-80 frequency converter (supplied with the ICF-PRO80 only) Shift frequency 115 MHz Attenuator 0 dB/-30 dB Power requirements 3 V DC, two size AA (R6) batteries Battery life Approx. 80 hours using Sony SUM-3(NS) batteries
Power requirements	6 V DC (for radio/computer backup) Four size AA (R6) batteries or BP-23 rechargeable battery pack (optional) DC IN 6 V jack accepts: AC-D4 AC power adaptor (optional) for use on 100, 120, 220 or 240 V AC depending on the model type of the AC-D4 available in your country	Dimensions Approx. 40 × 98 × 31 mm (w/h/d) (1 ⁵ / ₈ × 3 ⁷ / ₈ × 1 ¹ / ₄ inches) including projecting parts and controls Weight Approx. 120 g (4.2 oz) including batteries
		Accessories supplied Telescopic antenna (1) Earphone (1) Shoulder strap (1) Carrying case (1) Antenna holder (1) Antenna plug adaptor (BNC ↔ TNC) (1) . . . (except West Germany model) FRQ-80 frequency converter (ICF-PRO80 only) (1) Wave Handbook (1)

PLL SYNTHESIZED RECEIVER
SONY®



FEATURES**WORLD-WIDE FREQUENCY COVERAGE****No band selector is provided.**

The entire frequency range is tuned in consecutively. The detection mode is set automatically according to the frequency range to which the tuned frequency belongs.

Selectable detection modes

(Except ICF-PRO70 West Germany and Saudi Arabia model)

The entire frequency coverage is divided into 2 to 4 ranges depending on the model type, and the detection modes, FM, NARROW FM, AM WIDE, AM NARROW and SSB* can be selected for each range.

* SSB = Single Side Band

**Frequency converter supplied for wider coverage
(ICF-PRO80 only)**

By attaching the supplied FRQ-80 frequency converter, 115.15–223 MHz can also be received.

VERSATILE TUNING MODES

Direct tuning (Page 6) by inputting a frequency to be tuned in	• When you know the frequency of the station
Memory tuning (Page 7) by simply pressing one button to tune in the stored station	• For daily listening to your favorite station
Manual tuning (Page 8) by scanning frequencies step by step at a determined interval	• When you do not know the frequency of the station • To tune in precisely a station located by scan tuning or limited scan tuning precisely
Scan tuning (Page 9) by automatically scanning the entire frequency coverage	• When you do not know the frequency of the station
Limited scan tuning (Page 10) by automatically scanning the frequency coverage you have defined	• When you know the frequency range in which the desired station is located (e.g. FM or MW radio broadcasting range, an SW meter band).
Memory scan tuning (Page 10) by automatically scanning the stored (up to 10) stations	• To choose a station from among those stored in a certain memory page
Program memory scan tuning (Page 11) by automatically scanning only the stations you have programmed among all stored in memory (up to 40 stations) in the order programmed	• To choose a station from among those having the specified conditions (e.g. FM broadcasting stations)
Priority tuning (Page 12) by tuning in the specified station every 3 seconds	• To catch a radio communication when you are not sure when it will take place.

CONVENIENT FUNCTIONS

Memory of up to 40 stations (Page 7)	Up to 40 stations can be stored on 4 memory pages (10 stations for each page) and tuned in instantly.
Three scan modes selectable (Page 9)	Scanning can be stopped at the first-located station, or be resumed after each station located has been received for several seconds or until the signal of the station stops.
Memory search (Page 7)	The frequencies of the stations stored on one page are displayed in sequence while your desired station is kept tuned in.
Program memory search (Page 11)	The frequencies of the stations programmed are displayed in sequence while your desired station is kept tuned in.
Memory protection (Page 7)	The memory of one page (10 stations stored) is locked so that it cannot be changed inadvertently.
Key protection (Page 8)	The buttons on the front panel are locked so that they cannot be operated by accident.
Squelch control (Page 9)	The receivable signal level can be adjusted so that scanning stops at stations with stronger signals only and noise is suppressed while tuning and while no station signal is present.
Fine tuning (Page 13)	AM (LW, MW and SW) and SSB stations can be tuned in precisely.

TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>
Specifications	1	
Features	2	
1. GENERAL		
Notes on Model Types and Receivable Frequencies	3	
To Change the MW Tuning Interval	3	
To Erase All Memory	3	
Location and Function of Controls	4	
Direct Tuning	6	
Memory Tuning	7	
Manual Tuning	8	
Scan Tuning	9	
Limited Scan Tuning	10	
Memory Scan Tuning	10	
Program Memory Scan Tuning	11	
Priority Tuning	12	
To Select the Detection Mode	12	
Fine Tuning	13	
To Convert the Frequency Coverage (ICF-PRO80 only)	14	
2. ELECTRICAL ADJUSTMENTS		
Reference-Frequency Oscillator (7.2 MHz) Adjustment	16	
VCO1 PD-Voltage Adjustment	17	
FM-L Tracking Adjustment	17	
VCO2 PD-Voltage Adjustment	18	
FM-H Tracking Adjustment	18	
FM IF Adjustment	19	
Second Local Oscillator Adjustment	19	
AM 1st and 2nd IF Adjustment	20	
NARROW-FM Detector Adjustment	20	
AM AGC Adjustment	21	
3. DIAGRAMS		
IC Block Diagrams	21	
Semiconductor Lead Layouts	22	
3-1. Signal, PLL Section		
Printed Wiring Boards	23	
3-2. Schematic Diagram		
3-3. Converter Board Schematic Diagram	30	
3-4. Control Section Printed Wiring Boards	30	
4. EXPLODED VIEWS		
5. ELECTRICAL PARTS LIST		
		36

NOTES ON MODEL TYPES AND RECEIVABLE FREQUENCIES

The ICF-PRO70/PRO80 is available in various models which differ mainly in their frequency coverage to match the regulations of different countries.

Model type	Frequency coverage			
ICF-PRO70				
Type 1 (Swiss, E (except Saudi Arabia) model)	150 kHz 108 MHz LW/MW/SW/VHF/FM			
Type 2 (AEP (except Swiss and West Germany) model)	150 kHz	29,995 kHz	87.6 MHz	108 MHz
	LW/MW/SW		FM	
Type 3 (West Germany model)	150 kHz 108 MHz 26,100 kHz 87.5 MHz LW/MW/SW FM			
Type 4 (Saudi Arabia model)	150 kHz	285 kHz	531 kHz	26,100 kHz 87.6 MHz 108 MHz
	LW	MW/SW		FM
ICF-PRO80				
Without using the supplied frequency converter	150 kHz 108 MHz LW/MW/SW/VHF/FM			
Using the converter	115.15 MHz 223 MHz AIR/PSB/TV (VHF)			

Although the models differ in some minor parts in relation to the difference in frequency coverage, the operating procedures of all the units are identical. The differences are clearly described in the text as required.

The photos and illustrations used in this manual represent a typical model.


TO CHANGE THE MW TUNING INTERVAL

The MW tuning interval is factory preset to 9 kHz or 10 kHz to match the local frequency allocation system.*

If you use the receiver in an area where the frequency allocation system is based on the other interval, change the position of the MW CH STEP selector in the battery compartment as follows.

1 Remove the battery case.


2 Switch the MW CH STEP selector.

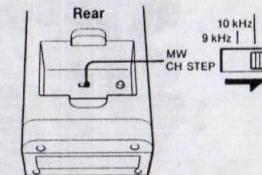

3 Replace the battery case and close the lid.

TO ERASE ALL MEMORY

The stations, program, scan mode, etc. stored in the memory are retained even if the power is once turned off or the batteries are replaced (within 3 minutes). To erase all the memory to initialize the unit, press the RESET button in the battery compartment.

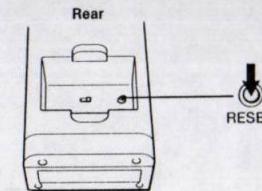


SECTION 1 GENERAL


LOCATION AND FUNCTION OF CONTROLS

For details on the use of each control, refer to the pages indicated in the black circles.

A

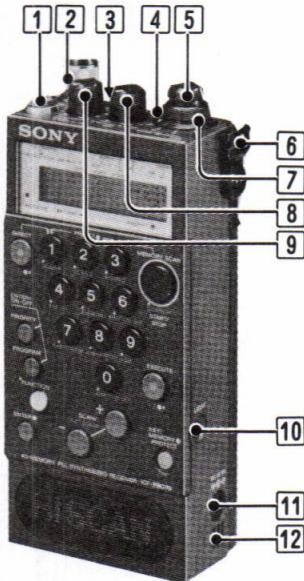

B

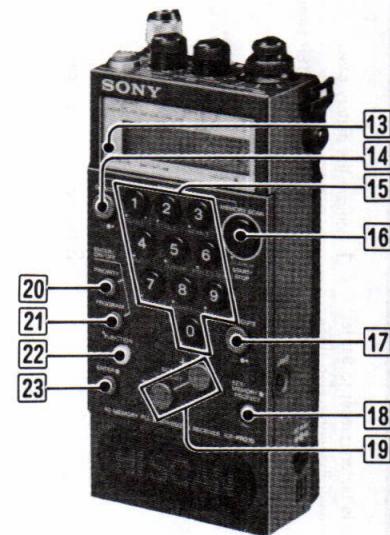

Front (Photos **A** and **B**)

1 POWER switch

2 Antenna connector

3 **②** (earphone) jack (minijack)

Connect an earphone or an external speaker.

4 **③** (recording output) jack (minijack)

5 FINE/SSB control **13**

Used for AM and SSB fine tuning.

FINE: When AM WIDE or AM NARROW detection mode is selected, press **FUNCTION** + **⑥** so that the "FINE" indicator appears and fine tune with this control.

SSB: When SSB detection mode is selected, fine tune with this control.*

* SSB mode is not provided with the ICF-PRO70 type 4 model.

6 Loop for shoulder strap

7 PAGE selector **7**

Select memory page, 1 to 4.

8 SQL (squelch) control **9**

Adjust the squelch level.

▲ AUTO (depressed): The signal (and noise) with a lower level than the factory-preset level is cut.

□ MANUAL (released): Adjust manually the level of the signal you want to receive.

9 VOLUME/TONE control

Functions as a volume control and a tone control.

VOLUME: Turn to adjust the volume.

TONE: Depress (△ LOW) to emphasize bass, and press to release (□ HIGH) to emphasize treble.

The volume can be adjusted in either the depressed or released position.

10 LIGHT button

Press to illuminate the display window for approximately 10 seconds. If any button on the front panel is pressed, the illumination will remain for 10 seconds more.

11 DC IN 6 V (external power input) jack

Connect the optional AC power adaptor or car battery cord.

12 Battery case (rear)

13 RECEIVE Indicator

Lights red when a signal or noise is received.

14 DIRECT button **6**

Press to start direct tuning.

This button is also used in combination with **FUNCTION** or **ENTER**.

15 Number buttons

Press to recall the stored station (memory tuning). **7**

Press to input the frequency of a station for direct tuning. **6**

These buttons are also used in combination with **FUNCTION**, **ENTER**, **PROGRAM** or **PRIORITY**.

16 MEMORY SCAN button **10** **11**

Press to start memory scan tuning (with **PROGRAM OFF**) and program memory scan tuning (with **PROGRAM ON**). This button is also used in combination with **FUNCTION**.

17 EXECUTE button **6**

Press this button to tune in the frequency for direct tuning. This button is also used in combination with **FUNCTION** or **ENTER**.

18 KEY/MEMORY PROTECT button **8**

Press to activate the key protection function (i.e. the △ indicator appears). The buttons on the front panel are locked and no longer function. Press again to deactivate the key protection function.

This button is also used in combination with **ENTER**.

19 SCAN +/- buttons

Used for manual tuning. **8**

This button is also used to start scan tuning and limited scan tuning. **9** **10**

20 PRIORITY button **12**

Press to activate priority tuning (i.e. **PRIORITY** indicator appears). Press again to deactivate it.

21 PROGRAM button **11**

Press to activate program memory scan tuning and program memory search (i.e. **PROGRAM** indicator appears). Press again to deactivate it.

22 FUNCTION button

When a button with a yellow dot is pressed with this button, the function of the button changes to that indicated on the panel together with the yellow dot.

Buttons to be pressed	Function
+ ① (SCAN 1) FUNCTION + ② (SCAN 2) + ③ (SCAN 3)	To select the scan mode for scan, limited scan, memory scan and program memory scan tuning. 9
+ ④ (FM) + ⑤ (AM WIDE) + ⑦ (NARROW FM)* + ⑧ (AM NARROW) + ⑨ (SSB)**	To select the detection mode. 12 13
FUNCTION + ⑥ (FINE ON/OFF)	Press to activate AM fine tuning (i.e. FINE indicator appears). Press again to deactivate it. 13
FUNCTION + ⑩ (LIMIT ON/OFF)	Press to activate limited scan tuning (i.e. the LIMIT scan indicator appears). Press again to deactivate it. 10
FUNCTION + ⑪ (DIRECT L1) + ⑫ (EXECUTE L2)	To display the preset limit frequency. 10
FUNCTION + MEMORY SCAN (SEARCH)	To activate the memory search function (with PROGRAM OFF) or program memory search function (with PROGRAM ON). 7 11

* NARROW FM is not provided with the ICF-PRO70 type 3 and type 4 models.


** SSB is not provided with the ICF-PRO70 type 4 model.

Note: For power switch (West Germany model only)

There are two power switches in West Germany model.

1. POWER switch (S203)
2. Switch in antenna connector (S102)

Therefore, power is supplied by installing a telescopic antenna in the antenna connector (S102 turns ON) and turning the POWER switch on.

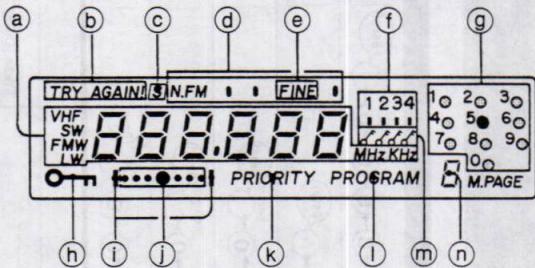C**Display window (illustration C)**

- a Frequency being received
- b TRY AGAIN indicator
- c S (frequency shift) indicator (ICF-PRO80 only)
- d Detection mode indicator
- e FINE (fine tuning) indicator
- f PAGE selector setting indicator
- g Memory station indicator
- h Key protection indicator
- i Limited scan indicator
- j Scan mode indicator
- k PRIORITY indicator
- l PROGRAM indicator
- m Memory protection indicator
- n Memory page indicator

③ ENTER button

When a button with a white dot is pressed with this button, the function of the button changes to that indicated on the panel in white.


Buttons to be pressed	Function
[ENTER] + ① - ② (PRESET)	To store the station being tuned in on the number buttons ⑦
[ENTER] + [DIRECT] (L1) + [EXECUTE] (L2)	To store the limit frequency. ⑪
[ENTER] + [KEY/MEMORY PROTECT] (MEMORY PROTECT)	Press to activate the memory protection function (i.e. ④ indicator appears below the PAGE selector setting indicator). Press again to deactivate it. ⑦

Abbreviations and symbols used in this manual

DIRECT		□ and ○ represent a button.
FUNCTION	+	+ indicates that the latter button is pressed while the former button is kept pressed.
DIRECT	→	→ indicates that the latter button is pressed after the former button.
		Indicates that operation is accepted.
		Indicates that operation is rejected.

DIRECT TUNING

If you know the frequency of a station to be received, you can tune in the station easily by inputting its frequency.

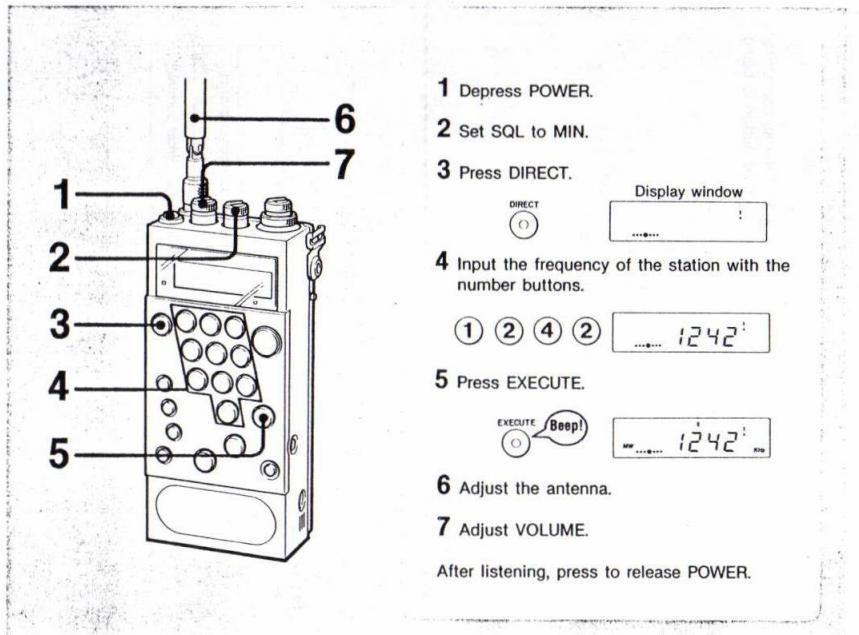

When reception is unsatisfactory
• See page 12.


Notes

- After pressing a button, press the next button within 5 seconds. If you do not, the previous station will return.

TO INPUT A FREQUENCY

Normally, input the frequency in kHz.

88.5 MHz
(= 88,500 kHz)

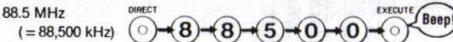

FM 88.500 kHz

2,000 kHz



FM 2000 kHz

20,000 kHz



FM 20000 kHz

90 MHz



FM 90.000 kHz

108 MHz



FM 108.000 kHz

When you input a wrong frequency

When a honk sounds

0 is pressed first or more than 6 digits are input.

Press [DIRECT] and input the correct frequency.
([TRY AGAIN!] will disappear after about 5 seconds and the previous station will return.)

When [TRY AGAIN!] indication blinks

A frequency beyond the receivable frequency coverage has been input.*

* For the receivable frequency coverage of each model, see page 3.

- With direct tuning, the frequency is displayed in steps of the following intervals.

Frequency coverage	Interval
150 - 528 kHz	3 kHz
531 - 1,602 kHz	9 kHz*
1,605 - 45,995 kHz	5 kHz
50 - 75,995 MHz	5 kHz**
76 - 108 MHz	50 kHz

If you input a frequency between intervals, the frequency at the interval just below will be tuned in and displayed. For example, if you input 92.540 MHz, 92.500 MHz will be tuned in and displayed.

* The MW tuning interval can be changed to 10 kHz. See page 3.


** When the detection mode is FM, the interval of this range will be 50 kHz.

MEMORY TUNING

Up to 40 stations can be stored on 1 to 4 memory pages (10 stations on each page) and tuned in by pressing a button.

The frequency and the detection mode of each station can be stored.

TO STORE A STATION

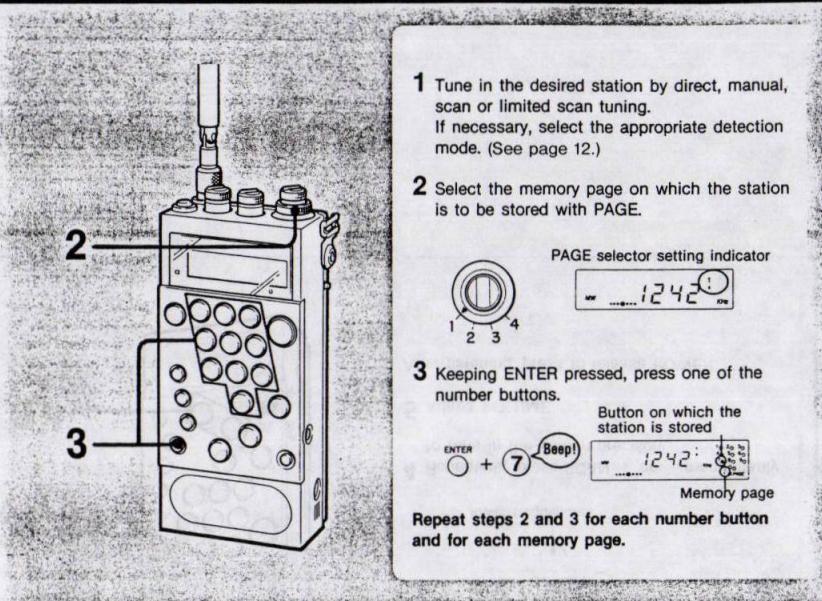


MEMORY TUNING

- 1 Depress POWER.
- 2 Set SQL to MIN.
- 3 Set PAGE to the memory page on which the desired station is stored.
- 4 Press the number button.

MEMORY SEARCH—To display the data of stored stations successively

You can check the stations stored on one memory page while you are listening to your desired program.

- 1 Select the memory page with PAGE.
- 2 Keeping FUNCTION pressed, repeatedly press MEMORY SCAN momentarily or press it for more than 0.5 second and release.

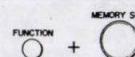

The data of the stored stations will be displayed in the sequence
①→②→...→⑩→①→...


- 3 Release FUNCTION to return the display to the station being received.

MEMORY PROTECTION—To prevent accidental erasing of the memory

Using this function, new stations cannot be committed to memory on one memory page.

To activate the memory protection function

- 1 Select the memory page with PAGE.
- 2 Keeping ENTER pressed, press KEY/MEMORY PROTECT.

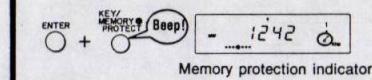

When the memory protection indicator is displayed, a new station cannot be committed to memory on that page. When ENTER and a number button are pressed, a honk sounds.


To deactivate the memory protection function, select the memory page and press ENTER + KEY/MEMORY PROTECT so that the δ indicator disappears.

Note

The memory protection function remains activated after the power is once turned off.

MANUAL TUNING

Use manual tuning when you do not know the frequency of the station you want to tune in, or when you want to tune in a station more precisely after scan tuning or limited scan tuning.

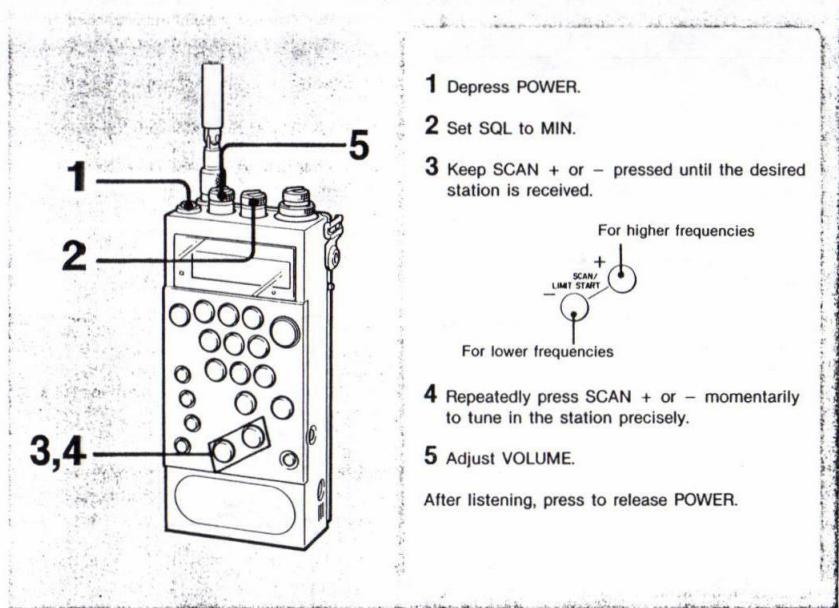

During manual tuning, the frequency is increased or decreased by the intervals shown in direct tuning (page 6). A beep will sound when the interval is changed with SCAN +/- kept depressed.

While SCAN +/- is kept depressed, the frequency changes continuously even if a station is tuned in.

KEY PROTECTION—To avoid accidental operation of the buttons

With the key protection function engaged, the buttons on the front panel will not operate even if they are pressed inadvertently. This is convenient when you carry the set.

To activate the key protection function
 Press KEY/MEMORY PROTECT.




To deactivate the key protection function
 Press KEY/MEMORY PROTECT so that
 o-- indicator disappears.

Note

The key protection function will be deactivated when the PAGE selector is turned or the power is disconnected.

SCAN TUNING

The stations in the entire receivable frequency coverage can be scanned. Scanning stops automatically when a station is received.

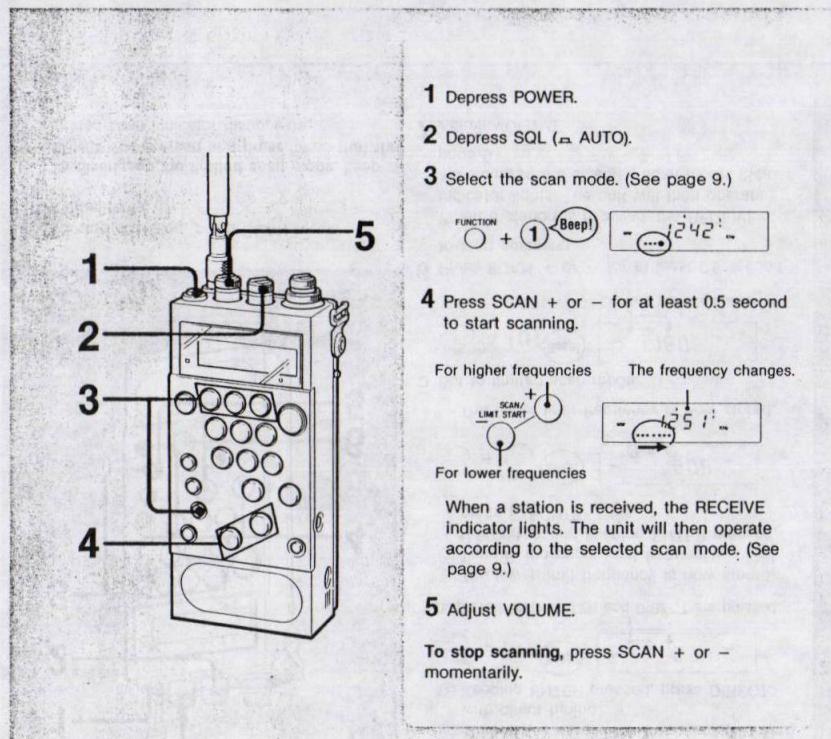

If scanning stops a little before or after a station
Tune in the frequency precisely by manual tuning.

If scanning will not start or will not stop at all
Adjust SQL. See page 9.

If an unintended frequency range is scanned
If the **L** (limited scan) indicator is displayed, limited scan tuning is activated (page 10). Press FUNCTION + (①) so that the limited scan indicator disappears.

During scan tuning, the frequency is increased or decreased by the intervals shown in direct tuning (page 6). A beep will sound when the interval is changed with SCAN +/- kept depressed.

TO SELECT THE SCAN MODE

There are three scan modes for scan, limited scan, memory scan and program memory scan tuning which differ in the operation of the unit after the first station is located. Select the desired scan mode.

Scan mode	When the first station is located	How to set	Scan mode indicator
SCAN 1	Scanning stops and the first station is received continuously.	FUNCTION + (1)	••••
SCAN 2	The station is received for 2 seconds and scanning is resumed.	FUNCTION + (2)	••••• (during reception)
SCAN 3	The station is received until the station signal stops and then scanning is resumed.	FUNCTION + (3)	••• (during reception)

HOW TO USE THE SQUELCH CONTROL


The SQL control adjusts the level of the signal (and noise) so that the signal (and noise) below the adjusted level is suppressed. A station with a lower level signal will not be heard when selected by direct or memory tuning, or scanning will not stop at such a station.

Adjustment and function of the SQL control		When to use
SQL	AUTO	Signal below the factory-preset level will be suppressed.
MIN	MANUAL	Turn towards MIN to receive even weaker signal.
MAX	MANUAL	Turn towards MAX to receive stronger signals only.

Note
Turn SQL little by little by observing the RECEIVE indicator. Be careful not to turn it too much.

LIMITED SCAN TUNING

The stations in the desired frequency range can be scanned by defining the upper limit and lower limit frequencies of the scanning.

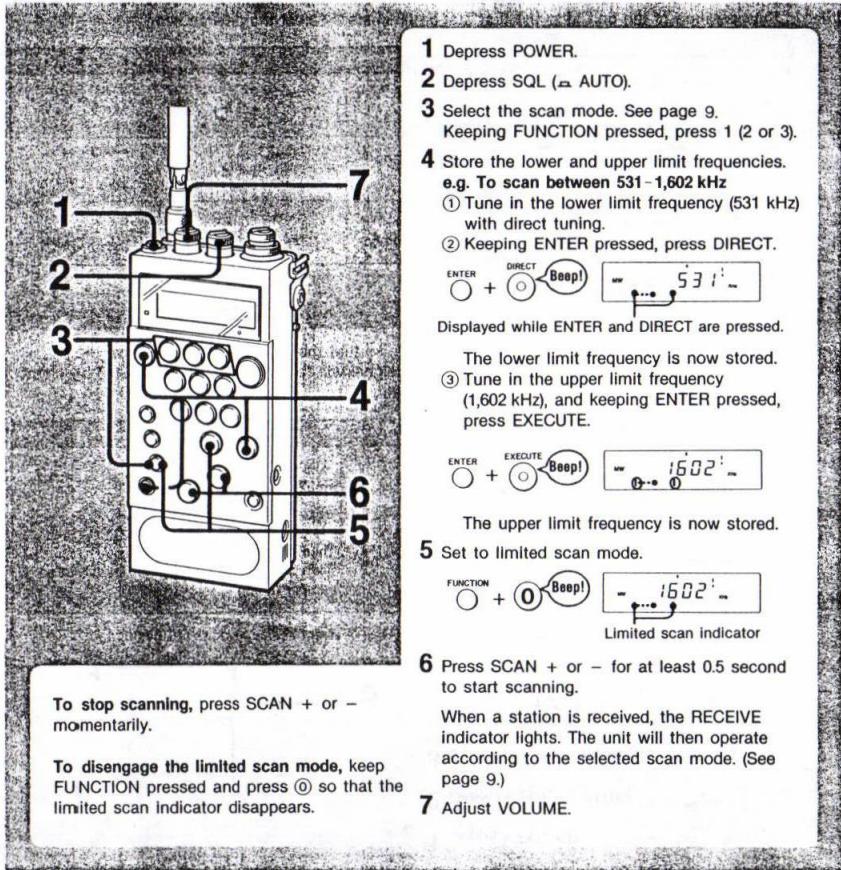


To check the stored lower and upper limit frequencies
Keeping FUNCTION pressed, press DIRECT or EXECUTE. While the buttons are pressed, the lower or upper limit frequency is displayed in the window.

Notes

- The upper limit frequency can be stored on DIRECT, and the lower limit frequency on EXECUTE, or vice versa.
- The limited scan mode and the memory of the lower and upper limit frequencies remain even if the power is once turned off.

MEMORY SCAN TUNING

The stations stored on one of the four memory pages can be scanned in the sequence ①→②→...→④, repeatedly.

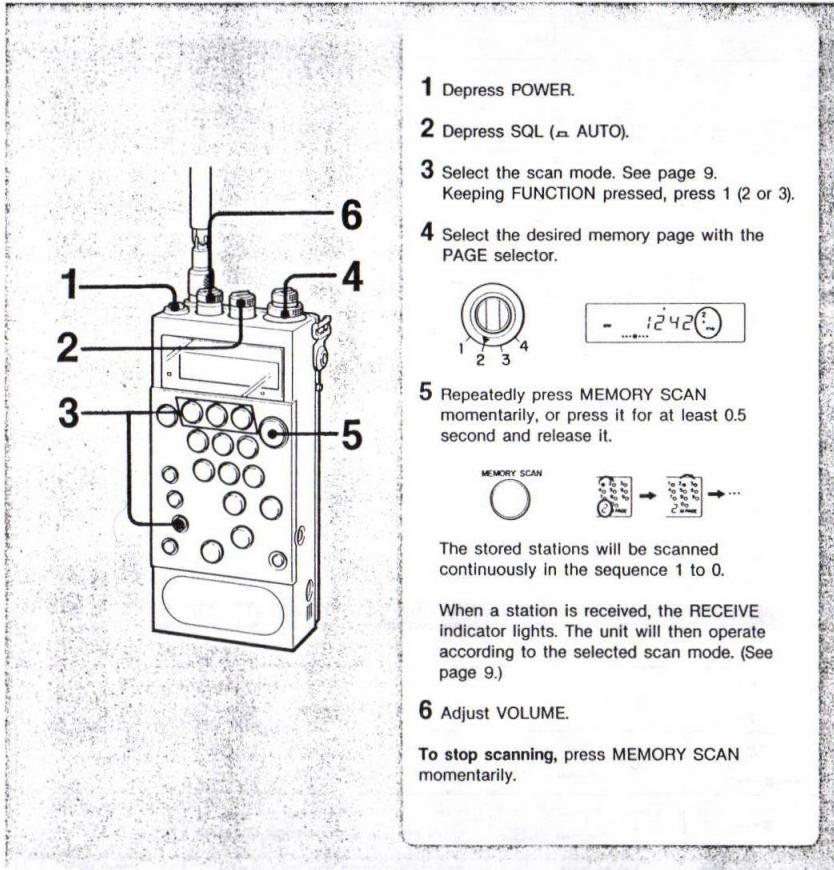


If scanning will not start or will not stop at all
Adjust SQL. See page 9.

If scanning is carried out in an unintended sequence
If the PROGRAM Indicator is displayed, program memory scan tuning is activated (page 11). Press PROGRAM so that the PROGRAM indicator disappears.

PROGRAM MEMORY SCAN TUNING

Only required stations among the stored 40 stations can be scanned in the required sequence repeatedly.

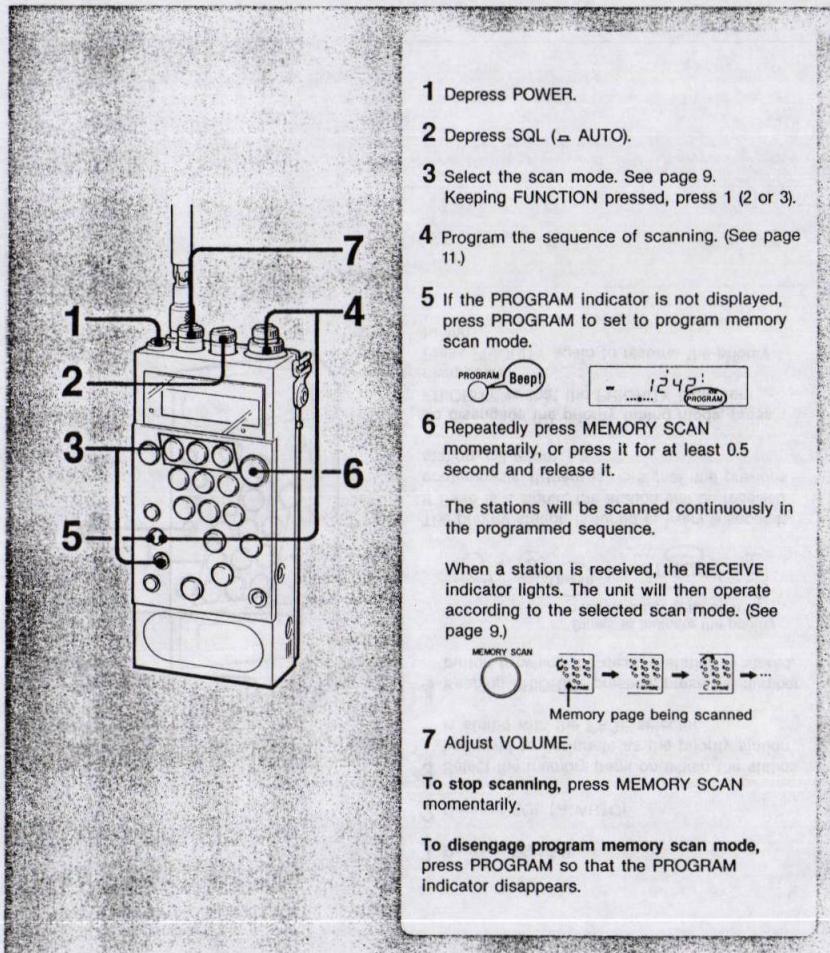

If scanning will not start or will not stop at all
Adjust SQL. See page 9.


TO PROGRAM STATIONS

1 Store stations on the number buttons. See page 7.


2 Keeping PROGRAM pressed, press the number buttons in the desired sequence. To program stations on two or more memory pages, switch the PAGE selector as required.



Keep PROGRAM pressed throughout the programming.

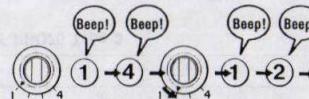

The memory station indicators and memory page indicator appear to indicate the programmed buttons.

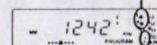

Up to 40 stations can be programmed in the sequence you press the number buttons.


3 Release PROGRAM.

PROGRAM MEMORY SEARCH—To display the data of the programmed stations successively

You can check the programmed stations while you are listening to your desired station.

1 Press PROGRAM to display the PROGRAM indicator.

2 Keeping FUNCTION pressed, repeatedly press MEMORY SCAN momentarily or press it for more than 0.5 second and release.

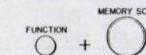

The data of the stations will be displayed successively in the programmed sequence.

3 Release FUNCTION to return the display to the station being received.

The factory-preset program




and pages 1 to 4.

Notes


- The same number button can be programmed twice or more. Each pressing is counted as one station. However, do not press the same number button twice in succession, as programming fails.
- Program memory scan mode and the memory of the programmed sequence remain even if the power is turned off.

PRIORITY TUNING

If a certain station stored is designated as the priority station, the unit automatically tunes to the station every 3 seconds to check whether there is a signal or not. If there is a signal, the priority station is tuned in continuously.

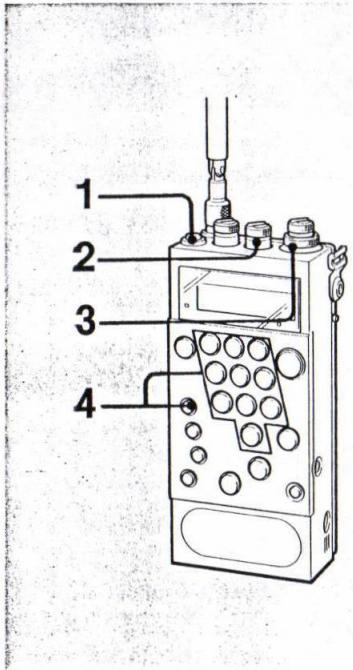

- 1 Depress POWER.
- 2 Depress SQL (Δ AUTO).
- 3 Select the memory page on which the station you want to designate as the priority station is stored with the PAGE selector.
- 4 Keeping PRIORITY pressed, press the number button to which the desired station is stored.

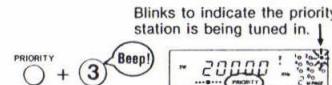

The priority station is tuned in every 3 seconds. If there is a signal, the station will be received continuously. If there is no signal, the previous station will return.

To disengage the priority tuning mode, press PRIORITY so that the PRIORITY indicator disappears.
Press PRIORITY again to resume the priority tuning.

Notes

- A beep will sound when the priority station is tuned in.
- Priority tuning mode and the memory of the priority station remains even if the power is turned off.

TO SELECT THE DETECTION MODE

Several detection modes depending on the model type can be selected for each frequency range indicated by I to IV in the following tables.

ICF-PRO70 Type 1 and ICF-PRO80


	150 kHz	30 MHz	50 MHz	76 MHz	108 MHz
Frequency ranges	LW/MW/SW	VHF	VHF	FM	
Factory-preset mode	AM NARROW	NARROW FM	NARROW FM	FM	
Selectable modes				FM	
	NARROW FM				
	AM WIDE				
	AM NARROW				
	SSB				

ICF-PRO70 Type 2

	150 kHz	29,995 kHz	87.6 MHz	108 MHz
Frequency ranges	LW/MW/SW		FM	
Factory-preset mode	AM NARROW		II	II
Selectable modes			FM	FM
	NARROW FM			
	AM WIDE			
	AM NARROW			
	SSB			

ICF-PRO70 Type 3

	150 kHz	26,100 kHz	87.5 MHz	108 MHz
Frequency ranges	LW/MW/SW		FM	
Factory-preset mode	AM NARROW		II	II
Selectable modes			FM	FM
	AM WIDE			
	AM NARROW			
	SSB			

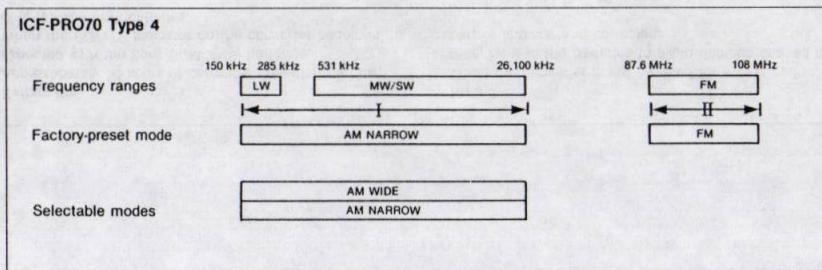**If the detection mode is incorrect**


- VHF communications cannot be received with AM WIDE, AM NARROW or SSB mode. If they are received with FM mode, the sound volume becomes very low.
- SSB communications can be received with SSB mode only.

Notes

- The stations stored on the number buttons can be tuned in with their own detection mode stored.
- When a stored station is tuned in, the detection mode of the corresponding frequency range is automatically set to the stored mode. If necessary, reset the detection mode after listening to that particular station.

TO SELECT THE DETECTION MODE**To select the detection mode**

- 1 Tune in a frequency within the frequency range for which the detection mode is to be changed.
- 2 Keeping FUNCTION pressed, press number button 4, 5, 7, 8 or 9.

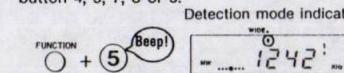


Buttons to be pressed	Detection mode	When to use
FUNCTION ○ + (4)	FM	To receive FM broadcasts, and TV (VHF) sound
FUNCTION ○ + (5)	AM WIDE	To receive AM (LW, MW and SW) broadcasts, normally set to this mode for dynamic sound.
FUNCTION ○ + (7)	NARROW FM	To receive VHF communications, etc. (not provided with the ICF-PRO70 Type 3 and 4)
FUNCTION ○ + (8)	AM NARROW	When AM (LW, MW and SW) reception is interrupted or noisy, this mode may improve the reception.
FUNCTION ○ + (9)	SSB	To receive SSB communications (not provided with the ICF-PRO70 Type 4)

Other stations in the same frequency range will also be tuned in with direct, scan or limited scan tuning, with the selected detection mode.

FINE TUNING**AM (LW/MW/SW) FINE TUNING**

Fine tune an AM station in the AM WIDE or AM NARROW detection mode.

- 1 Tune in the desired station.
- 2 Keeping FUNCTION pressed, press ⑥.

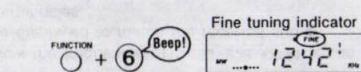

- 3 Turn FINE/SSB for the best possible reception. Fine tuning range is approximately ± 3.5 kHz.

To disengage fine tuning mode, keep FUNCTION pressed and press ⑥ so that the FINE indicator disappears.

SSB FINE TUNING

In SSB mode, fine tuning is necessary for each station received.

- 1 Select the SSB detection mode and tune in the desired station.
- 2 Turn FINE/SSB for the best possible reception. Fine tuning range is approximately ± 3.5 kHz.

Notes


- The FINE indicator appears only when FUNCTION + ⑥ are pressed in AM WIDE or AM NARROW mode.
- The FINE/SSB control functions only when the FINE or SSB indicator is displayed.

TO CONVERT THE FREQUENCY COVERAGE (ICF-PRO80 only)

The supplied FRQ-80 frequency converter shifts the frequency coverage of the receiver by 115 MHz, i.e. to 115.15–223 MHz, to allow reception of air band, PSB (Public Service Band) and TV VHF channels, etc.


INSTALLATION OF THE FREQUENCY CONVERTER

- 1 Insert the two optional size AA (R6) batteries into the converter.

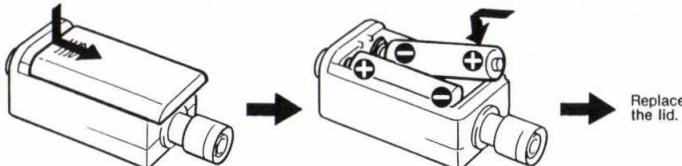


- 2 Detach the telescopic antenna from the receiver.

- 3 Attach the telescopic antenna to the frequency converter, and then the converter to the antenna connector.

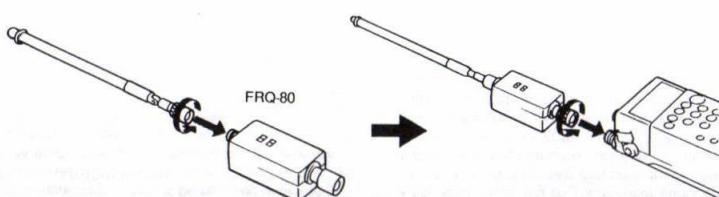

TO SHIFT THE FREQUENCY DISPLAY

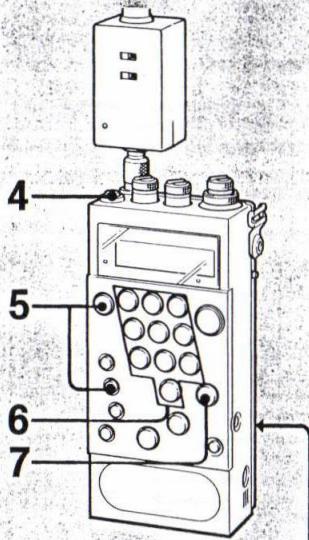

- 1 Remove the battery case from the battery compartment of the receiver.


- 2 Set FREQ.DISPLAY inside the battery compartment to SHIFT.

- 3 Replace the battery case.

- 4 Depress POWER.

The **S** (shift) indicator and a frequency shifted by 100 MHz will appear in the window.

Shift indicator

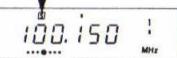

- 5 Keeping PROGRAM pressed, press DIRECT. The **S** indicator will blink.



- 6 While the **S** indicator is blinking, input the frequency to be shifted by the converter, 115 MHz, with the number buttons.



- 7 Press EXECUTE.



Now the frequencies 115.150–223.000 MHz can be displayed to match the received station frequencies.

Battery life

Approximately 80 hours of converter operation can be expected with the Sony SUM-3(NS) batteries. When the POWER indicator on the converter becomes dim, replace both batteries.

Note


When the converter is not be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

To check the shifted frequency

Keeping FUNCTION pressed, press KEY/MEMORY PROTECT. While the buttons are pressed, the shifted frequency is displayed in the window.

TO CONVERT THE FREQUENCY COVERAGE (ICF-PRO80 only)

TUNING

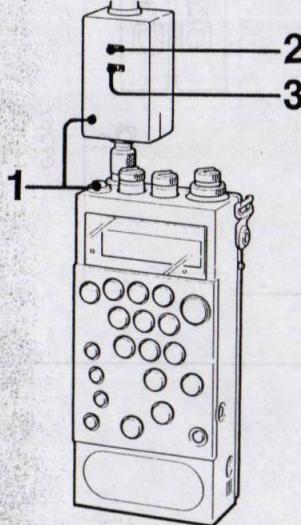

1 Depress POWER on the receiver.
The converter will be turned on automatically and the POWER indicator on the converter will light.

2 Set the ATTENUATOR selector on the converter to 0 dB.



3 Set the FILTER selector on the converter according to the frequency of the station to be tuned in.

- 115.15–174 MHz: for 115.15–174 MHz reception (air band, PSB, etc.)
- 174–223 MHz: for 174–223 MHz reception (TV channels, etc.)



4 Tune in the desired station with any of the tuning methods on pages 6–12.
If necessary, select the appropriate detection mode. See "To select the detection mode" on page 15.

After listening, press to turn off POWER.

Special notes on tuning in the shifted frequency coverage

Direct tuning

With the converter installed, always input 6 digits of the frequency for direct tuning. Righthand 000 cannot be omitted.

Memory tuning and memory scan tuning


Store the stations in the 115.15–174 MHz range and those in the 174–223 MHz range on separate memory pages. If they are stored in a mixed manner on one page, memory scanning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

Program memory scan tuning

Do not program the stations in the 115.15–174 MHz range and those in the 174–223 MHz range in a mixed manner. Otherwise, program memory scan tuning may not be carried out correctly because the FILTER selector cannot be switched during scanning.

To select the detection mode

The selectable detection modes in the 115.15–223 MHz range are as follows:

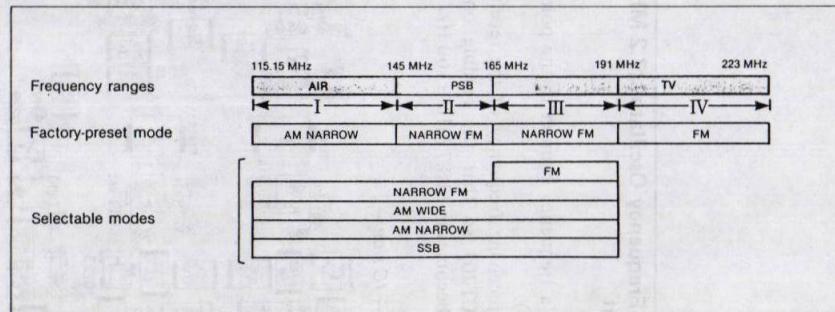

- When tuning in airband, PSB and TV stations, set to the following detection modes.
Air band (118–136 MHz) → AM NARROW
PSB (146–174 MHz) → NARROW FM
TV (174–223 MHz) → FM
- For other types of broadcasts and radio communications, set to the appropriate detection mode.

To resume the original frequency coverage of the receiver

Detach the converter from the antenna connector and replace the telescopic antenna. Set FREQ. DISPLAY inside the battery compartment to NORMAL.

Tuning Intervals in the 115.15–223 MHz range

Frequency coverage	Interval
115.150–115.528 MHz	3 kHz
115.531–116.602 MHz	9 kHz*
116.605–160.995 MHz	5 kHz
165.000–190.995 MHz	5 kHz**
191–223 MHz	50 kHz

* The tuning interval can be changed to 10 kHz. See page 3.

** When the detection mode is FM, the interval of this range will be 50 kHz.

SECTION 2

ELECTRICAL ADJUSTMENT


Note: Standard power-supply voltage is 6 VDC unless otherwise noted.

Be sure to perform the "VCO1 PD-Voltage Adjustment" and "VCO2 PD-Voltage Adjustment" when the "FM-L Tracking Adjustment" and "FM-H Tracking Adjustment" are performed respectively.


Before Adjustment: (West Germany model only)

Solder the lead as shown below and then turn the POWER switch on because there are two power switches in West Germany model. (Refer to page 5 for details.)

After adjustment, unsolder the lead.

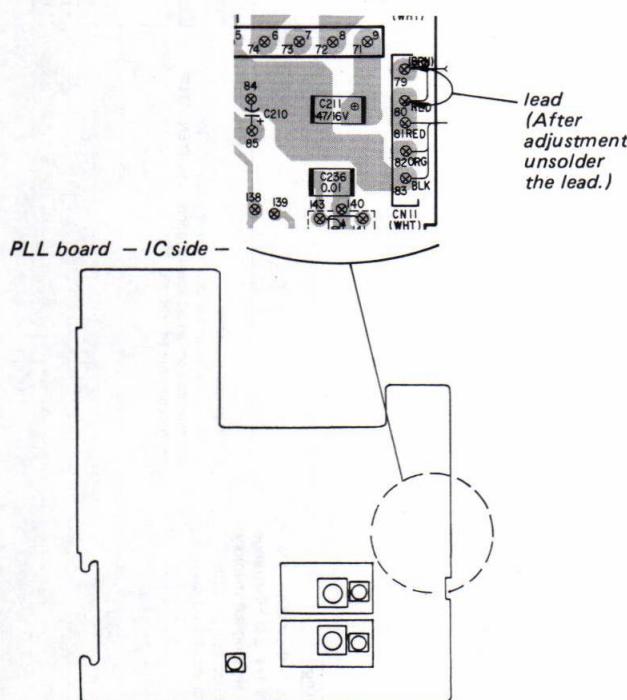

FM RF SSG Connecting Portion


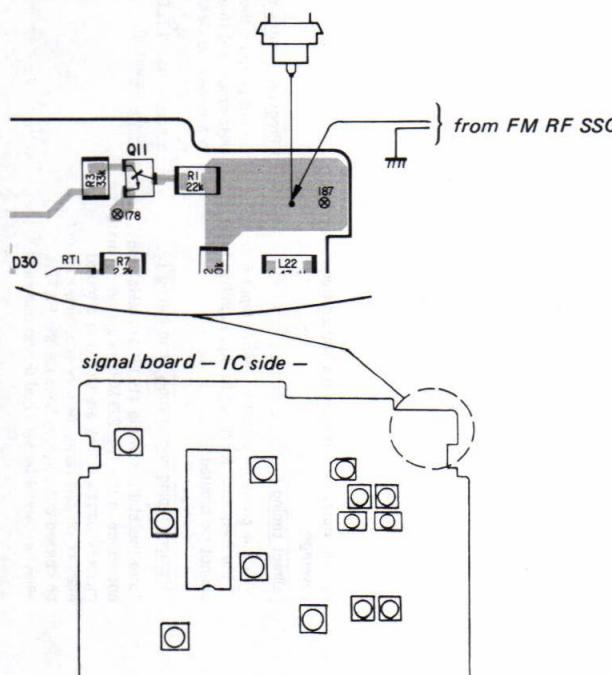


Reference-Frequency Oscillator (7.2 MHz) Adjustment

Procedure:


1. Connect a frequency counter to the point **A** (output of the VCO).
2. Set the receiving frequency of the receiver to 108 MHz.
3. Adjust CT201 so that the reading on the frequency counter becomes in 118.7 MHz ±100 Hz.

PLL board - IC side -

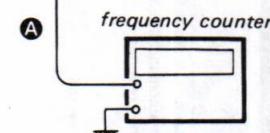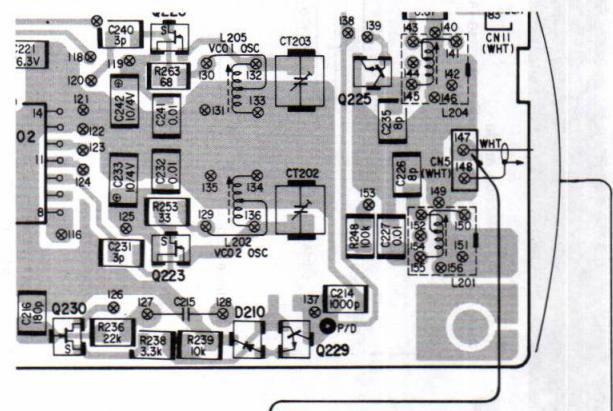

Adjustment Location:

PLL board - IC side -

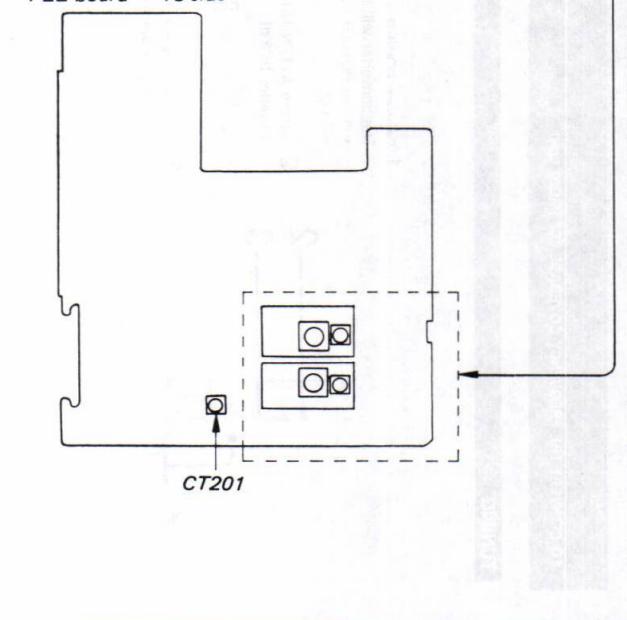

VCO1 PD-Voltage Adjustment




Note: Be sure to perform the "FM-L Tracking Adjustment" when this adjustment is performed... (ICF-PRO70 Type 1 and ICF-PRO80 only)

Procedure:



1. Set the receiving frequency of the receiver to 150 kHz.
2. Set CT203 to a slightly meshed position.
3. Adjust L205 so that the reading on the VTVM connected to the point A (PD test point) becomes in $1.35 \text{ V} \pm 0.05 \text{ VDC}$.
4. Change the receiving frequency of the receiver as shown on Table 1 and confirm the reading on the VTVM.

Table 1

	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	75.95 MHz, and set the detection mode to the WIDE FM	$14 \text{ V} \pm 1 \text{ VDC}$
ICF-PRO70 Type 2, Type 3, and Type 4	26.1 MHz	$12 \text{ V} \pm 1 \text{ VDC}$

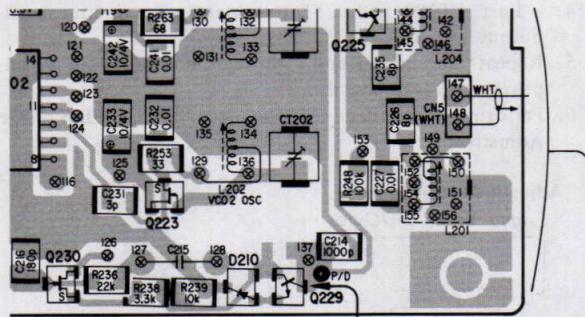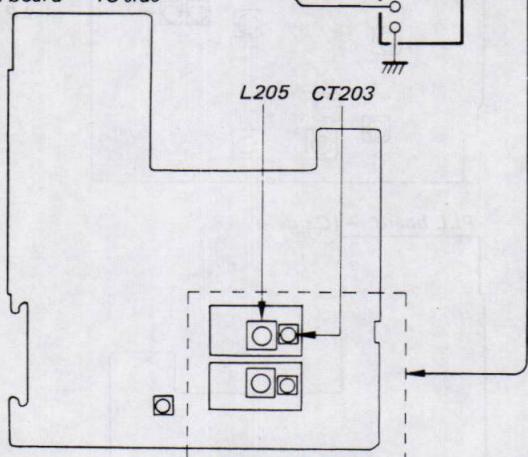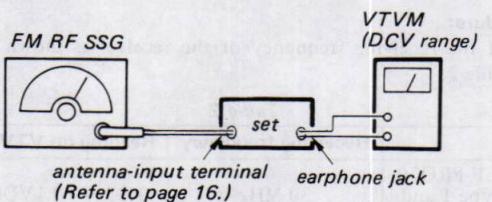PLL board - IC side -**Adjustment Location:****PLL board - IC side -****FM-L Tracking Adjustment
(ICF-PRO70 Type 1 and ICF-PRO80 only)****Procedure:**

1. Set the frequencies of the SSG and the receiver to 55 MHz.
2. Adjust L3 and T2 to obtain a maximum signal output on the VTVM.
3. Change the frequencies of the SSG and the receiver to 70 MHz.
4. Adjust CT203 and CT2 so that the reading on the VTVM becomes in maximum.
5. Repeat the above steps 1 through 4 several times until no further improvements is obtained.
6. Perform and confirm the prior step "VCO1 PD-Voltage Adjustment".

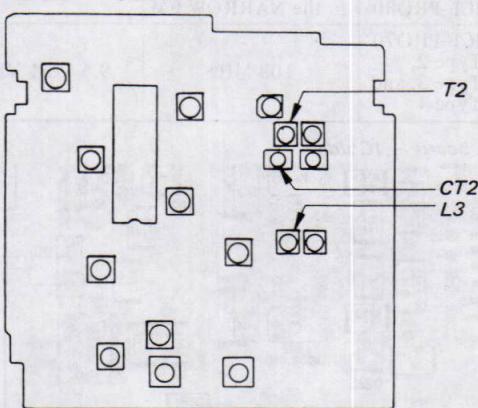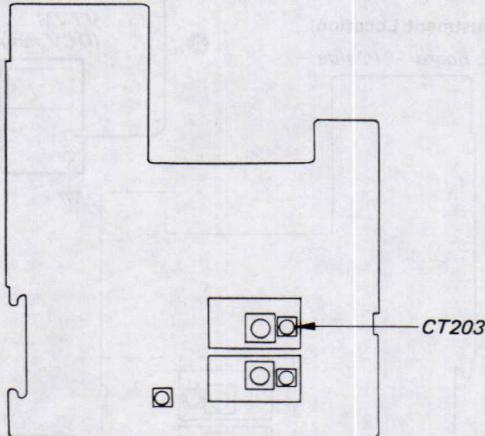Adjustment Location:**signal board - IC side -****PLL board - IC side -**

VCO2 PD-Voltage Adjustment

Note: Be sure to perform the "FM-H Tracking Adjustment" when this adjustment is performed.

Procedure:

- Set the receiving frequency of the receiver as shown on Table 2.

Table 2


	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	30 MHz	1.35 V \pm 0.1 VDC
ICF-PRO70 Type 2, Type 3, and Type 4	87.6 MHz	3.6 V \pm 0.3 VDC

- Set CT202 to its half-meshed or slightly-meshed position.
 - Adjust L202 so that the reading on the VTVM connected to the point **A** (PD test point) becomes as shown on Table 2.
 - Change the receiving frequency of the receiver as shown on Table 3 and confirm the reading on the VTVM.


Table 3

	Receiving frequency	Reading on VTVM
ICF-PRO70 Type 1 and ICF-PRO80	75.995 MHz, and set the detection mode to the NARROW FM	14 V ±1 VDC
ICF-PRO70 Type 2, Type 3, and Type 4	108 MHz	9.5 V ±1 VDC

PLL board – IC side –

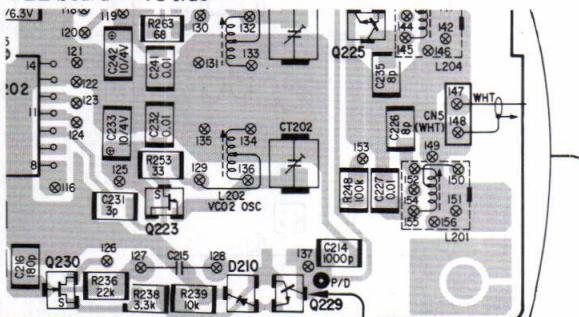


Adjustment Location:

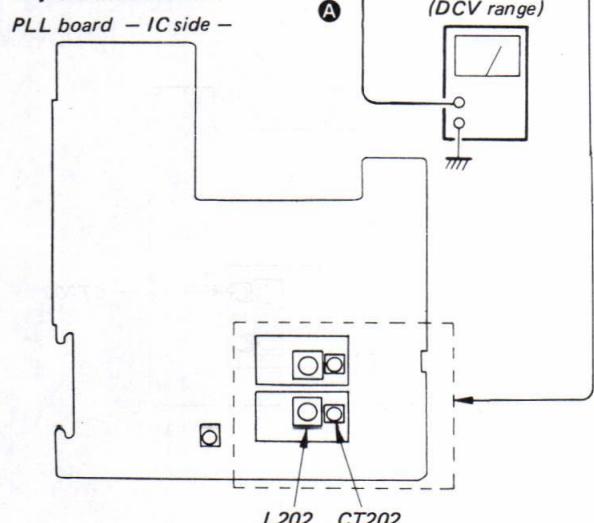

FM-H Tracking Adjustment

Procedure:

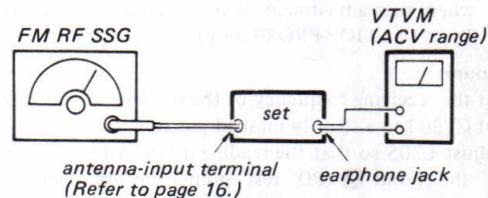

1. Set the receiving frequency of the receiver as shown on Table 4.



Table 4

	Receiving frequency
ICF-PRO70 Type 1 and ICF-PRO80	80 MHz
ICF-PRO70 Type 2, Type 3, and Type 4	87.6 MHz





2. Adjust L2 and T1 to obtain a maximum signal-output on the VTVM.
 3. Change the receiving frequency of the receiver to 105 MHz.
 4. Adjust CT202 and CT1 to obtain a maximum signal-output level.
 5. Repeat the above steps 1 through 4 until no further improvements is obtained.
 6. Perform and confirm the prior step "VCO2 PD-Voltage Adjustment".

Adjustment Location:

signal board - IC side -

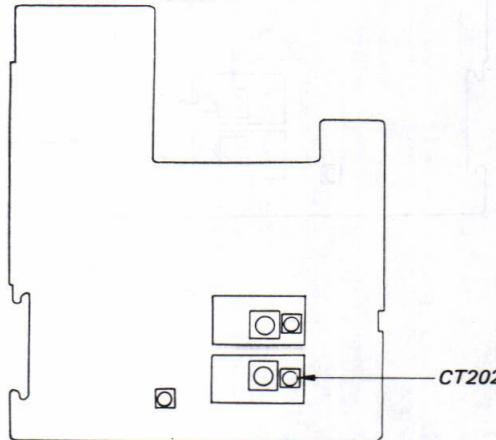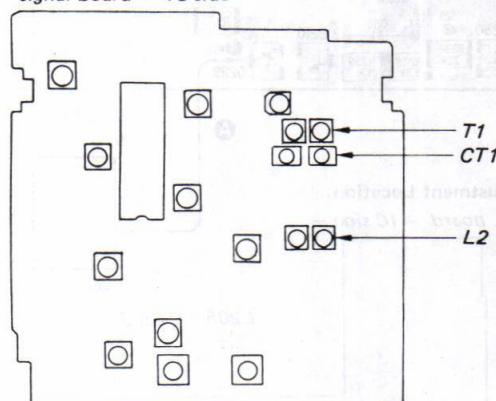

SECTION 3 DIAGRAMS

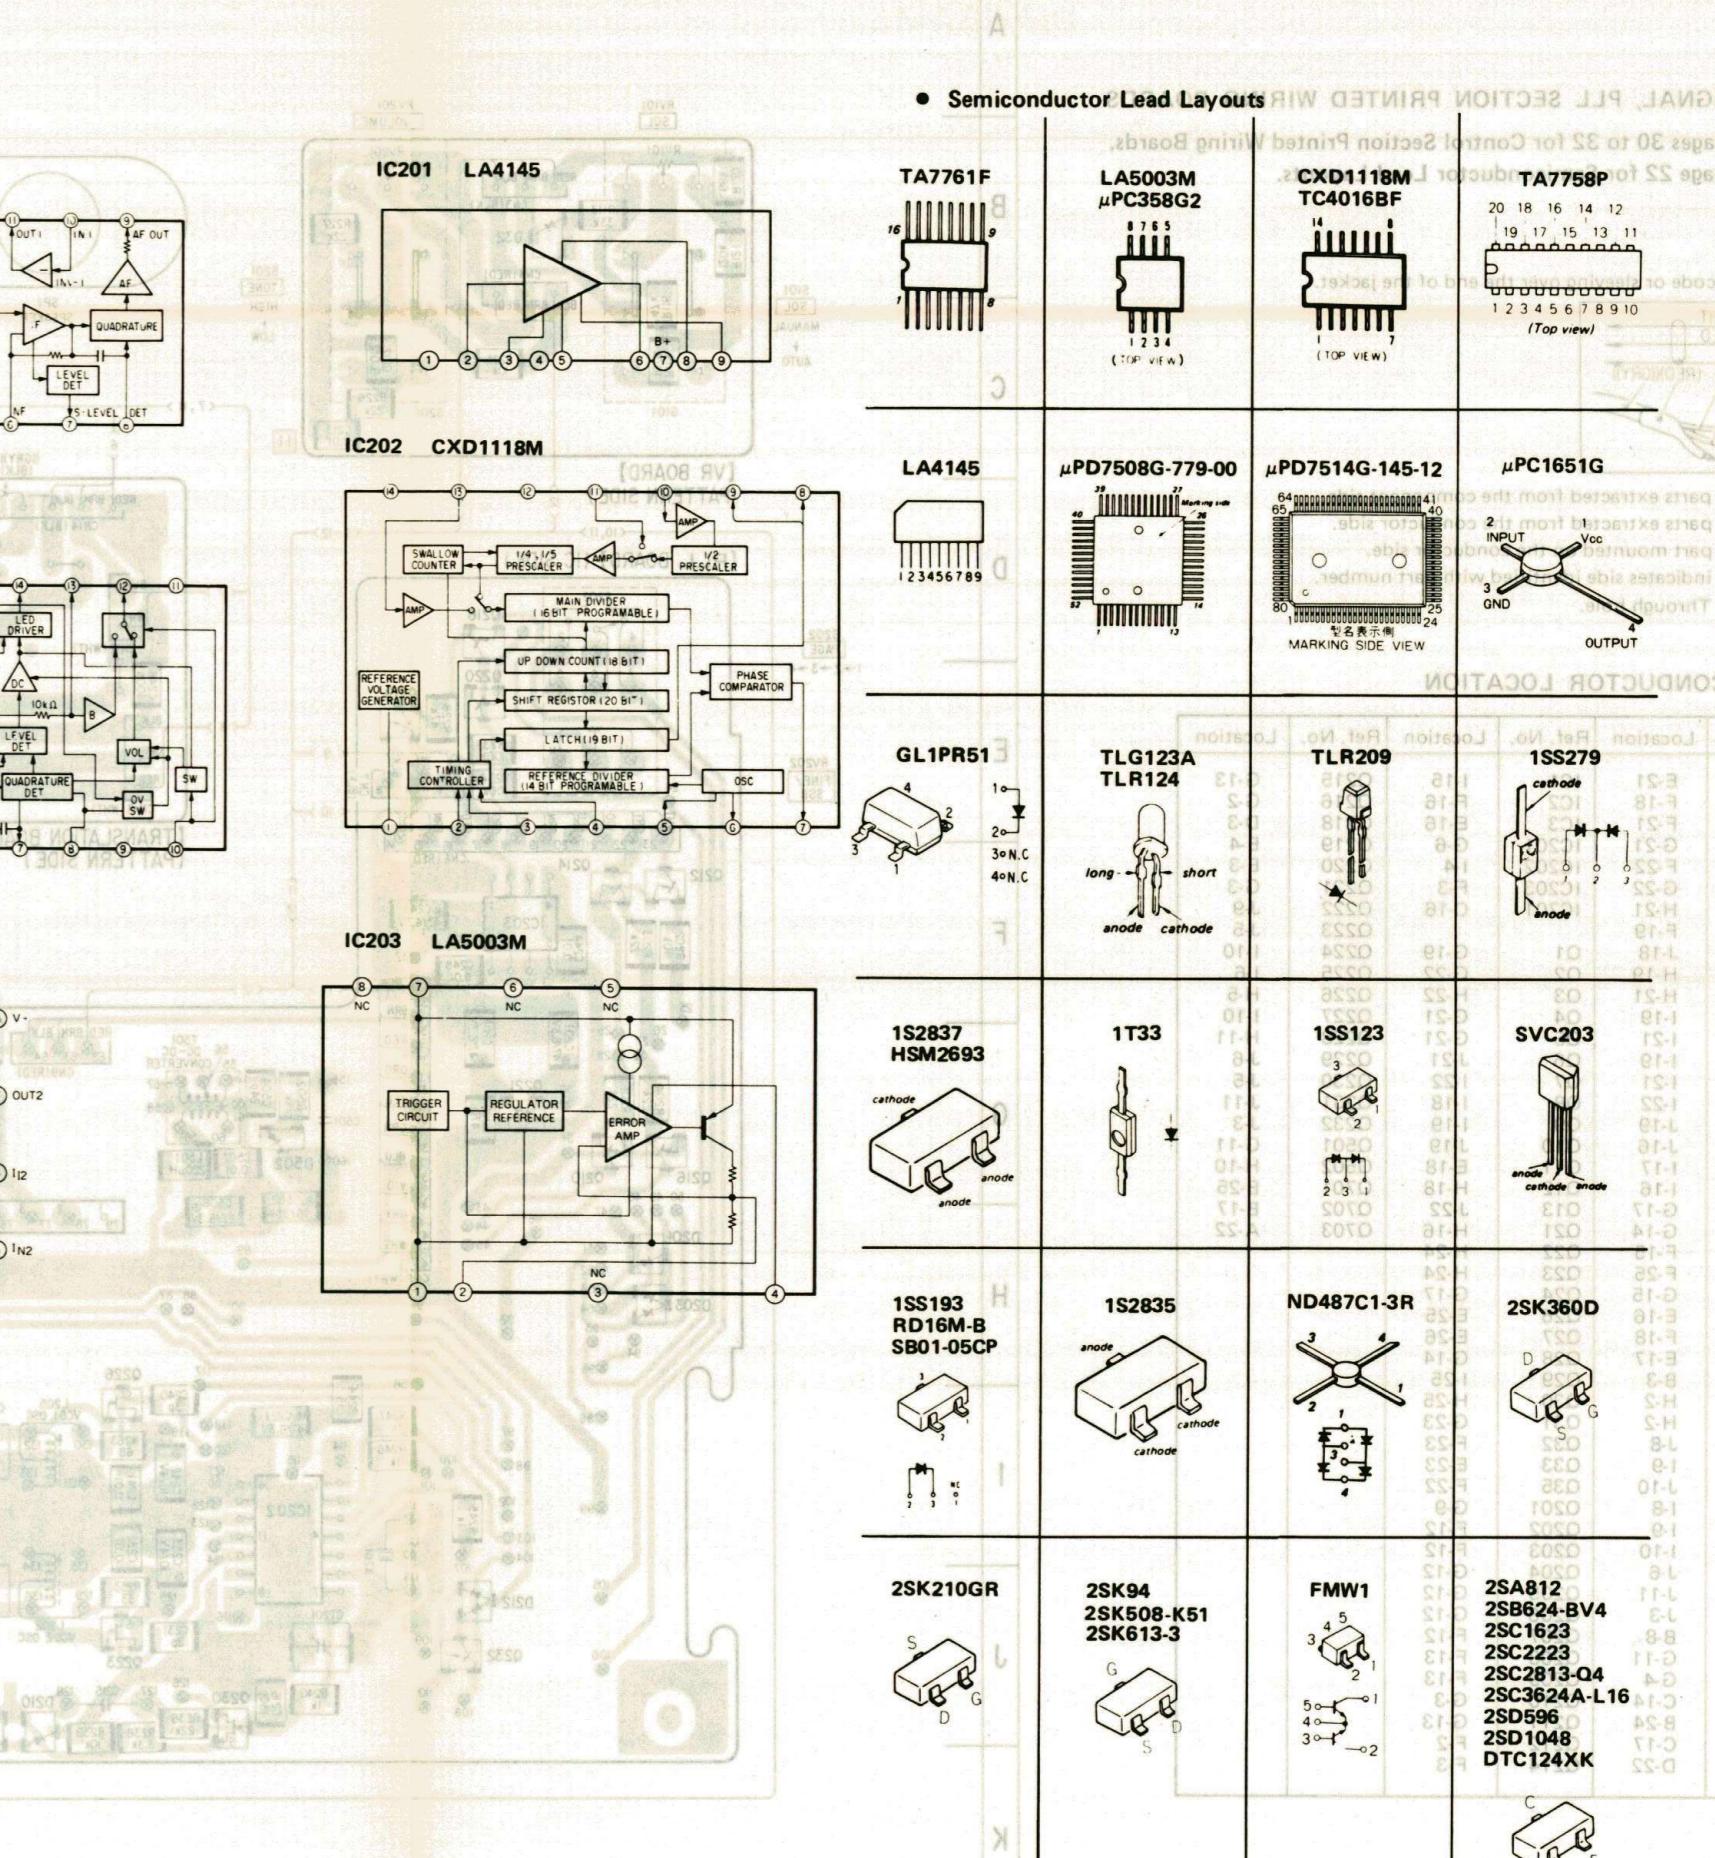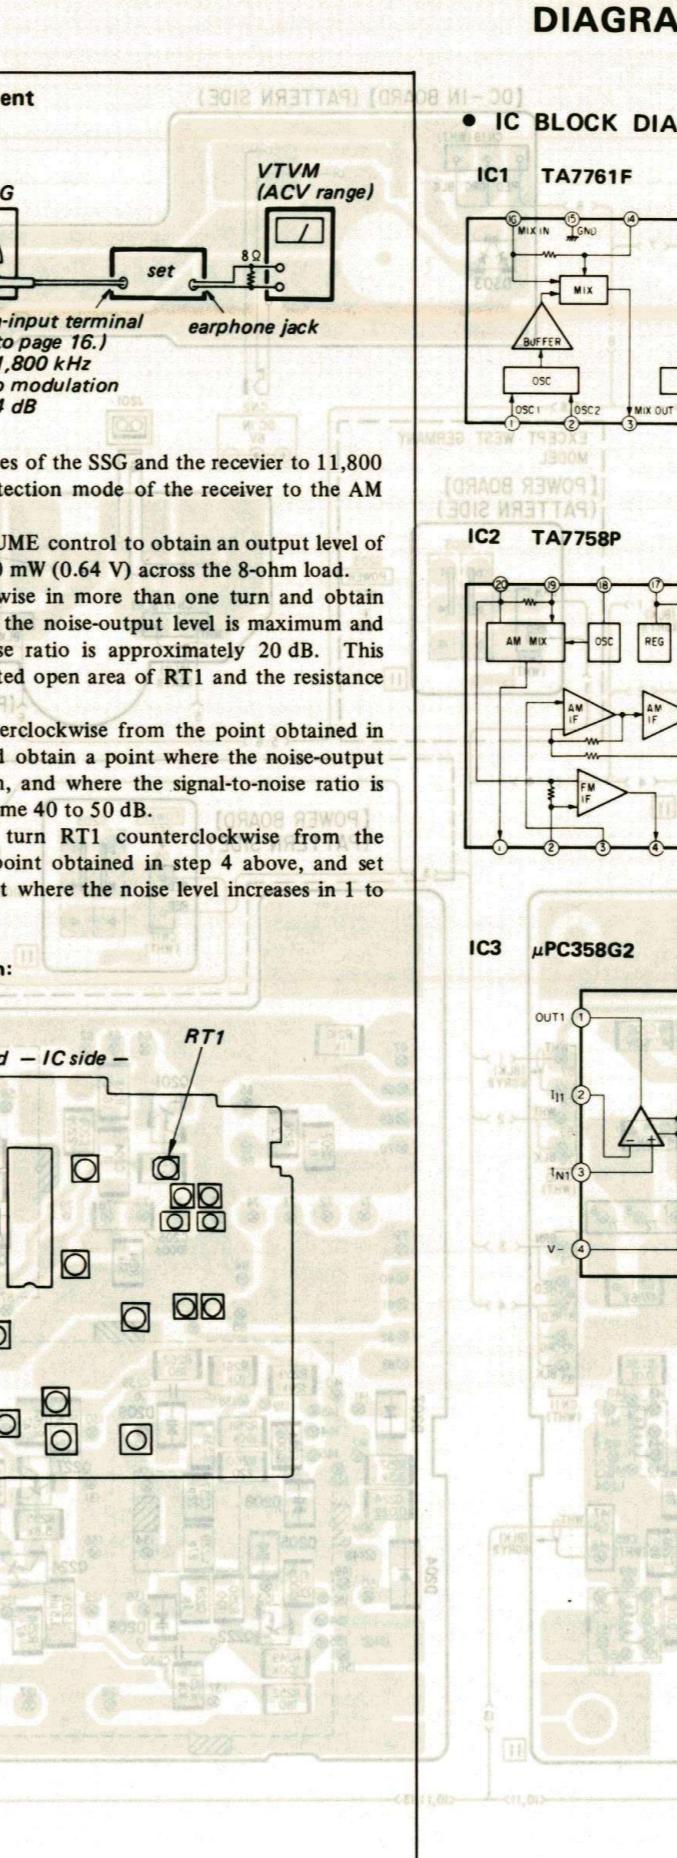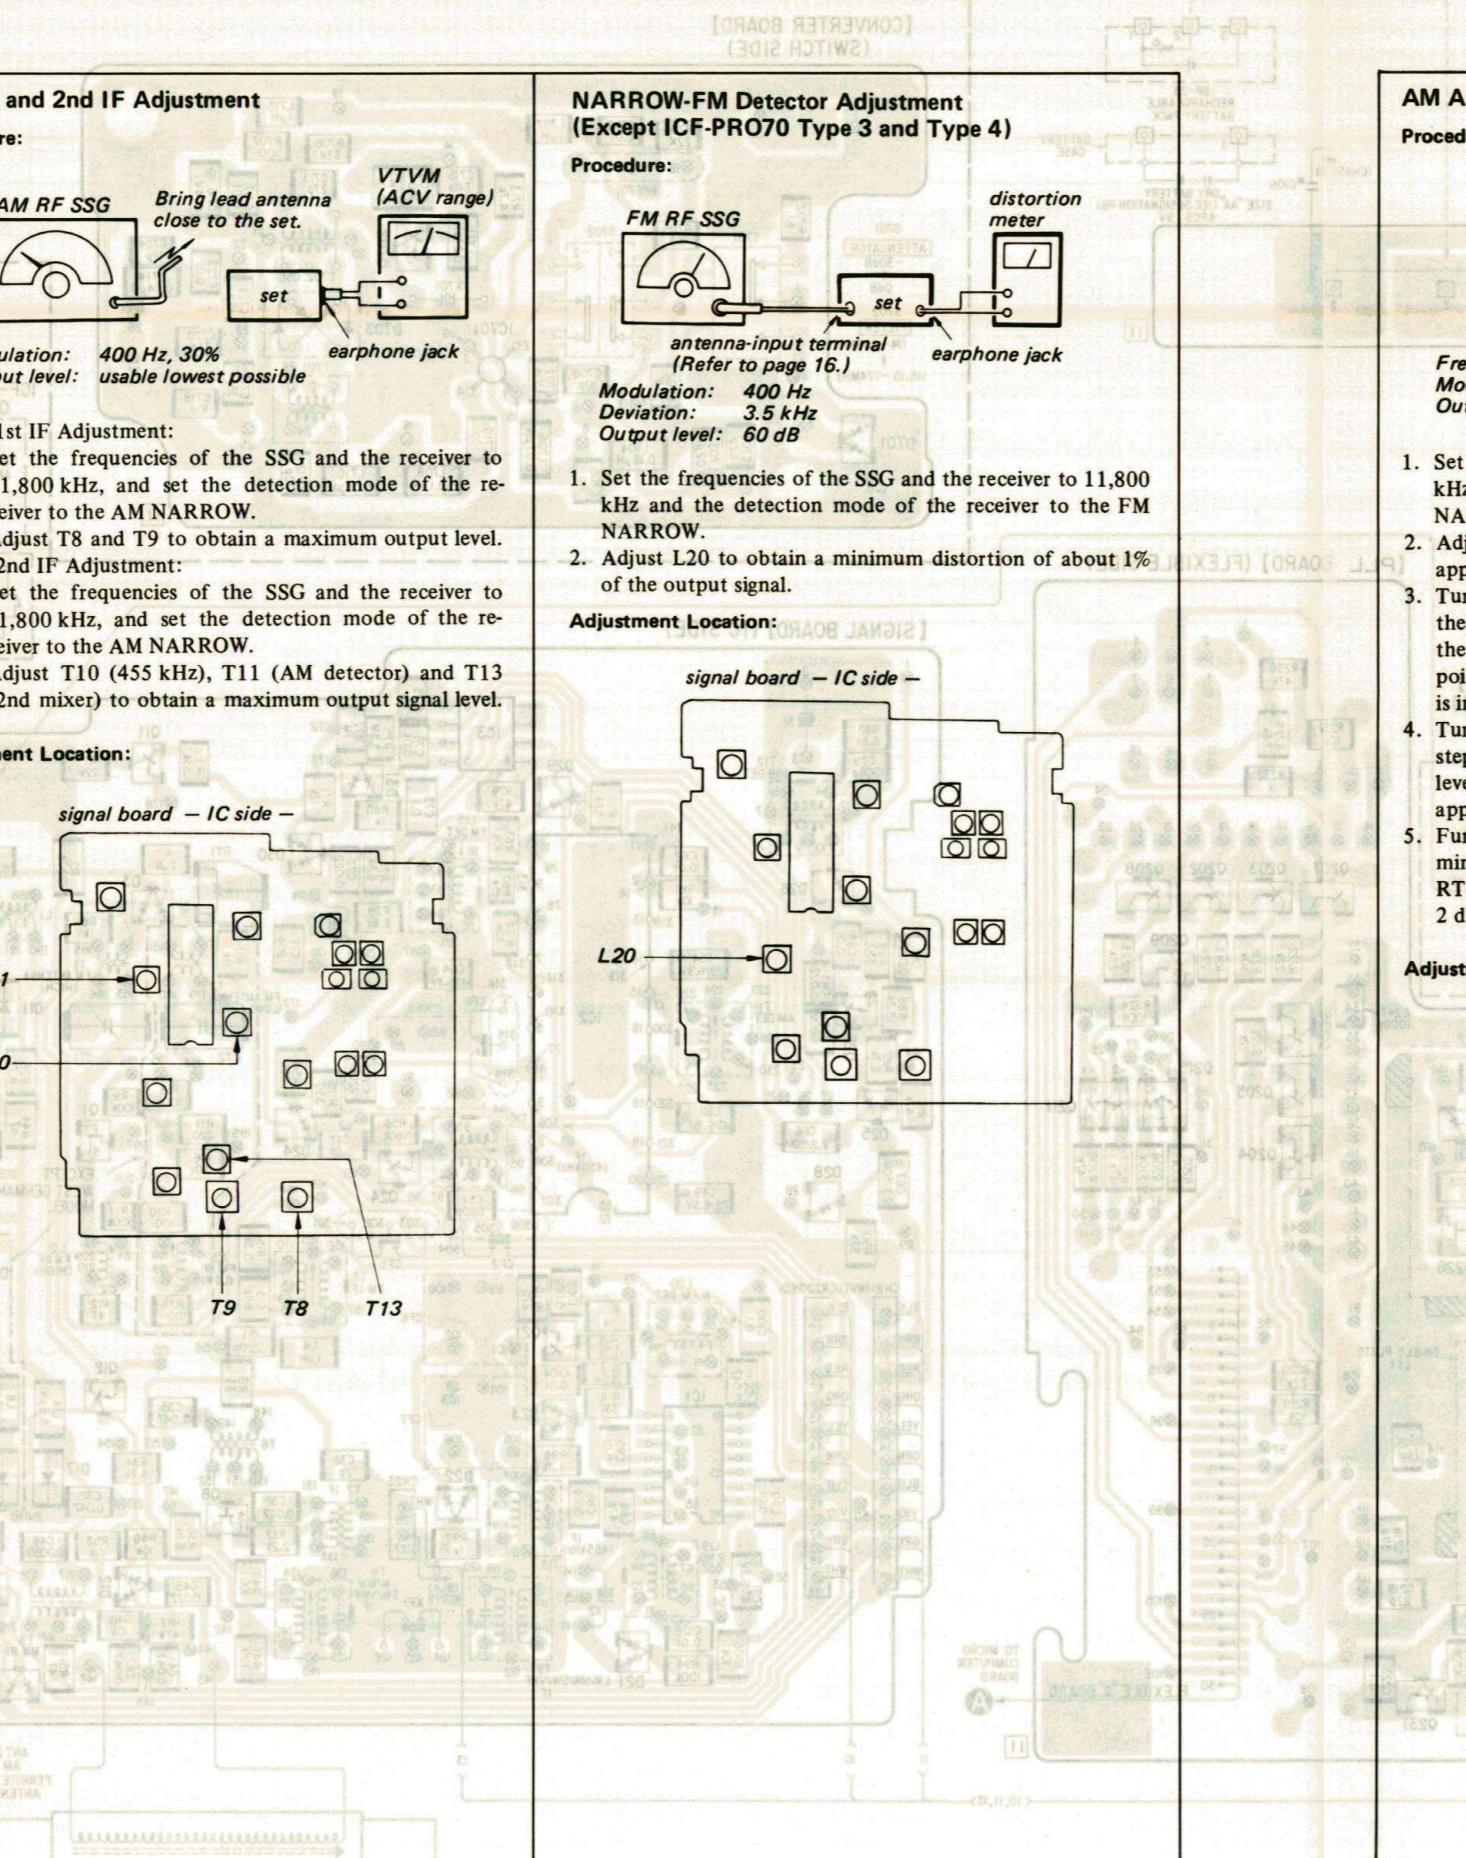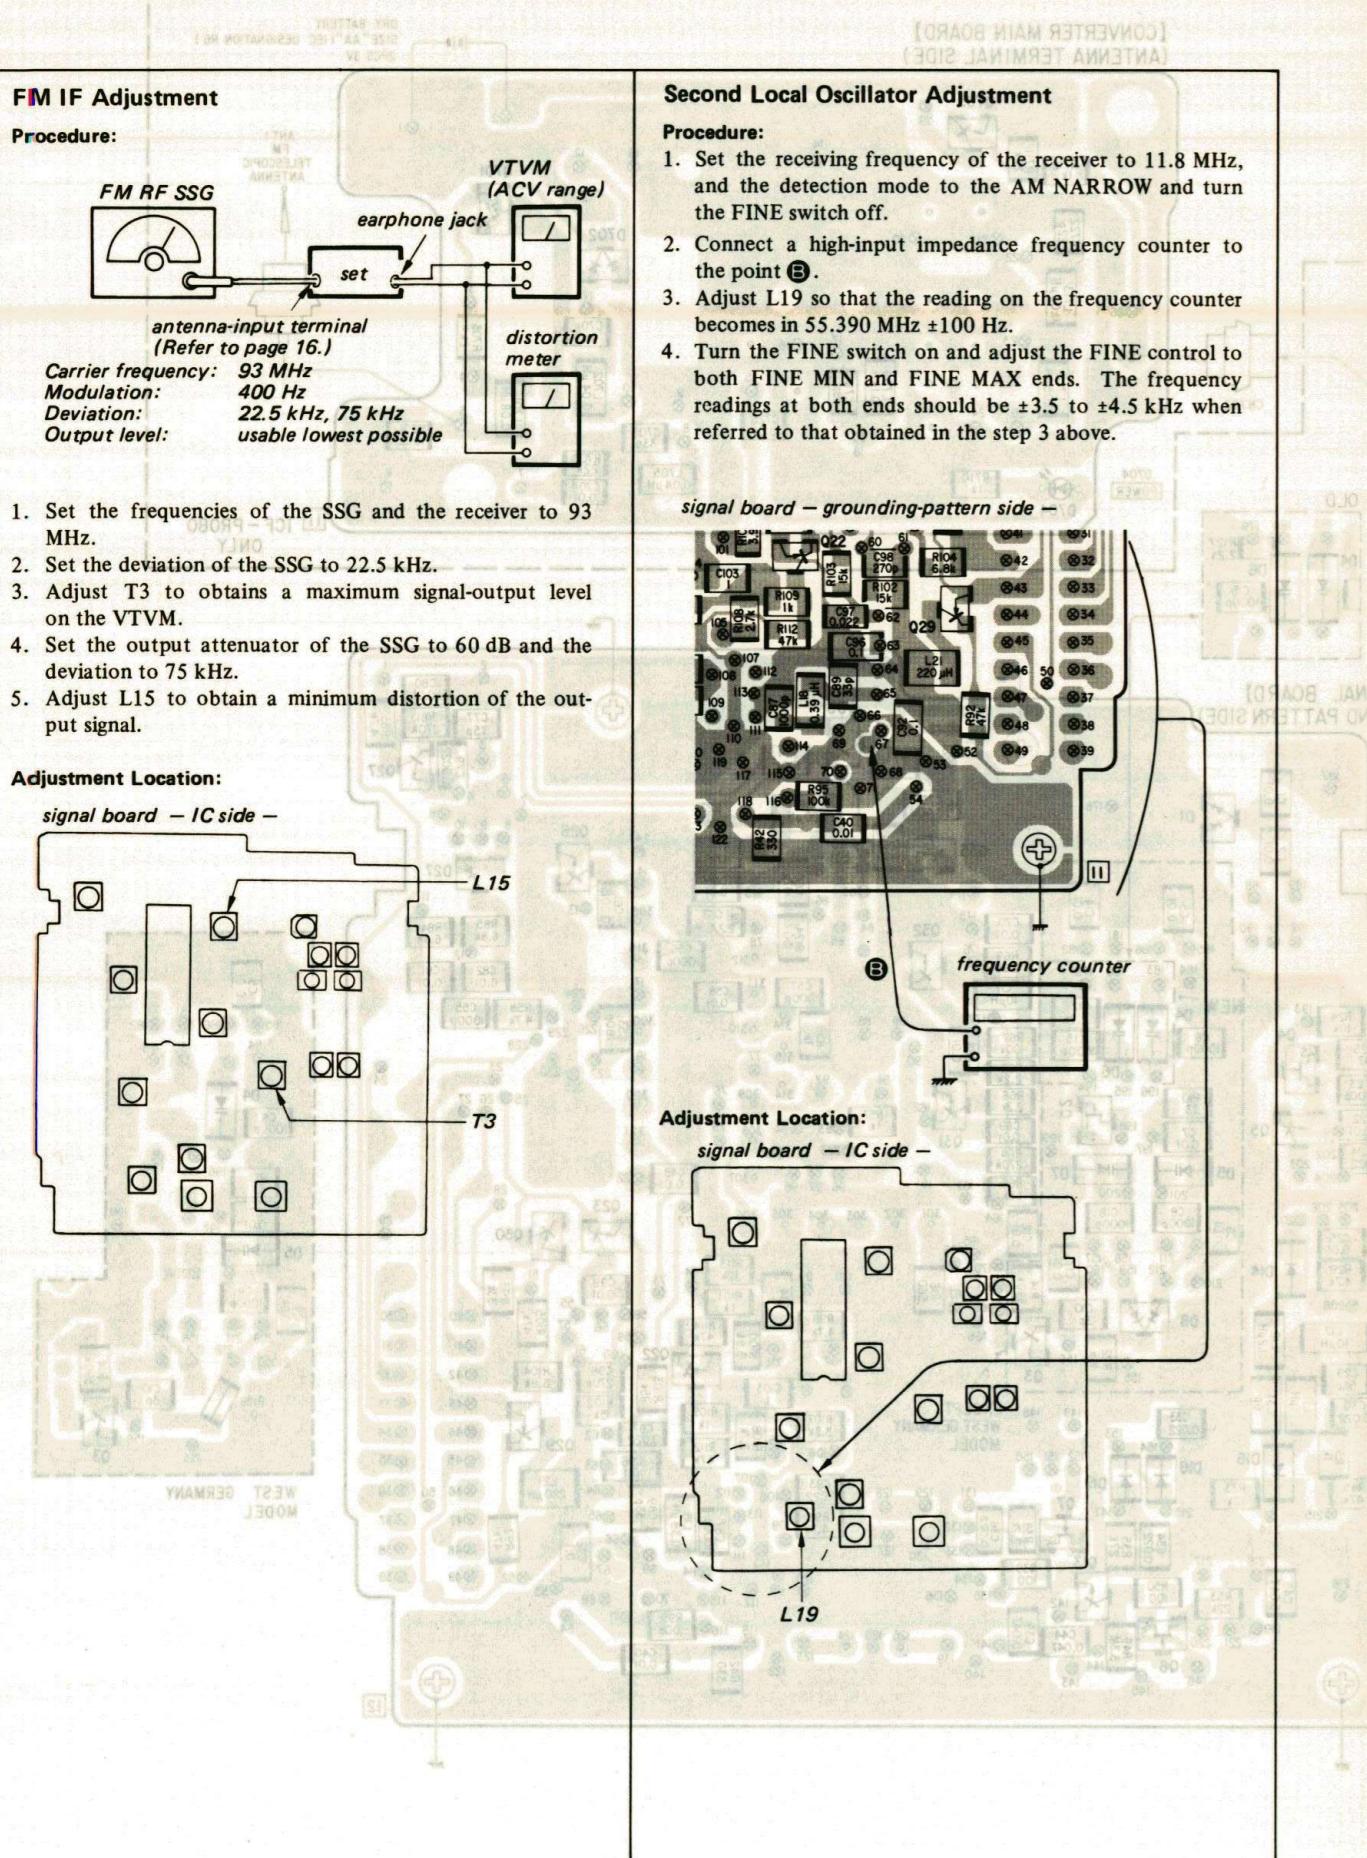

3-1. SIGNAL, PLL SECTION PRINTED WIRING BOARDS


- See pages 30 to 32 for Control Section Printed Wiring Boards.
- See page 22 for Semiconductor Lead Layouts.


Note:


- Color code or sleeves over the end of the jacket.
- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : part mounted on the conductor side.
- : indicates side identified with part number.
- : Through hole.

• SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D1	E-21	IC1	I-15	Q215	G-13
D3	F-18	IC2	F-16	Q216	G-2
D4	F-21	IC3	E-16	Q218	D-3
D5	G-21	IC201	G-6	Q219	E-4
D6	F-22	IC202	I-4	Q220	E-3
D7	G-22	IC203	F-3	Q221	G-3
D8	H-21	IC701	C-16	Q222	J-9
D11	F-19	Q1	G-19	Q224	J-5
D12	J-18	Q2	G-22	Q225	I-10
D13	H-19	Q3	H-22	Q226	H-5
D14	H-21	Q4	G-21	Q227	I-10
D15	I-19	Q5	G-21	Q228	H-11
D17	I-19	Q6	J-21	Q229	J-6
D18	I-21	Q7	I-22	Q230	J-5
D19	I-22	Q8	I-18	Q231	J-11
D20	J-19	Q9	I-19	Q232	J-3
D21	J-16	Q10	J-19	Q501	G-11
D22	I-17	Q11	E-18	Q502	H-10
D23	I-16	Q12	H-18	Q701	B-25
D24	G-17	Q13	J-22	Q702	B-17
D25	G-14	Q21	H-16	Q703	A-22
D26	F-15	Q22	H-24		
D27	F-25	Q23	H-24		
D28	G-15	Q24	G-17		
D29	E-16	Q26	E-25		
D30	F-18	Q27	E-26		
D31	E-17	Q28	G-14		
D32	B-3	Q29	I-25		
D201	H-2	Q30	H-25		
D203	H-2	Q31	G-23		
D204	J-2	Q32	F-23		
D205	I-9	Q33	E-23		
D206	J-10	Q35	F-22		
D207	I-8	Q201	G-9		
D208	I-9	Q202	F-12		
D209	I-10	Q203	F-12		
D210	J-6	Q204	G-12		
D211	J-11	Q205	G-12		
D212	J-3	Q206	G-12		
D303	B-8	Q207	F-12		
D501	G-11	Q208	F-13		
D502	G-4	Q209	F-13		
D701	C-14	Q210	G-3		
D702	B-24	Q211	G-3		
D703	C-17	Q212	F-2		
D704	D-22	Q214	F-3		

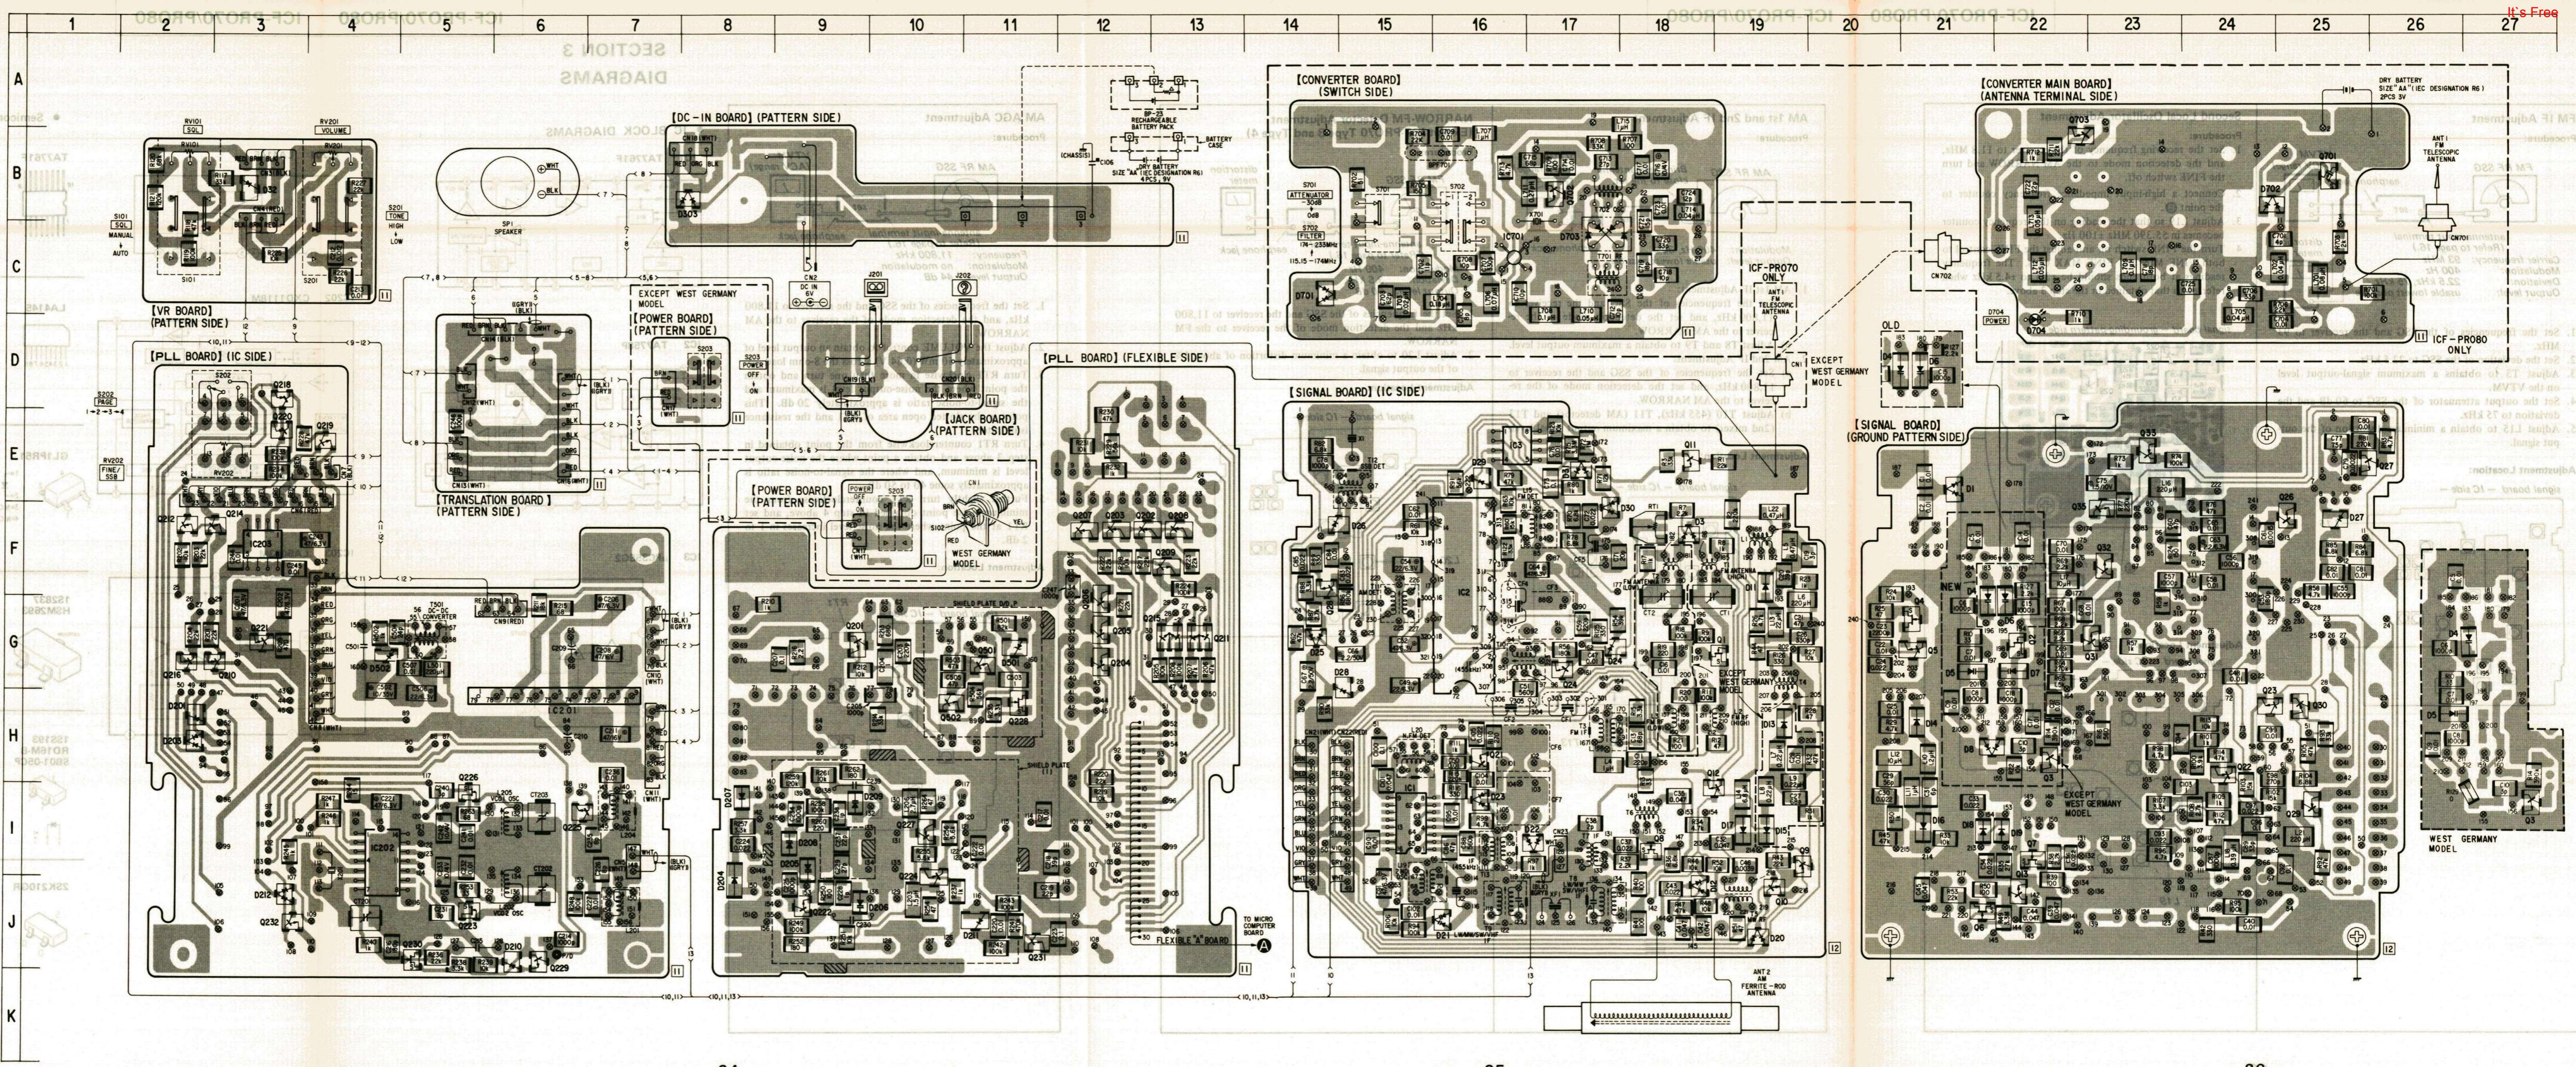


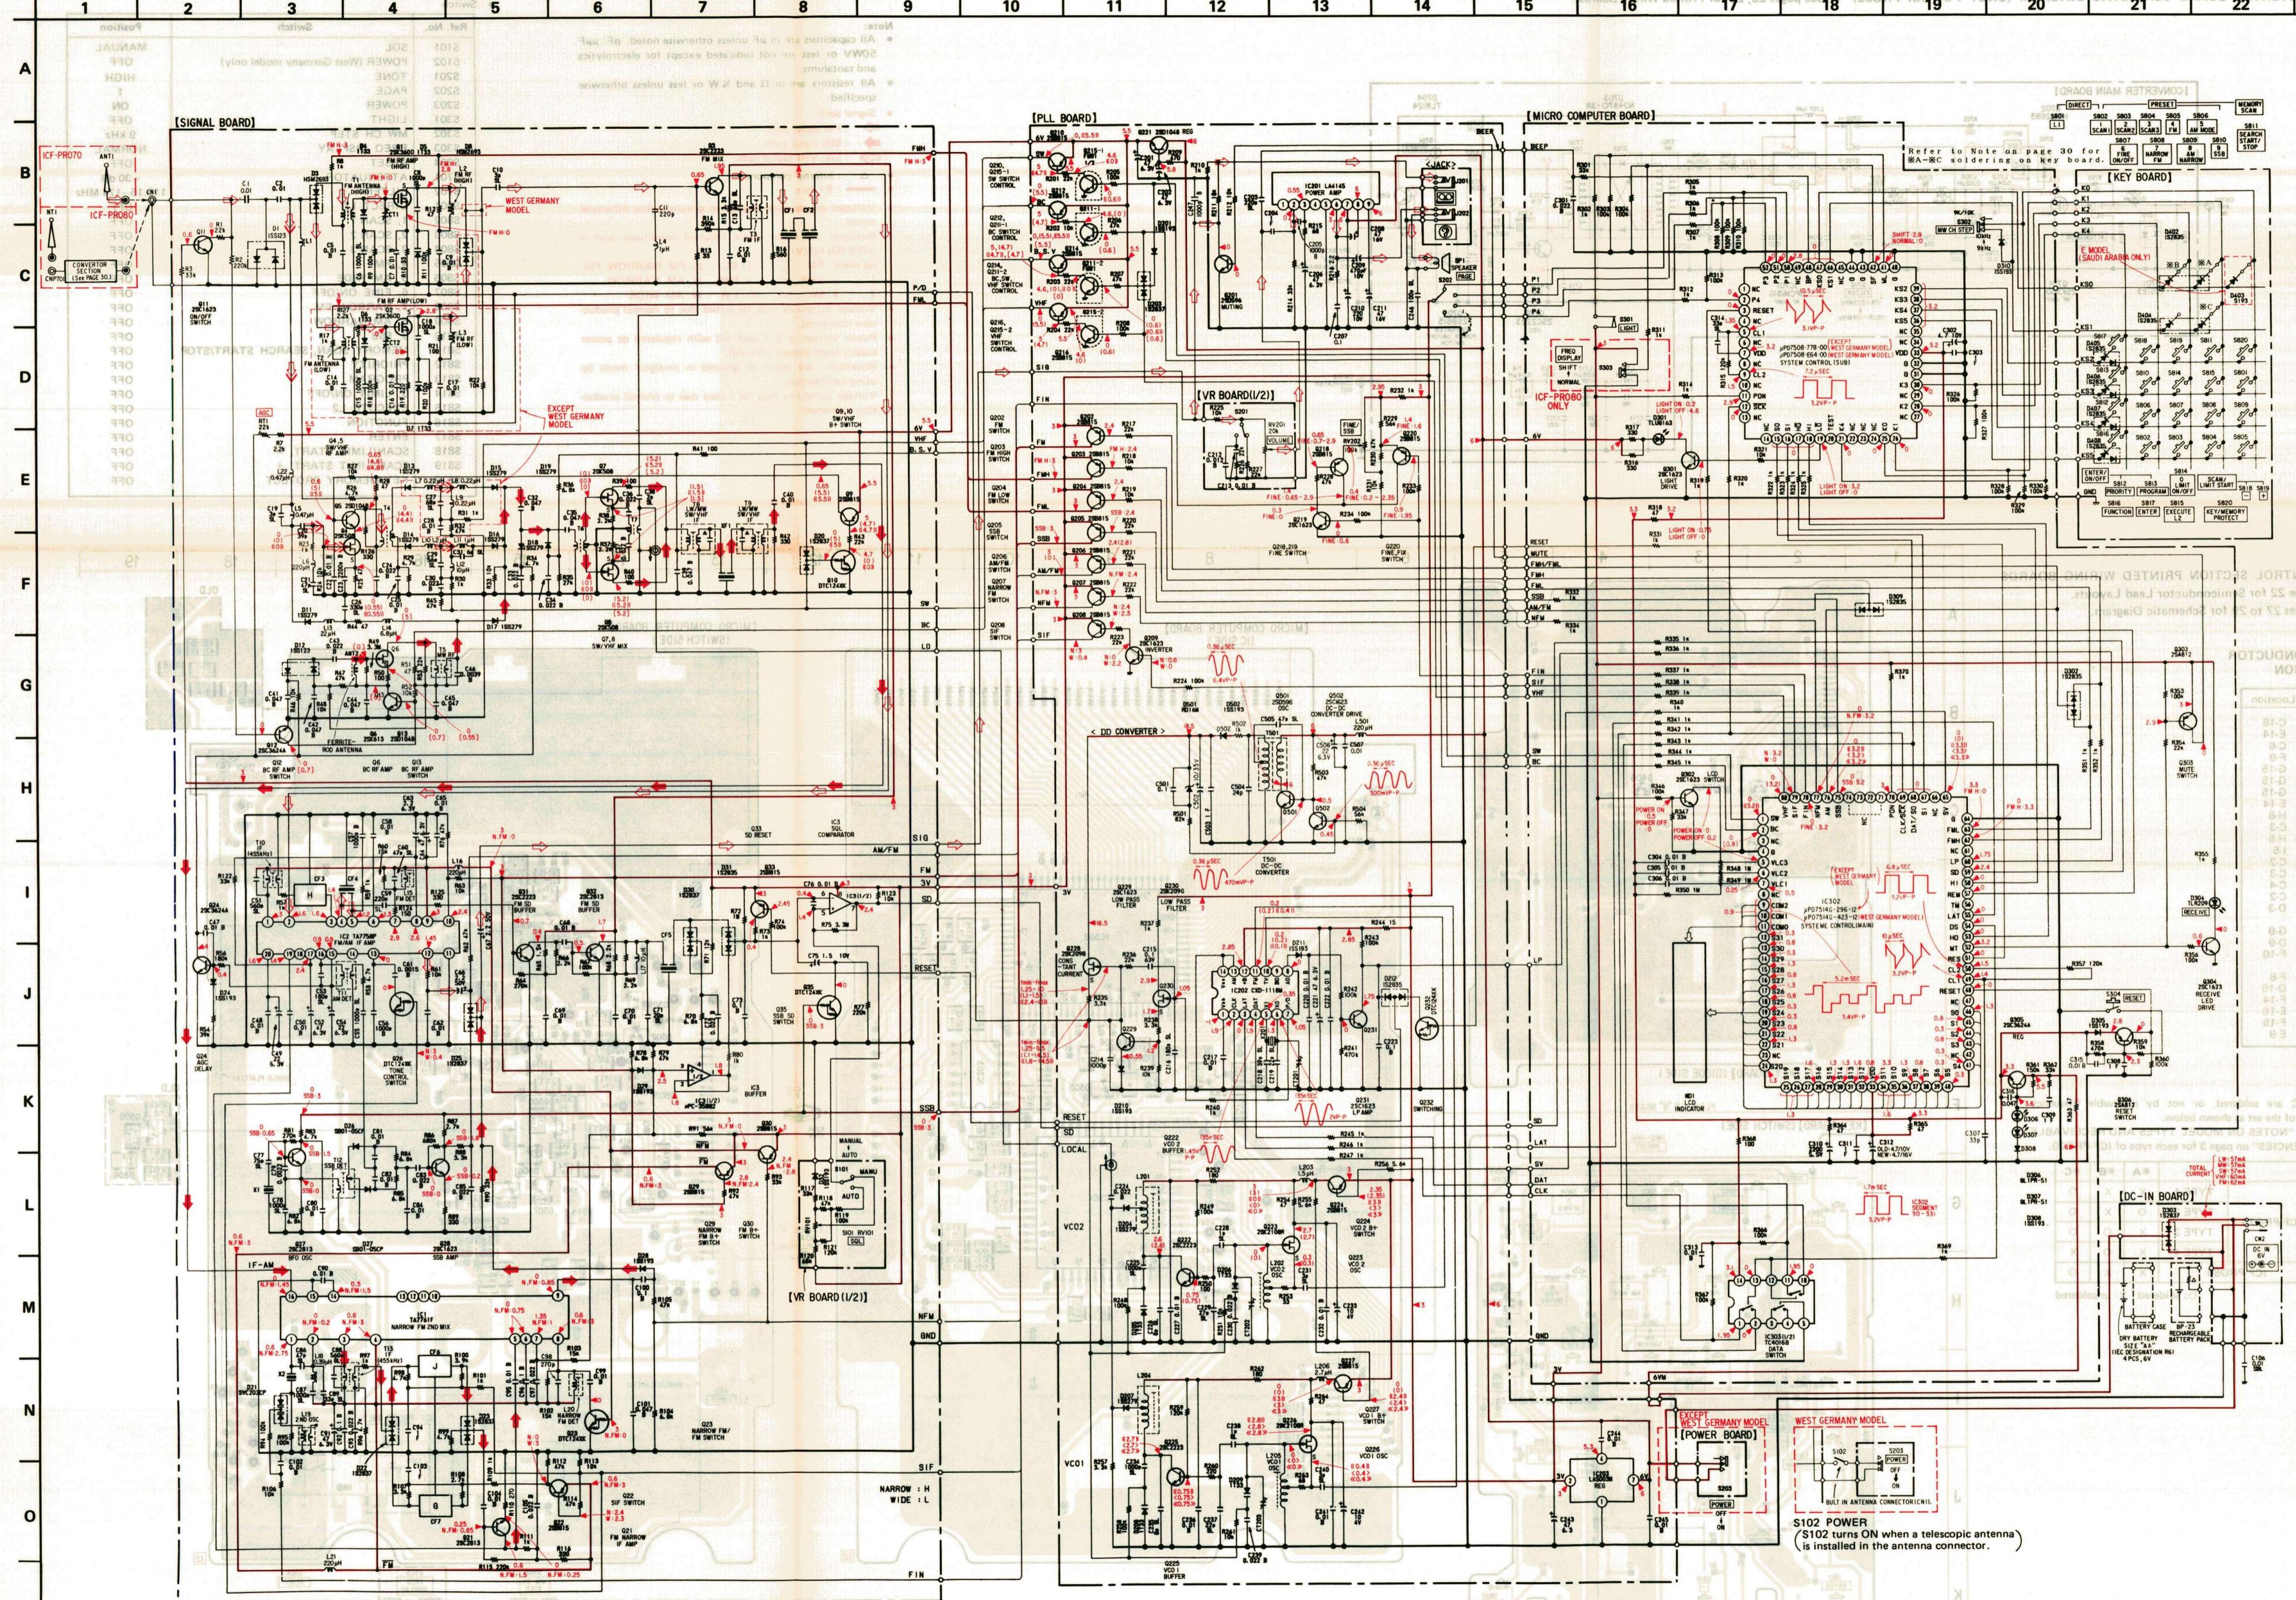

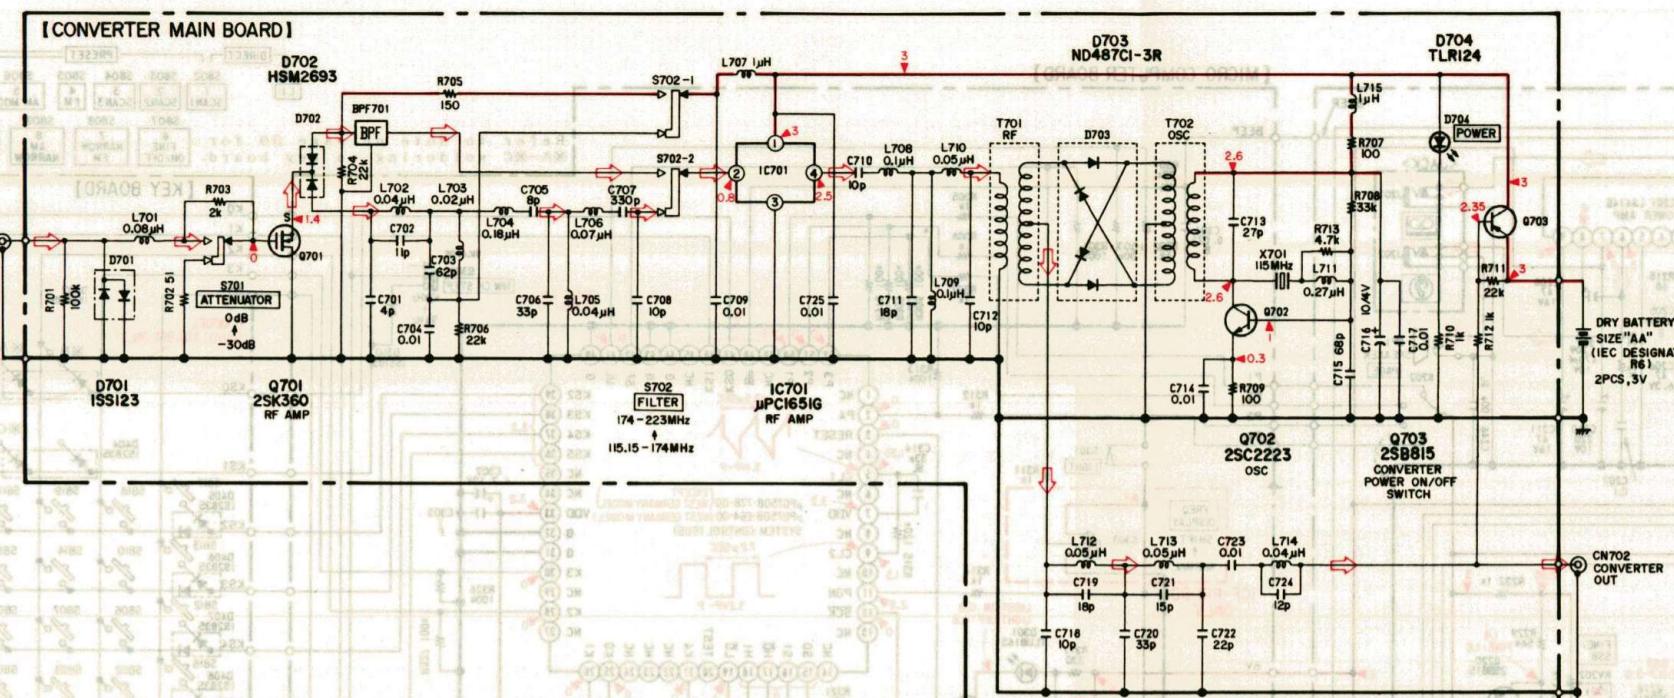

- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4} \text{W}$ or less unless otherwise specified.
 - Signal path:**
 - FM signal path: \rightarrow
 - MW signal path: \rightarrow
 - SW, VHF signal path: \Rightarrow
 - Δ : internal component.
 - B+ bus .
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken under detuned conditions with a VOM (50 $\text{k}\Omega/\text{V}$).
 - no mark: FM | BC N: FM: NARROW FM
(): VHF < MW N: AM NARROW
SW <> LW W: AM WIDE
 - Voltage variations may be noted due to normal production tolerances.
 - Power voltage is 6 V and fed with regulated dc power supply from battery terminal.
 - Waveforms are taken to ground in no-signal mode by using oscilloscope.
 - Voltage variations may be noted due to normal production tolerances.

Ref. No.	Switch	Position
S101	SOL	MANUAL OFF
S102	POWER (West Germany model only)	HIGH
S201	TONE	1 ON
S202	PAGE	OFF
S203	POWER	9 kHz
S301	LIGHT	NORMAL
S302	MW CH STEP	OFF
S303	FREQ DISPLAY	-30 dB
S304	RESET	115.15-174 MHz
S701	ATTENUATOR	
S702	FILTER	
S801	DIRECT L1	OFF
S802	1, SCAN 1	OFF
S803	2, SCAN 2	OFF
S804	3, SCAN 3	OFF
S805	4, FM	OFF
S806	5, AM WIDE	OFF
S807	6, FINE ON/OFF	OFF
S808	7, NARROW FM	OFF
S809	8, AM NARROW	OFF
S810	9, SSB	OFF
S811	MEMORY SCAN, SEARCH START/STOP	OFF
S812	PRIORITY	OFF
S813	PROGRAM	OFF
S814	0, LIMIT ON/OFF	OFF
S815	EXECUTE L2	OFF
S816	FUNCTION	OFF
S817	ENTER	OFF
S818	SCAN/LIMIT START, -	OFF
S819	SCAN/LIMIT START, +	OFF
S820	KEY/MEMORY PROTECT	OFF

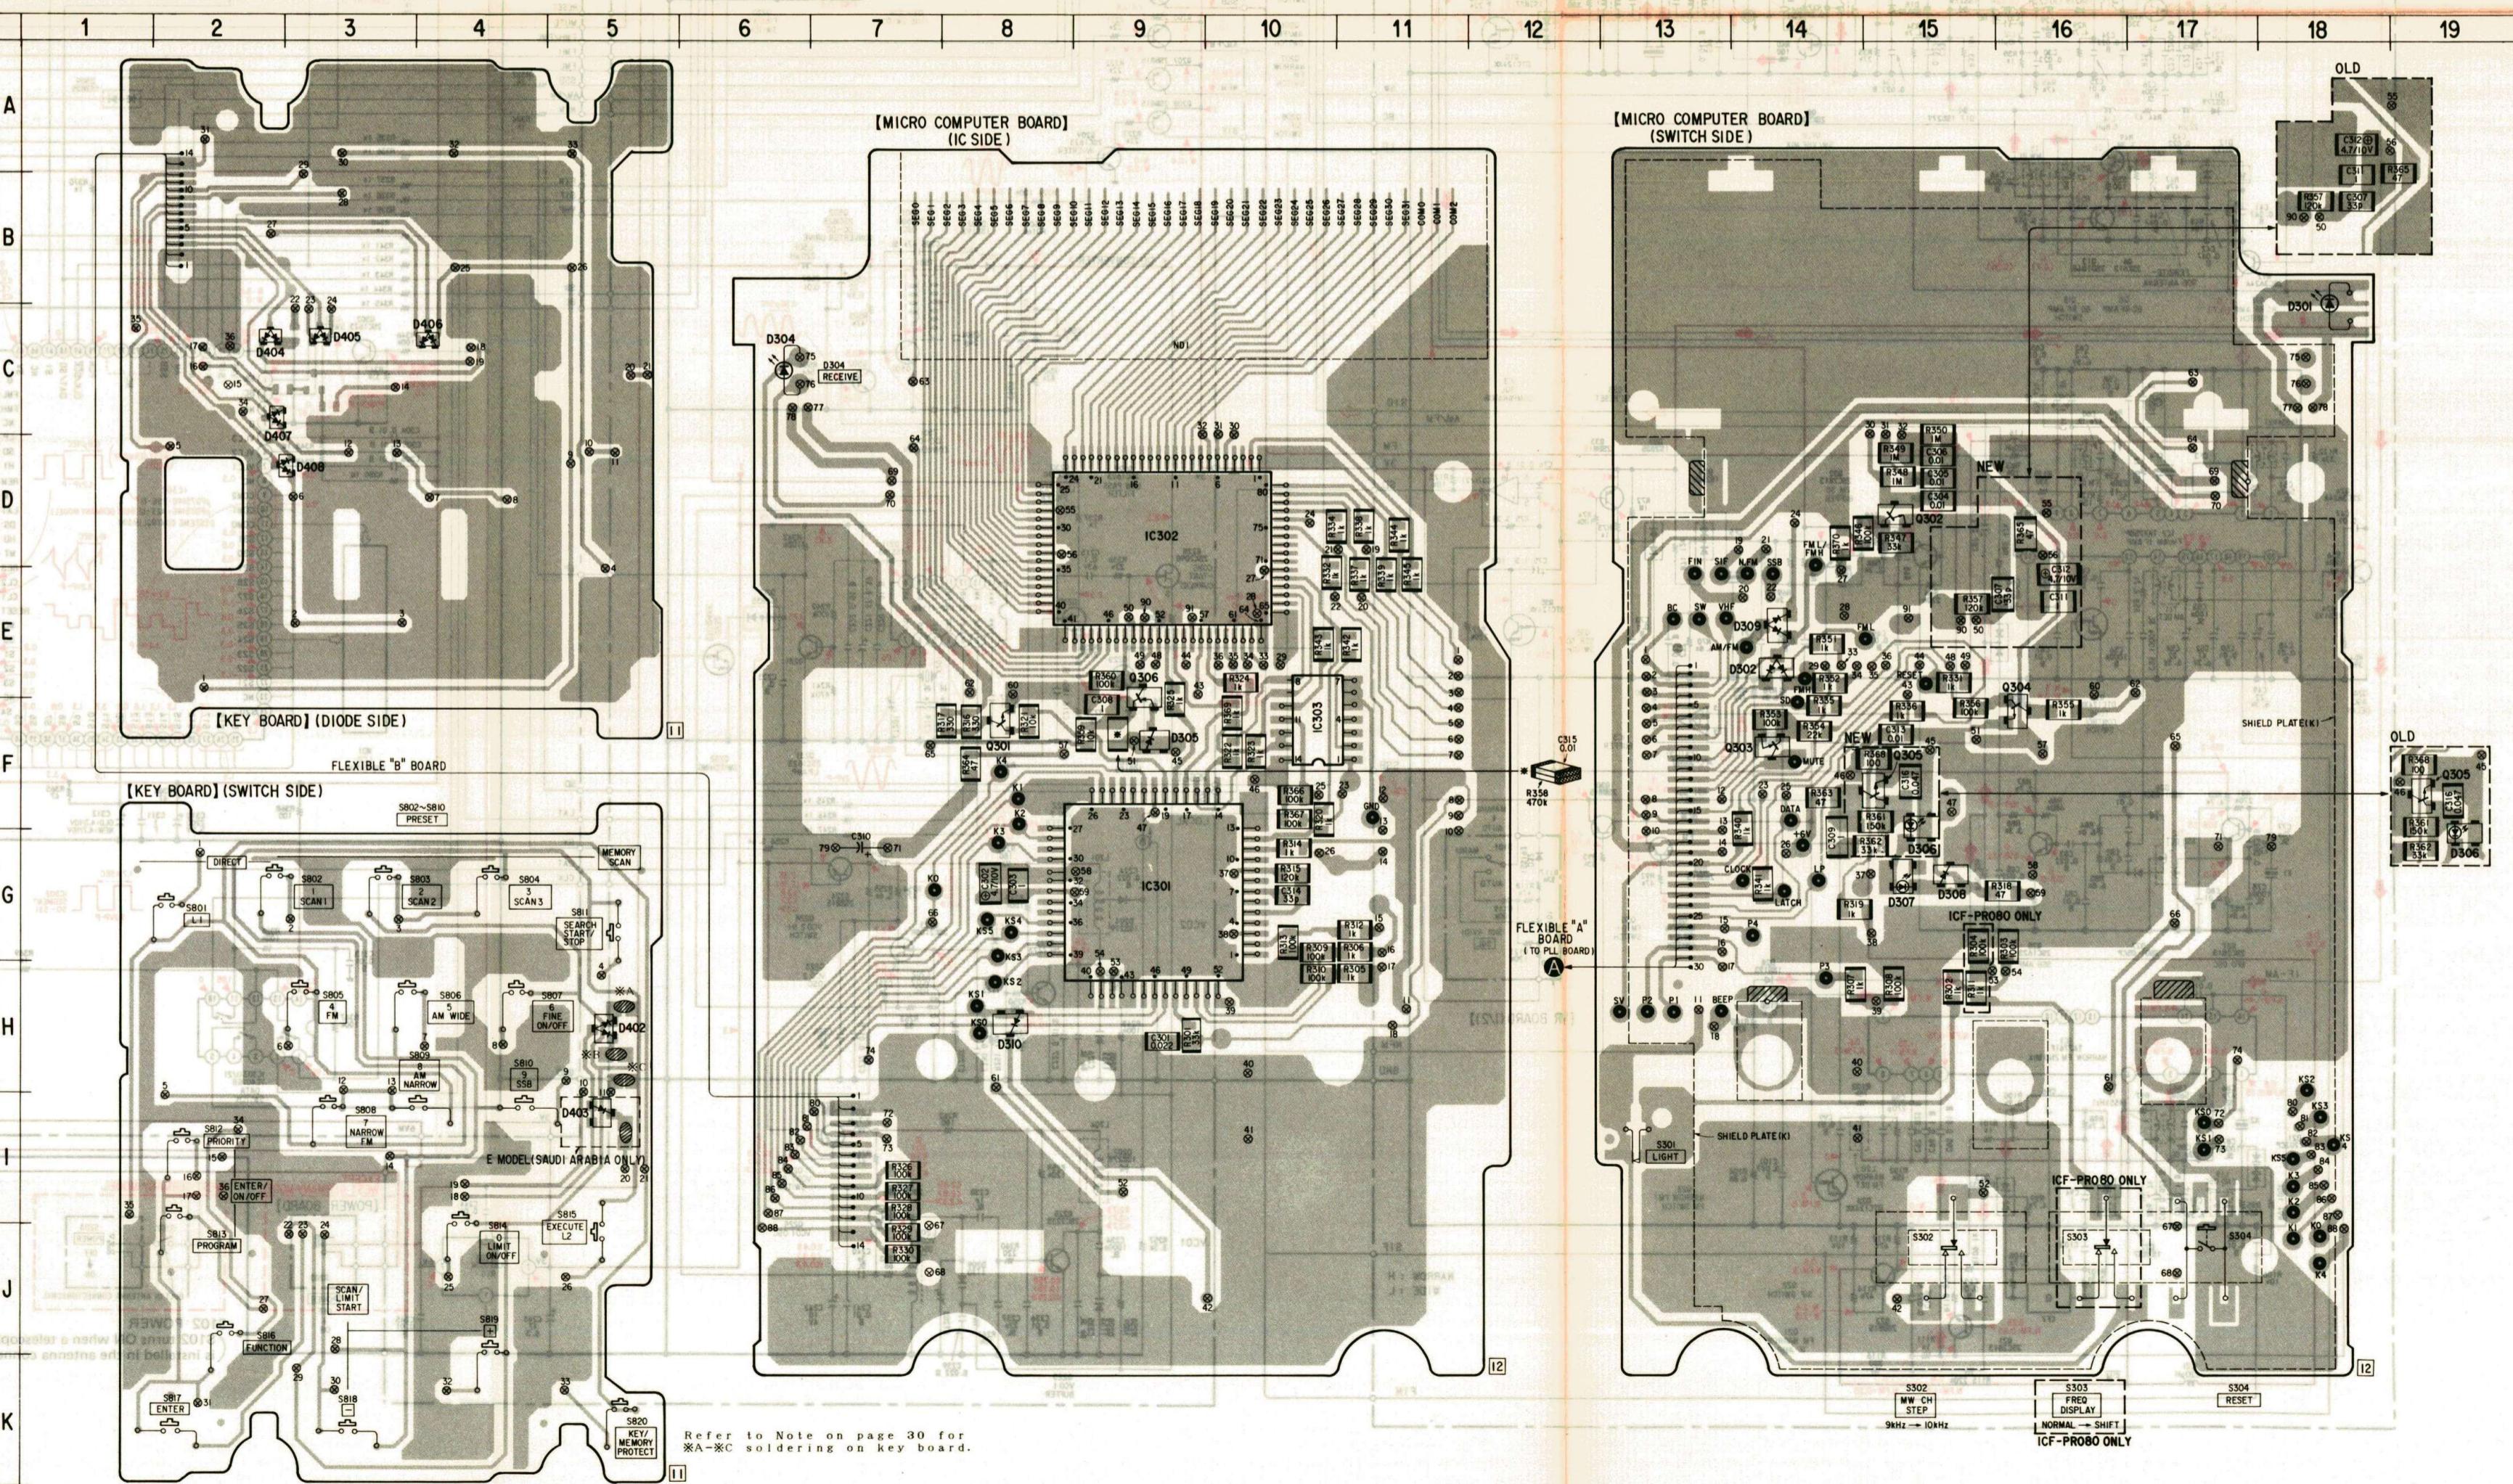


EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a callout number in the remark column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.
- Color Indication of Appearance Parts Example:

(RED) ... KNOB, BALANCE (WHITE)
 ↑ ↑
 Cabinet's Color Parts' Color

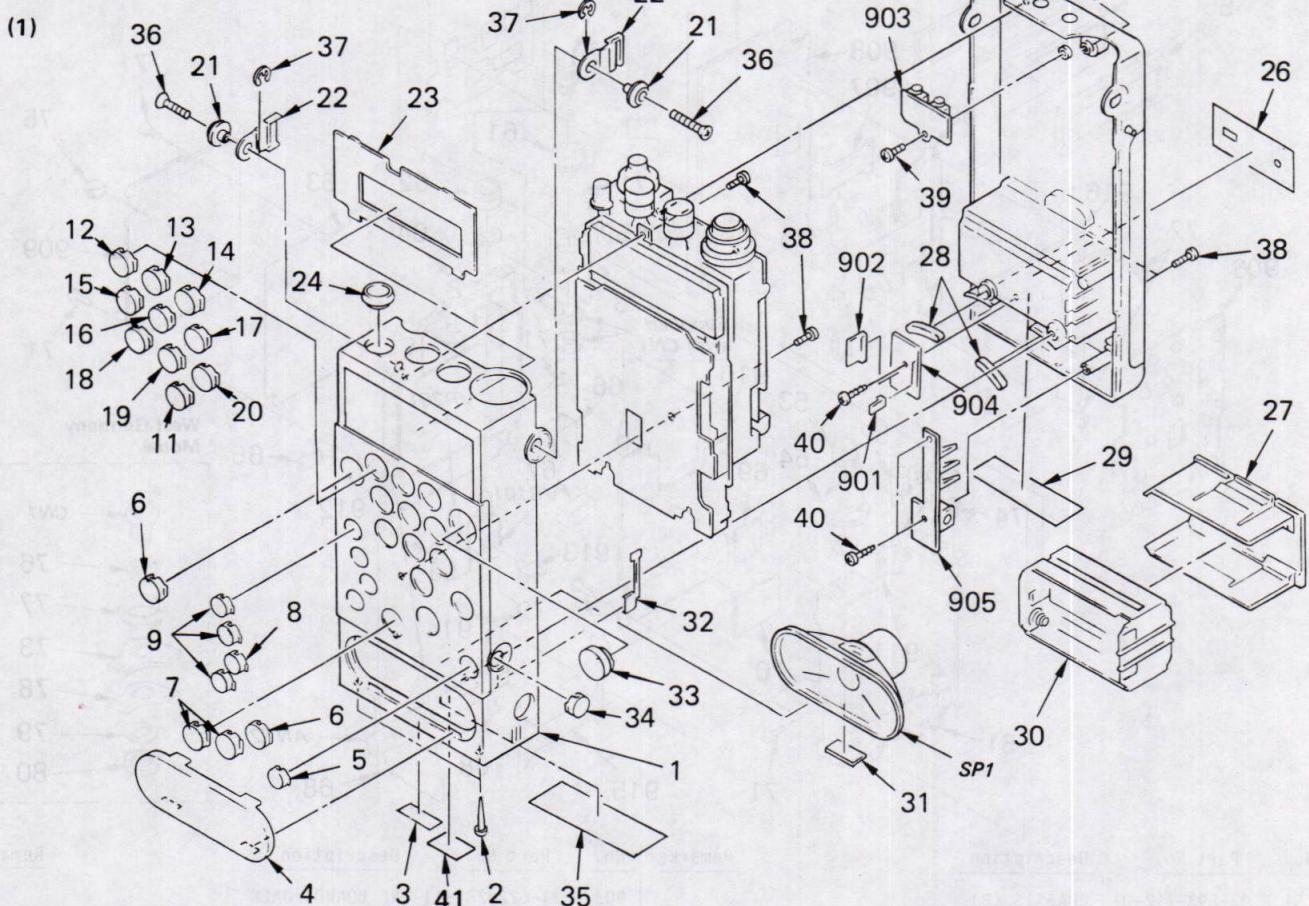


No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	X-3893-707-1	(ICF-PRO70: Saudi Arabia) ...CABINET (FRONT) ASSY		24	3-893-728-01	RING, POWER	
	X-3898-203-1	(ICF-PRO80).....CABINET (FRONT) ASSY		25	3-898-224-01	LID, REAR, CABINET	
	X-3898-204-1	(ICF-PRO70:E,AEP)...CABINET (FRONT) ASSY		26	*3-898-203-01	(ICF-PRO70)...LABEL, SWITCH	
	X-3897-305-1	(ICF-PRO70:West Germany) ...CABINET (FRONT) ASSY			*3-898-204-01	(ICF-PRO80)...LABEL, SWITCH	
2	3-427-542-00	STOPER		27	3-893-706-01	HOLDER, BATTERY	
3	*3-701-999-00	LABEL, SERIAL NUMBER		28	3-881-931-00	CUSHION, SPEAKER	
4	3-898-226-01	PANEL, SPEAKER		29	3-893-722-01	PLATE, BLIND	
5	3-893-717-01	BUTTON, KP		30	X-3564-820-0	HOLDER ASSY, BATTERY	
6	3-893-704-01	BUTTON (B), MEMORY		31	9-911-838-XX	CUSHION, SPEAKER	
7	3-893-704-11	BUTTON (B), MEMORY		32	*3-898-215-01	SPRING (2)	
8	3-893-716-21	BUTTON, DOUBLE KEY		33	3-893-715-01	BUTTON, S/S	
9	3-893-716-11	BUTTON, DOUBLE KEY		34	3-893-717-11	BUTTON, KP	
11	3-893-703-01	BUTTON (A), MEMORY (0)		35	*3-898-205-01	(ICF-PRO70)...LABEL, MODEL NUMBER (E)	
12	3-893-703-11	BUTTON (A), MEMORY (1)			*3-898-202-01	(ICF-PRO80)...LABEL, MODEL NUMBER (U)	
13	3-893-703-21	BUTTON (A), MEMORY (2)		36	7-621-662-80	SCREW +RK 2.6X12	
14	3-893-703-31	BUTTON (A), MEMORY (3)		37	7-624-109-04	STOP RING 5.0, TYPE -E	
15	3-893-703-41	BUTTON (A), MEMORY (4)		38	7-621-284-30	SCREW +P 2.6X8	
16	3-893-703-51	BUTTON (A), MEMORY (5)		39	7-621-259-25	SCREW +P 2.6X4	
17	3-893-703-61	BUTTON (A), MEMORY (6)		40	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
18	3-893-703-71	BUTTON (A), MEMORY (7)		901	*1-560-456-00	PIN, CONNECTOR 2P	
19	3-893-703-81	BUTTON (A), MEMORY (8)		902	*1-560-591-00	PIN, CONNECTOR 7P	
20	3-893-703-91	BUTTON (A), MEMORY (9)		904	*1-622-289-11	PC BOARD, TRANSLATION	
21	3-893-726-01	COLLAR, BELT			*1-622-288-11	PC BOARD, DC-IN	
22	3-893-730-01	BRACKET, BELT		SP1	1-503-374-11	SPEAKER	
23	3-898-227-01	(ICF-PRO70:E,ICF-PRO80)...PLATE, BACK					
	3-898-227-21	(ICF-PRO70:Saudi Arabia)...PLATE, BACK					
	3-898-227-31	(ICF-PRO70:AEP).....PLATE, BACK					
	3-898-227-12	(ICF-PRO70:West Germany)...PLATE, BACK					

(2)

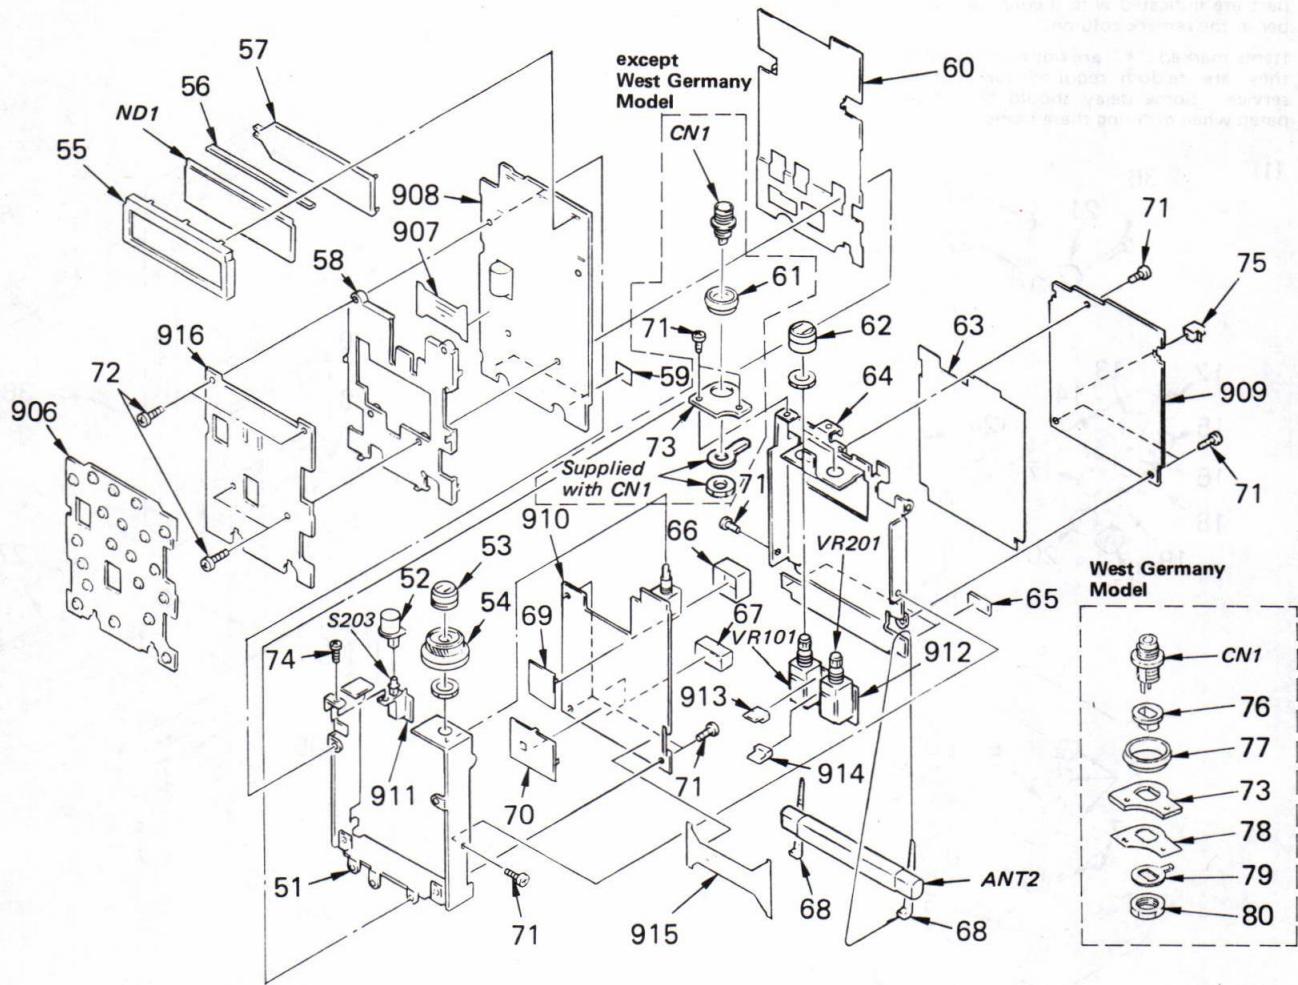

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	*3-893-712-01	CHASSIS (B)		903	*1-622-287-11	PC BOARD, JACK	
52	3-893-714-01	BUTTON (POWER)		906	1-571-044-11	SWITCH, RUBBER KEY (S801-820)	
53	3-898-213-01	KNOB (FINE)		907	1-622-336-11	PC BOARD, FLEXIBLE (B)	
54	3-898-214-01	KNOB (PAGE)		908	A-3661-044-A	(ICF-PRO80)...MOUNTED PCB, MICRO COMPUTER	
55	*3-898-216-01	HOLDER, LCD			A-3661-045-A	(ICF-PRO70:EXCEPT West Germany)	
56	1-535-656-11	CONDUCTOR, CONNECTOR			A-3661-075-A	(ICF-PRO70:West Germany)	
57	*3-893-721-01	CHIP, ILLUMINATION				...MOUNTED PCB, MICRO COMPUTER	
58	*3-898-223-01	SPACER		909	A-3660-680-A	(EXCEPT West Germany)	
59	*3-893-763-01	SPACER, PC BOARD			A-3660-718-A	...MOUNTED PCB, SIGNAL (West Germany)	
60	*X-3893-701-1	PLATE (K) ASSY, SHIELD		910	A-3661-043-A	MOUNTED PCB, PLL	
61	3-893-719-01	RING, ANTENNA		911	*1-622-285-11	PC BOARD, POWER	
62	3-893-713-01	KNOB (A)		912	*1-622-286-11	PC BOARD, VR	
63	*3-893-755-01	INSULATOR (C)		913	*1-560-466-00	PIN, CONNECTOR 3P	
64	*3-893-711-01	CHASSIS (A)		914	*1-560-466-00	PIN, CONNECTOR 3P	
65	9-911-838-XX	CUSHION, SPEAKER		915	1-622-335-11	PC BOARD, FLEXIBLE (A)	
66	*3-898-220-01	PLATE, SHIELD, D/D,M		916	*1-622-284-11	PC BOARD, KEY	
67	*3-898-218-01	PLATE (2), SHIELD		ANT2	1-402-272-11	ANTENNA, FERRITE-ROD	
68	*3-671-893-00	CLAMP (LOW TYPE)		CN1	*1-563-956-11	(EXCEPT West Germany)...SOCKET, CONNECTOR (West Germany)	
69	*X-3898-202-1	PLATE (D/D,P) ASSY, SHIELD		CN1	*1-565-451-11	...SOCKET, CONNECTOR (WITH SWITCH S102)1P	
70	*X-3898-201-1	PLATE (1) ASSY, SHIELD		RV101	1-230-538-11	RES, VAR, CARBON (WITH SW) 50K (SQL)	
71	7-621-259-25	SCREW +P 2.6X4		RV201	1-237-670-11	RES, VAR, CARBON (WITH SW) 20K (VOLUME,TONE)	
72	7-621-284-30	SCREW +P 2.6X8		S203	1-554-957-11	SWITCH, PUSH (1 KEY)(POWER)	
73	*3-893-720-01	HOLDER, ANTENNA					
74	7-621-255-25	SCREW +P 2X4					
75	*3-893-770-01	CASE (CF), SHIELD					
76	3-893-782-01	(West Germany)...COLLAR					
77	3-893-783-01	(West Germany)...RING, ANTENNA					
78	3-893-781-01	(West Germany)...SPACER					
79	3-893-784-01	(West Germany)...LUG					
80	3-897-115-01	(West Germany)...NUT, VOLUME					

(3) Applicable to ICF-PRO80

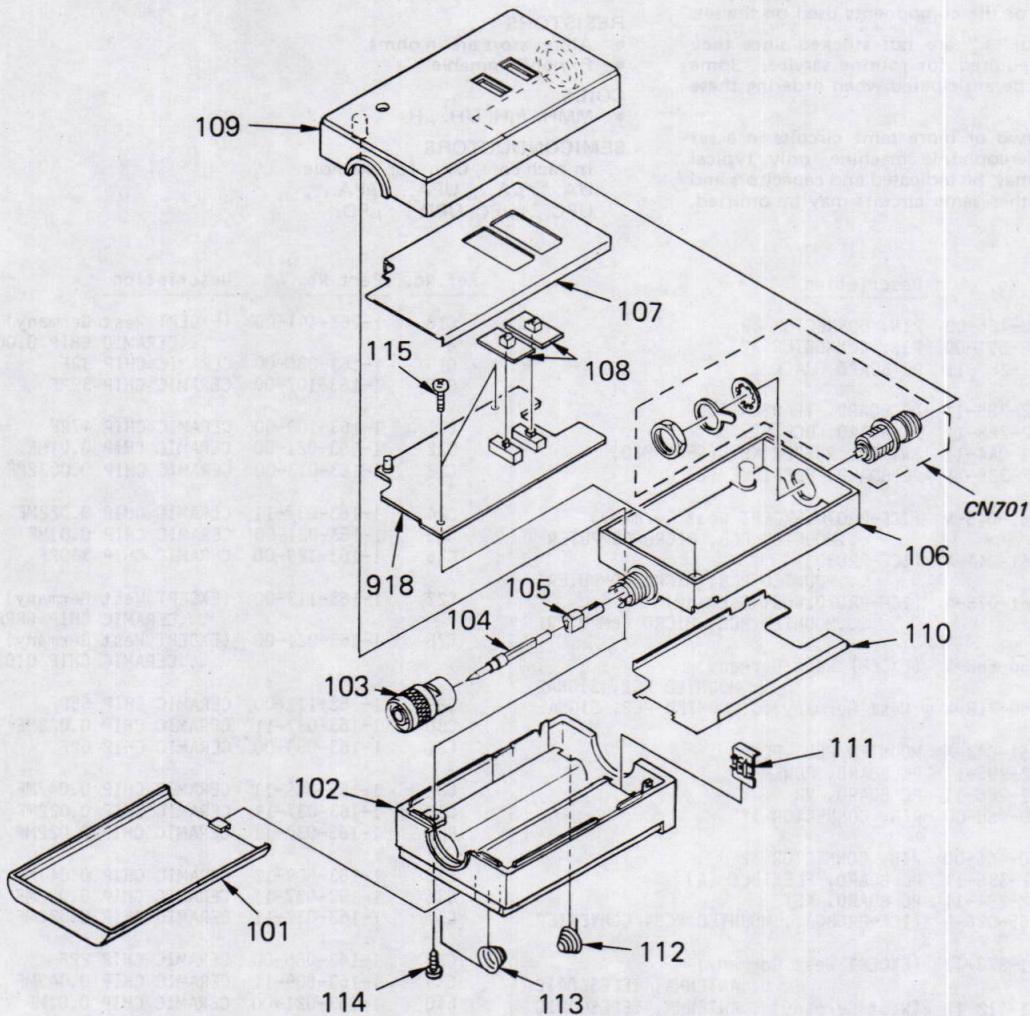

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
101	3-898-234-01	(ICF-PRO80)...LID, BATTERY CASE		110	*3-898-232-01	(ICF-PRO80)...PLATE (B), SHIELD	
102	3-898-242-01	(ICF-PRO80)...COVER (B)		111	3-898-229-01	(ICF-PRO80)...TERMINAL BOARD, PLUS	
103	*3-898-239-01	(ICF-PRO80)...SHELL, TNC-P		112	3-898-230-01	(ICF-PRO80)...SPRING	
104	*3-898-237-01	(ICF-PRO80)...CONTACT		113	3-898-243-01	(ICF-PRO80)...SPRING	
105	*3-898-238-01	(ICF-PRO80)...SLEEVE		114	7-685-134-19	SCREW +P 2.6X8 TYPE2 SLIT	
106	*X-3898-205-1	(ICF-PRO80)...CHASSIS ASSY		115	7-621-259-25	SCREW +P 2.6X4	
107	*3-898-231-01	(ICF-PRO80)...PLATE (A), SHIELD		918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER	
108	3-898-235-01	COVER, SWITCH		CN701	*1-563-956-21	(ICF-PRO80)...SOCKET, CONNECTOR	
109	3-898-241-01	(ICF-PRO80)...COVER (A)					

SECTION 5

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked “★” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuits in a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:MF: μ F, PF: $\mu\mu$ F.**RESISTORS**

- All resistors are in ohms.
- F: nonflammable

COILS

- MMH: mH, UH: μ H

SEMICONDUCTORSIn each case, U: μ , for example:UA...: μ A..., UPA...: μ PA...,
UPC...: μ PC, UPD...: μ PD...

Ref.No.	Part No.	Description
901	*1-560-456-00	PIN, CONNECTOR 2P
902	*1-560-591-00	PIN, CONNECTOR 7P
903	*1-622-287-11	PC BOARD, JACK
904	*1-622-289-11	PC BOARD, TRANSLATION
905	*1-622-288-11	PC BOARD, DC-IN
906	1-571-044-11	SWITCH, RUBBER KEY (S801-820)
907	1-622-336-11	PC BOARD, FLEXIBLE (B)
908	A-3661-045-A	(ICF-PRO70:EXCEPT West Germany) ...MOUNTED PCB, MICRO COMPUTER
	A-3661-044-A	(ICF-PRO80) ...MOUNTED PCB, MICRO COMPUTER
	A-3661-075-A	(ICF-PRO70:West Germany) ...MOUNTED PCB, MICRO COMPUTER
909	A-3660-680-A	(EXCEPT West Germany) ...MOUNTED PCB, SIGNAL
	A-3660-718-A	(West Germany)...MOUNTED PCB, SIGNAL
910	A-3661-043-A	MOUNTED PCB, PLL
911	*1-622-285-11	PC BOARD, POWER
912	*1-622-286-11	PC BOARD, VR
913	*1-560-466-00	PIN, CONNECTOR 3P
914	*1-560-466-00	PIN, CONNECTOR 3P
915	1-622-335-11	PC BOARD, FLEXIBLE (A)
916	*1-622-284-11	PC BOARD, KEY
918	A-3665-026-A	(ICF-PRO80)...MOUNTED PCB, CONVERTER
ANT1	1-501-377-11	(EXCEPT West Germany) ...ANTENNA, TELESCOPIC
ANT1	1-501-412-11	(West Germany)...ANTENNA, TELESCOPIC
ANT2	1-402-272-11	ANTENNA, FERRITE-ROD
BPF701	1-235-763-11	(ICF-PRO80)...FILTER, BAND PASS
C1	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C2	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C5	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C6	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C7	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C8	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C9	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C10	1-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C11	1-163-125-00	CERAMIC CHIP 220PF 5% 50V
C12	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C13	1-163-113-00	CERAMIC CHIP 68PF 5% 50V
C14	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C15	1-163-141-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.001MF 5% 50V
C16	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C17	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V

Ref.No.	Part No.	Description
C18	1-163-141-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.001MF 5% 50V
C19	1-163-086-00	CERAMIC CHIP 3PF 0.25PF 50V
C20	1-163-107-00	CERAMIC CHIP 39PF 5% 50V
C21	1-163-109-00	CERAMIC CHIP 47PF 5% 50V
C22	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C23	1-163-013-00	CERAMIC CHIP 0.0022MF 10% 50V
C24	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C25	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C26	1-163-129-00	CERAMIC CHIP 330PF 5% 50V
C27	1-163-113-00	(EXCEPT West Germany) ...CERAMIC CHIP 68PF 5% 50V
C28	1-163-021-00	(EXCEPT West Germany) ...CERAMIC CHIP 0.01MF 10% 50V
C29	1-163-111-00	CERAMIC CHIP 56PF 5% 50V
C30	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C31	1-163-089-00	CERAMIC CHIP 6PF 0.25PF 50V
C32	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C33	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C34	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C35	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C36	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C37	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C38	1-163-085-00	CERAMIC CHIP 2PF 0.25PF 50V
C39	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C40	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C41	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C42	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C43	1-163-037-11	CERAMIC CHIP 0.022MF 10% 25V
C44	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C45	1-163-809-11	CERAMIC CHIP 0.047MF 10% 25V
C46	1-163-016-00	CERAMIC CHIP 0.0039MF 10% 50V
C47	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C48	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C49	1-124-778-00	ELECT 22MF 20% 6.3V
C50	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C51	1-163-135-00	CERAMIC CHIP 560PF 5% 50V
C52	1-126-205-00	ELECT 47MF 20% 6.3V
C53	1-163-123-00	CERAMIC CHIP 180PF 5% 50V
C54	1-124-778-00	ELECT 22MF 20% 6.3V
C55	1-163-141-00	CERAMIC CHIP 0.001MF 5% 50V
C56	1-163-141-00	CERAMIC CHIP 0.001MF 10% 50V
C57	1-163-141-00	CERAMIC CHIP 0.001MF 10% 50V
C58	1-163-021-00	CERAMIC CHIP 0.01MF 10% 50V
C59	1-163-125-00	CERAMIC CHIP 220PF 5% 50V
C60	1-163-109-00	CERAMIC CHIP 47PF 5% 50V
C61	1-163-145-00	CERAMIC CHIP 0.0015MF 10% 50V

Ref.No.	Part No.	Description			Ref.No.	Part No.	Description		
C62	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C214	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C63	1-135-099-00	TANTAL. CHIP 2.2MF	10%	6.3V	C215	1-130-768-00	FILM 0.1MF	10%	63V
C64	1-126-205-00	ELECT 47MF	20%	6.3V	C216	1-163-123-00	CERAMIC CHIP 180PF	5%	50V
C65	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C217	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C66	1-126-195-00	ELECT 2.2MF	20%	50V	C218	1-163-107-00	CERAMIC CHIP 39PF	5%	50V
C67	1-126-195-00	ELECT 2.2MF	20%	50V	C219	1-163-101-00	CERAMIC CHIP 22PF	5%	50V
C68	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C220	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C69	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C221	1-126-205-00	ELECT 47MF	20%	6.3V
C70	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C222	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C71	1-163-100-00	CERAMIC CHIP 20PF	5%	50V	C223	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V
C72	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C224	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C73	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	C225	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C74	1-162-611-00	CERAMIC CHIP 1MF		25V	C226	1-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V
C75	1-135-095-00	TANTAL. CHIP 1.5MF	10%	10V	C227	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C76	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C228	1-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V
C77	1-163-114-00	CERAMIC CHIP 75PF	5%	50V	C229	1-163-103-00	CERAMIC CHIP 27PF	5%	50V
C78	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	C230	1-161-055-00	CERAMIC 0.022MF	20%	25V
C79	1-163-013-00	CERAMIC CHIP 0.0022MF	10%	50V	C231	1-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V
C80	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C232	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C81	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C233	1-135-104-00	TANTAL. CHIP 10MF	10%	4V
C82	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C234	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V
C83	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C235	1-163-091-00	CERAMIC CHIP 8PF	0.25PF	50V
C84	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C236	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C85	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C237	1-163-101-00	CERAMIC CHIP 22PF	5%	50V
C86	1-163-109-00	CERAMIC CHIP 47PF	5%	50V	C238	1-163-083-00	CERAMIC CHIP 1PF	0.25PF	50V
C87	1-163-141-00	CERAMIC CHIP 0.001MF	5%	50V	C239	1-161-055-00	CERAMIC 0.022MF	20%	25V
C88	1-163-135-00	CERAMIC CHIP 560PF	5%	50V	C240	1-163-086-00	CERAMIC CHIP 3PF	0.25PF	50V
C89	1-163-105-00	CERAMIC CHIP 33PF	5%	50V	C241	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C90	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C242	1-135-157-21	TANTAL. CHIP 10MF	10%	4V
C91	1-126-205-00	ELECT 47MF	20%	6.3V	C243	1-126-205-00	ELECT 47MF	20%	6.3V
C92	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	C244	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C93	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C245	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C94	1-162-638-11	CERAMIC CHIP 1MF		16V	C246	1-163-117-00	CERAMIC CHIP 100PF	5%	50V
C95	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C247	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V
C96	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	C301	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V
C97	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C302	1-135-096-21	TANTAL. CHIP 4.7MF	10%	10V
C98	1-163-127-00	CERAMIC CHIP 270PF	5%	50V	C303	1-162-611-00	CERAMIC CHIP 1MF		25V
C99	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C304	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C100	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	C305	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C101	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V	C306	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C102	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C307	1-163-105-00	CERAMIC CHIP 33PF	5%	50V
C103	1-162-611-00	CERAMIC CHIP 1MF		25V	C308	1-162-611-00	CERAMIC CHIP 1MF		25V
C104	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V	C309	1-162-611-00	CERAMIC CHIP 1MF		25V
C105	1-163-037-11	CERAMIC CHIP 0.022MF	10%	25V	C310	1-126-166-11	ELECT 2200MF		5.5V
C106	1-161-051-00	CERAMIC 0.01MF	20%	25V	C311	1-162-611-00	CERAMIC CHIP 1MF		25V
C201	1-126-205-11	ELECT 47MF	20%	6.3V	C312	1-135-096-21	TANTAL. CHIP 4.7MF	10%	10V
C202	1-126-205-11	ELECT 47MF	20%	6.3V	C313	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C203	1-163-125-00	CERAMIC CHIP 220PF	5%	50V	C314	1-163-105-00	CERAMIC CHIP 33PF	5%	50V
C204	1-162-611-00	CERAMIC CHIP 1MF		25V	C315	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C205	1-163-141-00	CERAMIC CHIP 0.001MF	10%	50V	C316	1-163-809-11	CERAMIC CHIP 0.047MF	10%	25V
C206	1-126-205-11	ELECT 47MF	20%	6.3V	C501	1-130-768-00	FILM 0.1MF	10%	63V
C207	1-163-077-00	CERAMIC CHIP 0.1MF	10%	25V	C502	1-126-200-00	ELECT 10MF	20%	35V
C208	1-126-204-11	ELECT 47MF	20%	16V	C503	1-162-611-00	CERAMIC CHIP 1MF		25V
C209	1-124-472-11	ELECT 470MF	20%	10V	C504	1-163-102-00	CERAMIC CHIP 24PF	5%	50V
C210	1-126-176-11	ELECT 220MF	20%	10V	C505	1-163-109-00	CERAMIC CHIP 47PF	5%	50V
C211	1-126-204-11	ELECT 47MF	20%	16V	C506	1-124-778-00	ELECT 22MF	20%	6.3V
C212	1-163-022-00	CERAMIC CHIP 0.012MF	10%	50V	C507	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V
C213	1-163-021-00	CERAMIC CHIP 0.01MF	10%	50V					

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description	
C701	1-163-087-00	(ICF-PRO80) ...CERAMIC CHIP 4PF	0.25PF 50V	CT1	1-141-347-11	CAP, VAR, TRIMMER (CHIP)
C702	1-163-094-00	(ICF-PRO80) ...CERAMIC CHIP 11PF	5% 50V	CT2	1-141-347-11	(EXCEPT West Germany) ...CAP, VAR, TRIMMER (CHIP)
C703	1-163-112-00	(ICF-PRO80) ...CERAMIC CHIP 62PF	5% 50V	CT201	1-141-311-11	CAP, VAR, TRIMMER (CHIP)
C704	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	CT202	1-141-311-11	CAP, VAR, TRIMMER (CHIP)
C705	1-163-091-00	(ICF-PRO80) ...CERAMIC CHIP 8PF	0.25PF 50V	CT203	1-141-347-11	CAP, VAR, TRIMMER (CHIP)
C706	1-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5% 50V	D1	8-719-101-23	DIODE ISS123
C707	1-163-129-00	(ICF-PRO80) ...CERAMIC CHIP 330PF	5% 50V	D3	8-719-941-25	DIODE HSM2693
C708	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5% 50V	D4	8-713-300-00	DIODE 1T33
C709	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	D5	8-713-300-00	DIODE 1T33 (EXCEPT West Germany)...DIODE 1T33
C710	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5% 50V	D6	8-713-300-00	(EXCEPT West Germany)...DIODE 1T33
C711	1-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5% 50V	D7	8-713-300-00	(EXCEPT West Germany)...DIODE 1T33
C712	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5% 50V	D8	8-719-941-25	(EXCEPT West Germany)...DIODE HSM2693
C713	1-163-103-00	(ICF-PRO80) ...CERAMIC CHIP 27PF	5% 50V	D11	8-719-123-79	DIODE ISS279
C714	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	D12	8-719-101-23	DIODE ISS123
C715	1-163-113-00	(ICF-PRO80) ...CERAMIC CHIP 68PF	5% 50V	D13	8-719-123-79	(EXCEPT West Germany)...DIODE ISS279
C716	1-135-157-21	(ICF-PRO80) ...TANTAL. CHIP 10MF	20% 4V	D14	8-719-123-79	DIODE ISS279
C717	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	D15	8-719-123-79	(EXCEPT West Germany)...DIODE ISS279
C718	1-163-093-00	(ICF-PRO80) ...CERAMIC CHIP 10PF	5% 50V	D16	8-719-123-79	DIODE ISS279
C719	1-163-099-00	(ICF-PRO80) ...CERAMIC CHIP 18PF	5% 50V	D17	8-719-123-79	DIODE ISS279
C720	1-163-105-00	(ICF-PRO80) ...CERAMIC CHIP 33PF	5% 50V	D18	8-719-123-79	DIODE ISS279
C721	1-163-097-00	(ICF-PRO80) ...CERAMIC CHIP 15PF	5% 50V	D19	8-719-123-79	DIODE ISS279
C722	1-163-101-00	(ICF-PRO80) ...CERAMIC CHIP 22PF	5% 50V	D20	8-719-100-05	DIODE IS2837
C723	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	D21	8-719-939-00	DIODE SVC203CP
C724	1-163-095-00	(ICF-PRO80) ...CERAMIC CHIP 12PF	5% 50V	D22	8-719-100-05	DIODE IS2837
C725	1-163-021-00	(ICF-PRO80) ...CERAMIC CHIP 0.01MF	10% 50V	D23	8-719-100-05	DIODE IS2837
CF1	1-567-389-11	FILTER, CERAMIC		D24	8-719-801-48	DIODE ISS193
CF2	1-567-389-11	FILTER, CERAMIC		D25	8-719-100-05	DIODE IS2837
CF3	1-567-844-11	FILTER, CERAMIC		D26	8-719-938-72	DIODE SB01-05CP
CF4	1-567-389-11	FILTER, CERAMIC		D27	8-719-938-72	DIODE SB01-05CP
CF5	1-527-483-00	FILTER, CERAMIC		D28	8-719-801-48	DIODE ISS193
CF6	1-567-846-11	FILTER, CERAMIC		D29	8-719-801-48	DIODE ISS193
CF7	1-567-845-11	FILTER, CERAMIC		D30	8-719-100-05	DIODE IS2837
CN1	*1-563-956-11	(EXCEPT West Germany)..SOCKET, CONNECTOR		D31	8-719-100-03	DIODE IS2835
CN1	*1-565-451-11	(West Germany)		D201	8-719-801-48	DIODE ISS193
		... SOCKET, CONNECTOR (WITH SWITCH S102)1P		D203	8-719-100-05	DIODE IS2837
CN2	1-507-954-11	JACK, EXTERNAL POWER (DC IN 6V)		D204	8-719-123-79	DIODE ISS279
CN701	*1-563-956-21	(ICF-PRO80)...SOCKET, CONNECTOR		D205	8-713-300-00	DIODE 1T33
				D206	8-713-300-00	DIODE 1T33
				D207	8-719-123-79	DIODE ISS279
				D208	8-713-300-00	DIODE 1T33
				D209	8-713-300-00	DIODE 1T33
				D210	8-719-801-48	DIODE ISS193
				D211	8-719-801-48	DIODE ISS193
				D212	8-719-100-03	DIODE IS2835
				D301	8-719-920-05	DIODE TLG123A
				D302	8-719-100-03	DIODE IS2835
				D303	8-719-100-05	DIODE IS2837
				D304	8-719-800-67	DIODE TLR209
				D305	8-719-801-48	DIODE ISS193
				D306	8-719-940-16	DIODE GL1PR51
				D307	8-719-940-16	DIODE GL1PR51
				D308	8-719-801-48	DIODE ISS193
				D309	8-719-100-03	DIODE IS2835
				D310	8-719-801-48	DIODE ISS193
				D402	8-719-100-03	DIODE IS2835

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
D403	8-719-801-48	(ICF-PRO70: Saudi Arabia)...DIODE 1SS193	L206	1-410-197-11	INDUCTOR CHIP 2.7UH
D404	8-719-100-03	DIODE 1S2835	L501	1-410-220-31	INDUCTOR CHIP 220UH
D405	8-719-100-03	DIODE 1S2835	L701	1-410-806-11	(ICF-PRO80)...INDUCTOR CHIP 0.08UH
D406	8-719-100-03	DIODE 1S2835	L702	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
D407	8-719-100-03	DIODE 1S2835	L703	1-410-797-11	(ICF-PRO80)...INDUCTOR CHIP 0.02UH
D408	8-719-100-03	DIODE 1S2835	L704	1-410-732-21	(ICF-PRO80)...INDUCTOR CHIP 0.18UH
D501	8-719-106-98	DIODE RD16M-B3	L705	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
D502	8-719-801-48	DIODE 1SS193	L706	1-410-805-11	(ICF-PRO80)...INDUCTOR CHIP 0.07UH
D701	8-719-101-23	(ICF-PRO80)...DIODE 1SS123	L707	1-410-192-51	(ICF-PRO80)...INDUCTOR CHIP 1UH
D702	8-719-941-25	(ICF-PRO80)...DIODE HSM2693	L708	1-410-807-11	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
D703	8-719-118-32	(ICF-PRO80)...DIODE ND487C1-3R	L709	1-410-807-11	(ICF-PRO80)...INDUCTOR CHIP 0.1UH
D704	8-719-812-41	(ICF-PRO80)...DIODE TLR124	L710	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
IC1	8-759-208-37	IC TA7761F	L711	1-410-734-11	(ICF-PRO80)...INDUCTOR CHIP 0.27UH
IC2	8-759-208-38	IC TA7758P	L712	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
IC3	8-759-100-94	IC UPC358G2	L713	1-410-803-11	(ICF-PRO80)...INDUCTOR CHIP 0.05UH
IC201	8-759-801-65	IC LA4145	L714	1-410-802-11	(ICF-PRO80)...INDUCTOR CHIP 0.04UH
IC202	8-752-323-84	IC CXD1118M	L715	1-410-192-51	(ICF-PRO80)...INDUCTOR CHIP 1UH
IC203	8-759-801-15	IC LA5003M	ND1	1-807-822-11	DISPLAY PANEL, LIQUID CRYSTAL
IC301	8-759-140-45	(EXCEPT West Germany)IC UPD7508G-778-00	Q1	8-729-304-13	TRANSISTOR 2SK360D
IC301	8-759-142-58	(West Germany)....IC UPD7508G-E64-00	Q2	8-729-304-13	(EXCEPT West Germany) ...TRANSISTOR 2SK360D
IC302	8-759-140-41	(EXCEPT West Germany)...IC UPD7514G-12	Q3	8-729-102-07	TRANSISTOR 2SC2223-F13
IC302	8-759-142-57	(West Germany)....IC UPD7514G-423-12	Q4	8-729-116-64	TRANSISTOR 2SK508-K51
IC303	8-759-208-13	IC TC4016BFHB	Q5	8-729-800-36	TRANSISTOR 2SD1048
IC701	8-759-107-67	(ICF-PRO80)...IC UPC1651G	Q6	8-769-401-59	TRANSISTOR 2SK613-3
J201	1-507-921-00	JACK (EARPHONE)	Q7	8-729-116-64	TRANSISTOR 2SK508-K51
J202	1-507-921-00	JACK (TAPE)	Q8	8-729-116-64	TRANSISTOR 2SK508-K51
Q9	8-729-800-68	TRANSISTOR 2SB815			
L1	1-426-308-11	TRANSFORMER, HIGH FREQUENCY	Q10	8-729-901-02	TRANSISTOR DTC124XK
L2	1-459-720-11	COIL (WITH CORE)	Q11	8-729-271-23	TRANSISTOR 2SC2712
L3	1-459-721-11	(EXCEPT West Germany)...COIL (WITH CORE)	Q12	8-729-107-45	TRANSISTOR 2SC3624A-L16
L4	1-410-192-51	INDUCTOR CHIP 1UH	Q13	8-729-800-36	TRANSISTOR 2SD1048
L5	1-410-188-51	INDUCTOR CHIP 0.47UH	Q21	8-729-801-08	TRANSISTOR 2SC2813Q4
L6	1-410-220-31	INDUCTOR CHIP 220UH	Q22	8-729-800-68	TRANSISTOR 2SB815
L7	1-410-184-51	(EXCEPT West Germany)INDUCTOR CHIP 0.22UH	Q23	8-729-901-02	TRANSISTOR DTC124XK
L8	1-410-184-51	(EXCEPT West Germany)INDUCTOR CHIP 0.22UH	Q24	8-729-107-45	TRANSISTOR 2SC3624A-L16
L9	1-410-184-51	(EXCEPT West Germany)INDUCTOR CHIP 0.22UH	Q26	8-729-901-02	TRANSISTOR DTC124XK
L10	1-410-193-41	INDUCTOR CHIP 1.2UH	Q27	8-729-801-08	TRANSISTOR 2SC2813Q4
L11	1-410-192-51	INDUCTOR CHIP 1UH	Q28	8-729-271-23	TRANSISTOR 2SC2712
L12	1-410-204-31	INDUCTOR CHIP 10UH	Q29	8-729-800-68	TRANSISTOR 2SB815
L13	1-410-208-41	INDUCTOR CHIP 22UH	Q30	8-729-800-68	TRANSISTOR 2SB815
L14	1-410-202-51	INDUCTOR CHIP 6.8UH	Q31	8-729-102-07	TRANSISTOR 2SC2223-F13
L15	1-404-725-11	TRANSFORMER, IF	Q32	8-729-801-08	TRANSISTOR 2SC2813Q4
L16	1-410-220-31	INDUCTOR CHIP 220UH	Q33	8-729-800-68	TRANSISTOR 2SB815
L17	1-410-204-31	INDUCTOR CHIP 10UH	Q35	8-729-901-02	TRANSISTOR DTC124XK
L18	1-410-187-41	INDUCTOR CHIP 0.39UH	Q201	8-729-800-36	TRANSISTOR 2SD1048
L19	1-406-232-11	COIL (OSC)	Q202	8-729-800-68	TRANSISTOR 2SB815
L20	1-404-728-11	TRANSFORMER, IF	Q203	8-729-800-68	TRANSISTOR 2SB815
L21	1-410-220-31	INDUCTOR CHIP 220UH	Q204	8-729-800-68	TRANSISTOR 2SB815
L22	1-410-188-51	INDUCTOR CHIP 0.47UH	Q205	8-729-800-68	TRANSISTOR 2SB815
L201	1-459-722-11	COIL (WITH CORE)	Q206	8-729-800-68	TRANSISTOR 2SB815
L202	1-459-716-11	COIL (WITH CORE)	Q207	8-729-800-68	TRANSISTOR 2SB815
L203	1-410-194-41	INDUCTOR CHIP 1.5UH	Q208	8-729-800-68	TRANSISTOR 2SB815
L204	1-459-723-11	COIL (WITH CORE)	Q209	8-729-271-23	TRANSISTOR 2SC2712
L205	1-459-717-11	COIL (WITH CORE)	Q210	8-729-800-68	TRANSISTOR 2SB815
			Q211	8-729-903-10	TRANSISTOR FMW1
			Q212	8-729-800-68	TRANSISTOR 2SB815
			Q214	8-729-800-68	TRANSISTOR 2SB815

Ref.No.	Part No.	Description				Ref.No.	Part No.	Description			
Q215	8-729-903-10	TRANSISTOR FMW1				R31	1-216-049-00	(EXCEPT West Germany)			
Q216	8-729-800-68	TRANSISTOR 2SB815						...METAL CHIP 1K	5%	1/10W	
Q218	8-729-800-68	TRANSISTOR 2SB815				R32	1-216-089-00	(EXCEPT West Germany)			
								...METAL CHIP 47K	5%	1/10W	
Q219	8-729-271-23	TRANSISTOR 2SC2712				R33	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q220	8-729-800-68	TRANSISTOR 2SB815				R34	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
Q221	8-729-800-36	TRANSISTOR 2SD1048				R35	1-216-083-00	METAL CHIP	27K	5%	1/10W
						R36	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
Q222	8-729-102-07	TRANSISTOR 2SC2223-F13				R37	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
Q223	8-729-208-47	TRANSISTOR 2SK210GR				R38	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
Q224	8-729-800-68	TRANSISTOR 2SB815				R39	1-216-025-00	METAL CHIP	100	5%	1/10W
						R40	1-216-025-00	METAL CHIP	100	5%	1/10W
Q225	8-729-102-07	TRANSISTOR 2SC2223-F13				R41	1-216-025-00	METAL CHIP	100	5%	1/10W
Q226	8-729-208-47	TRANSISTOR 2SK210GR				R42	1-216-037-00	METAL CHIP	330	5%	1/10W
Q227	8-729-800-68	TRANSISTOR 2SB815				R43	1-216-081-00	METAL CHIP	22K	5%	1/10W
						R44	1-216-017-00	METAL CHIP	47	5%	1/10W
Q228	8-729-220-93	TRANSISTOR 2SK209G				R45	1-216-089-00	METAL CHIP	47K	5%	1/10W
Q229	8-729-271-23	TRANSISTOR 2SC2712				R46	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q230	8-729-220-93	TRANSISTOR 2SK209G				R47	1-216-089-00	METAL CHIP	47K	5%	1/10W
						R48	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q231	8-729-271-23	TRANSISTOR 2SC2712				R49	1-216-133-00	METAL CHIP	3.3M	5%	1/10W
Q232	8-729-901-02	TRANSISTOR DTC124XK				R50	1-216-025-00	METAL CHIP	100	5%	1/10W
Q301	8-729-100-66	TRANSISTOR 2SC1623				R51	1-216-017-00	METAL CHIP	47	5%	1/10W
						R52	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q302	8-729-100-66	TRANSISTOR 2SC1623				R53	1-216-081-00	METAL CHIP	22K	5%	1/10W
Q303	8-729-100-76	TRANSISTOR 2SA812				R54	1-216-748-11	METAL CHIP	39K	5%	1/10W
Q304	8-729-100-66	TRANSISTOR 2SC1623				R56	1-216-103-00	METAL CHIP	180K	5%	1/10W
						R57	1-216-049-00	METAL CHIP	1K	5%	1/10W
Q305	8-729-107-45	TRANSISTOR 2SC3624A-L16				R58	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
Q306	8-729-100-76	TRANSISTOR 2SA812				R59	1-216-049-00	METAL CHIP	1K	5%	1/10W
Q501	8-729-800-36	TRANSISTOR 2SD1048				R60	1-216-077-00	METAL CHIP	15K	5%	1/10W
Q502	8-729-271-23	TRANSISTOR 2SC2712				R61	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q701	8-729-304-13	(ICF-PRO80)...TRANSISTOR 2SK360D				R62	1-216-089-00	METAL CHIP	47K	5%	1/10W
Q702	8-729-102-07	(ICF-PRO80)...TRANSISTOR 2SC2223-F13				R63	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q703	8-729-162-45	(ICF-PRO80)...TRANSISTOR 2SB624-BV5				R64	1-216-107-00	METAL CHIP	270K	5%	1/10W
R1	1-216-081-00	METAL CHIP	22K	5%	1/10W	R65	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R2	1-216-105-00	METAL CHIP	220K	5%	1/10W	R66	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R3	1-216-085-00	METAL CHIP	33K	5%	1/10W	R67	1-216-097-00	METAL CHIP	100K	5%	1/10W
						R68	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R7	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R69	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R8	1-216-049-00	METAL CHIP	1K	5%	1/10W	R70	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R9	1-216-097-00	METAL CHIP	100K	5%	1/10W						
R10	1-216-013-00	METAL CHIP	33	5%	1/10W	R71	1-216-075-00	METAL CHIP	12K	5%	1/10W
R11	1-216-097-00	METAL CHIP	100K	5%	1/10W	R72	1-216-121-00	METAL CHIP	1M	5%	1/10W
R12	1-216-017-00	METAL CHIP	47	5%	1/10W	R73	1-216-049-00	METAL CHIP	1K	5%	1/10W
						R74	1-216-097-00	METAL CHIP	100K	5%	1/10W
R13	1-216-013-00	METAL CHIP	33	5%	1/10W	R75	1-216-133-00	METAL CHIP	3.3M	5%	1/10W
R14	1-216-111-00	METAL CHIP	390K	5%	1/10W	R76	1-216-089-00	METAL CHIP	47K	5%	1/10W
R15	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R77	1-216-105-00	METAL CHIP	220K	5%	1/10W
R16	1-216-043-00	METAL CHIP	560	5%	1/10W	R78	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
						R79	1-216-089-00	METAL CHIP	47K	5%	1/10W
R17	1-216-049-00	(EXCEPT West Germany)				R80	1-216-049-00	METAL CHIP	1K	5%	1/10W
R18	1-216-097-00	(EXCEPT West Germany)				R81	1-216-107-00	METAL CHIP	270K	5%	1/10W
		...METAL CHIP 1K				R82	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
		...METAL CHIP 100K									
R19	1-216-033-00	(EXCEPT West Germany)				R83	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
		...METAL CHIP 220				R84	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R20	1-216-097-00	(EXCEPT West Germany)				R85	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
		...METAL CHIP 100K				R86	1-216-117-00	METAL CHIP	680K	5%	1/10W
R21	1-216-025-00	(EXCEPT West Germany)				R87	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
		...METAL CHIP 100				R88	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R22	1-216-073-00	METAL CHIP	10K	5%	1/10W						
R23	1-216-049-00	METAL CHIP	1K	5%	1/10W						
R24	1-216-073-00	METAL CHIP	10K	5%	1/10W						
R25	1-216-017-00	METAL CHIP	47	5%	1/10W						
R26	1-216-065-00	METAL CHIP	4.7K	5%	1/10W						
R27	1-216-073-00	METAL CHIP	10K	5%	1/10W						
R28	1-216-017-00	METAL CHIP	47	5%	1/10W						
R29	1-216-065-00	METAL CHIP	4.7K	5%	1/10W						
R30	1-216-049-00	METAL CHIP	1K	5%	1/10W						

Ref.No.	Part No.	Description		Ref.No.	Part No.	Description	
R89	1-216-037-00	METAL CHIP	330 5% 1/10W	R216	1-216-298-00	METAL CHIP	2.2 5% 1/10W
R90	1-216-085-00	METAL CHIP	33K 5% 1/10W	R217	1-216-081-00	METAL CHIP	22K 5% 1/10W
R91	1-216-091-00	METAL CHIP	56K 5% 1/10W	R218	1-216-073-00	METAL CHIP	10K 5% 1/10W
R92	1-216-089-00	METAL CHIP	47K 5% 1/10W	R219	1-216-073-00	METAL CHIP	10K 5% 1/10W
R93	1-216-085-00	METAL CHIP	33K 5% 1/10W	R220	1-216-081-00	METAL CHIP	22K 5% 1/10W
R94	1-216-097-00	METAL CHIP	100K 5% 1/10W	R221	1-216-081-00	METAL CHIP	22K 5% 1/10W
R95	1-216-097-00	METAL CHIP	100K 5% 1/10W	R222	1-216-081-00	METAL CHIP	22K 5% 1/10W
R96	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R223	1-216-081-00	METAL CHIP	22K 5% 1/10W
R97	1-216-049-00	METAL CHIP	1K 5% 1/10W	R224	1-216-097-00	METAL CHIP	100K 5% 1/10W
R98	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R225	1-216-073-00	METAL CHIP	10K 5% 1/10W
R99	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R226	1-216-081-00	METAL CHIP	22K 5% 1/10W
R100	1-216-063-00	METAL CHIP	3.9K 5% 1/10W	R227	1-216-081-00	METAL CHIP	22K 5% 1/10W
R101	1-216-049-00	METAL CHIP	1K 5% 1/10W	R228	1-216-089-00	METAL CHIP	47K 5% 1/10W
R102	1-216-077-00	METAL CHIP	15K 5% 1/10W	R229	1-216-091-00	METAL CHIP	56K 5% 1/10W
R103	1-216-077-00	METAL CHIP	15K 5% 1/10W	R230	1-216-089-00	METAL CHIP	47K 5% 1/10W
R104	1-216-069-00	METAL CHIP	6.8K 5% 1/10W	R231	1-216-073-00	METAL CHIP	10K 5% 1/10W
R105	1-216-089-00	METAL CHIP	47K 5% 1/10W	R232	1-216-049-00	METAL CHIP	1K 5% 1/10W
R106	1-216-073-00	METAL CHIP	10K 5% 1/10W	R233	1-216-097-00	METAL CHIP	100K 5% 1/10W
R107	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R234	1-216-097-00	METAL CHIP	100K 5% 1/10W
R108	1-216-059-00	METAL CHIP	2.7K 5% 1/10W	R235	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R109	1-216-049-00	METAL CHIP	1K 5% 1/10W	R236	1-216-081-00	METAL CHIP	22K 5% 1/10W
R110	1-216-035-00	METAL CHIP	270 5% 1/10W	R237	1-216-049-00	METAL CHIP	1K 5% 1/10W
R111	1-216-049-00	METAL CHIP	1K 5% 1/10W	R238	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R112	1-216-089-00	METAL CHIP	47K 5% 1/10W	R239	1-216-073-00	METAL CHIP	10K 5% 1/10W
R113	1-216-073-00	METAL CHIP	10K 5% 1/10W	R240	1-216-049-00	METAL CHIP	1K 5% 1/10W
R114	1-216-089-00	METAL CHIP	47K 5% 1/10W	R241	1-216-113-00	METAL CHIP	470K 5% 1/10W
R115	1-216-105-00	METAL CHIP	220K 5% 1/10W	R242	1-216-097-00	METAL CHIP	100K 5% 1/10W
R116	1-216-037-00	METAL CHIP	330 5% 1/10W	R243	1-216-097-00	METAL CHIP	100K 5% 1/10W
R117	1-216-085-00	METAL CHIP	33K 5% 1/10W	R244	1-216-005-00	METAL CHIP	15 5% 1/10W
R118	1-216-089-00	METAL CHIP	47K 5% 1/10W	R245	1-216-049-00	METAL CHIP	1K 5% 1/10W
R119	1-216-097-00	METAL CHIP	100K 5% 1/10W	R246	1-216-049-00	METAL CHIP	1K 5% 1/10W
R120	1-216-093-00	METAL CHIP	68K 5% 1/10W	R247	1-216-049-00	METAL CHIP	1K 5% 1/10W
R121	1-216-099-00	METAL CHIP	120K 5% 1/10W	R248	1-216-097-00	METAL CHIP	100K 5% 1/10W
R122	1-216-085-00	METAL CHIP	33K 5% 1/10W	R249	1-216-097-00	METAL CHIP	100K 5% 1/10W
R123	1-216-073-00	METAL CHIP	10K 5% 1/10W	R250	1-216-025-00	METAL CHIP	100 5% 1/10W
R124	1-216-029-00	METAL CHIP	150 5% 1/10W	R251	1-216-073-00	METAL CHIP	10K 5% 1/10W
R125	1-216-037-00	METAL CHIP	330 5% 1/10W	R252	1-216-031-00	METAL CHIP	180 5% 1/10W
R126	1-216-037-00	METAL CHIP	330 5% 1/10W	R253	1-216-013-00	METAL CHIP	33 5% 1/10W
R127	1-216-057-00	(EXCEPT West Germany)	...METAL CHIP 2.2K 5% 1/10W	R254	1-216-017-00	METAL CHIP	47 5% 1/10W
R129	1-216-295-00	(West Germany)	...METAL CHIP 0 5% 1/10W	R255	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
				R256	1-216-067-00	METAL CHIP	5.6K 5% 1/10W
				R257	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R201	1-216-081-00	METAL CHIP	22K 5% 1/10W	R258	1-216-097-00	METAL CHIP	100K 5% 1/10W
R202	1-216-073-00	METAL CHIP	10K 5% 1/10W	R259	1-216-099-00	METAL CHIP	120K 5% 1/10W
R203	1-216-081-00	METAL CHIP	22K 5% 1/10W	R260	1-216-033-00	METAL CHIP	220 5% 1/10W
R204	1-216-081-00	METAL CHIP	22K 5% 1/10W	R261	1-216-073-00	METAL CHIP	10K 5% 1/10W
R205	1-216-097-00	METAL CHIP	100K 5% 1/10W	R262	1-216-031-00	METAL CHIP	180 5% 1/10W
R206	1-216-089-00	METAL CHIP	47K 5% 1/10W	R263	1-216-021-00	METAL CHIP	68 5% 1/10W
R207	1-216-089-00	METAL CHIP	47K 5% 1/10W	R264	1-216-017-00	METAL CHIP	47 5% 1/10W
R208	1-216-097-00	METAL CHIP	100K 5% 1/10W	R301	1-216-085-00	METAL CHIP	33K 5% 1/10W
R209	1-216-041-00	METAL CHIP	470 5% 1/10W	R302	1-216-049-00	METAL CHIP	1K 5% 1/10W
R210	1-216-049-00	METAL CHIP	1K 5% 1/10W	R303	1-216-097-00	METAL CHIP	100K 5% 1/10W
R211	1-216-079-00	METAL CHIP	18K 5% 1/10W	R304	1-216-097-00	(ICF-PRO80) ...METAL CHIP	100K 5% 1/10W
R212	1-216-073-00	METAL CHIP	10K 5% 1/10W	R305	1-216-049-00	METAL CHIP	1K 5% 1/10W
R213	1-216-045-00	METAL CHIP	680 5% 1/10W	R306	1-216-049-00	METAL CHIP	1K 5% 1/10W
R214	1-216-085-00	METAL CHIP	33K 5% 1/10W	R307	1-216-049-00	METAL CHIP	1K 5% 1/10W
R215	1-216-021-00	METAL CHIP	68 5% 1/10W	R308	1-216-097-00	METAL CHIP	100K 5% 1/10W

Ref.No.	Part No.	Description					Ref.No.	Part No.	Description				
R309	1-216-097-00	METAL CHIP	100K	5%	1/10W		R355	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R310	1-216-097-00	METAL CHIP	100K	5%	1/10W		R356	1-216-097-00	METAL CHIP	100K	5%	1/10W	
R311	1-216-049-00	(ICF-PRO80) ... METAL CHIP	1K	5%	1/10W		R357	1-216-099-00	METAL CHIP	120K	5%	1/10W	
R312	1-216-049-00	METAL CHIP	1K	5%	1/10W		R358	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R313	1-216-097-00	METAL CHIP	100K	5%	1/10W		R359	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R314	1-216-049-00	METAL CHIP	1K	5%	1/10W		R360	1-216-097-00	METAL CHIP	100K	5%	1/10W	
R315	1-216-099-00	METAL CHIP	120K	5%	1/10W		R361	1-216-101-00	METAL CHIP	150K	5%	1/10W	
R316	1-216-037-00	METAL CHIP	330	5%	1/10W		R362	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R317	1-216-037-00	METAL CHIP	330	5%	1/10W		R363	1-216-017-00	METAL CHIP	47	5%	1/10W	
R318	1-216-017-00	METAL CHIP	47	5%	1/10W		R364	1-216-017-00	METAL CHIP	47	5%	1/10W	
R319	1-216-049-00	METAL CHIP	1K	5%	1/10W		R365	1-216-017-00	METAL CHIP	47	5%	1/10W	
R320	1-216-049-00	METAL CHIP	1K	5%	1/10W		R366	1-216-097-00	METAL CHIP	100K	5%	1/10W	
R321	1-216-073-00	METAL CHIP	10K	5%	1/10W		R367	1-216-097-00	METAL CHIP	100K	5%	1/10W	
R322	1-216-049-00	METAL CHIP	1K	5%	1/10W		R368	1-216-025-00	METAL CHIP	100	5%	1/10W	
R323	1-216-049-00	METAL CHIP	1K	5%	1/10W		R369	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R324	1-216-049-00	METAL CHIP	1K	5%	1/10W		R370	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R325	1-216-049-00	METAL CHIP	1K	5%	1/10W		R401	1-216-295-00	METAL CHIP	0	5%	1/10W	
R326	1-216-097-00	METAL CHIP	100K	5%	1/10W		R402	1-216-295-00	METAL CHIP	0	5%	1/10W	
R327	1-216-097-00	METAL CHIP	100K	5%	1/10W		R403	1-216-295-00	METAL CHIP	0	5%	1/10W	
R328	1-216-097-00	METAL CHIP	100K	5%	1/10W		R404	1-216-295-00	METAL CHIP	0	5%	1/10W	
R329	1-216-097-00	METAL CHIP	100K	5%	1/10W		R405	1-216-295-00	METAL CHIP	0	5%	1/10W	
R330	1-216-097-00	METAL CHIP	100K	5%	1/10W		R406	1-216-295-00	METAL CHIP	0	5%	1/10W	
R331	1-216-049-00	METAL CHIP	1K	5%	1/10W		R407	1-216-295-00	METAL CHIP	0	5%	1/10W	
R332	1-216-049-00	METAL CHIP	1K	5%	1/10W		R501	1-216-095-00	METAL CHIP	82K	5%	1/10W	
R334	1-216-049-00	METAL CHIP	1K	5%	1/10W		R502	1-216-049-00	METAL CHIP	1K	5%	1/10W	
R335	1-216-049-00	METAL CHIP	1K	5%	1/10W		R503	1-216-089-00	METAL CHIP	47K	5%	1/10W	
R336	1-216-049-00	METAL CHIP	1K	5%	1/10W		R504	1-216-091-00	METAL CHIP	56K	5%	1/10W	
R337	1-216-049-00	METAL CHIP	1K	5%	1/10W		R701	1-216-097-00	(ICF-PRO80) ... METAL CHIP	100K	5%	1/10W	
R338	1-216-049-00	METAL CHIP	1K	5%	1/10W		R702	1-216-018-00	(ICF-PRO80) ... METAL CHIP	51	5%	1/10W	
R339	1-216-049-00	METAL CHIP	1K	5%	1/10W		R703	1-216-056-00	(ICF-PRO80) ... METAL CHIP	2K	5%	1/10W	
R340	1-216-049-00	METAL CHIP	1K	5%	1/10W		R704	1-216-081-00	(ICF-PRO80) ... METAL CHIP	22K	5%	1/10W	
R341	1-216-049-00	METAL CHIP	1K	5%	1/10W		R705	1-216-029-00	(ICF-PRO80) ... METAL CHIP	150	5%	1/10W	
R342	1-216-049-00	METAL CHIP	1K	5%	1/10W		R706	1-216-081-00	(ICF-PRO80) ... METAL CHIP	22K	5%	1/10W	
R343	1-216-049-00	METAL CHIP	1K	5%	1/10W		R707	1-216-025-00	(ICF-PRO80) ... METAL CHIP	100	5%	1/10W	
R344	1-216-049-00	METAL CHIP	1K	5%	1/10W		R708	1-216-085-00	(ICF-PRO80) ... METAL CHIP	33K	5%	1/10W	
R345	1-216-049-00	METAL CHIP	1K	5%	1/10W		R709	1-216-025-00	(ICF-PRO80) ... METAL CHIP	100	5%	1/10W	
R346	1-216-097-00	METAL CHIP	100K	5%	1/10W		R710	1-216-049-00	(ICF-PRO80) ... METAL CHIP	1K	5%	1/10W	
R347	1-216-085-00	METAL CHIP	33K	5%	1/10W		R711	1-216-081-00	(ICF-PRO80) ... METAL CHIP	22K	5%	1/10W	
R348	1-216-121-00	METAL CHIP	1M	5%	1/10W		R712	1-216-049-00	(ICF-PRO80) ... METAL CHIP	1K	5%	1/10W	
R349	1-216-121-00	METAL CHIP	1M	5%	1/10W		R713	1-216-065-00	(ICF-PRO80) ... METAL CHIP	4.7K	5%	1/10W	
R350	1-216-121-00	METAL CHIP	1M	5%	1/10W		RT1	1-237-406-21	RES, ADJ, METAL GLAZE	22K			
R351	1-216-049-00	METAL CHIP	1K	5%	1/10W		RV101	1-230-538-11	RES, VAR, CARBON (WITH SW S101) 50K (SQL)				
R352	1-216-049-00	METAL CHIP	1K	5%	1/10W		RV201	1-237-670-11	RES, VAR, CARBON (WITH SW S201) 20K (VOLUME, TONE)				
R353	1-216-097-00	METAL CHIP	100K	5%	1/10W		RV202	1-237-651-11	RES, VAR, CARBON (WITH SW S202) 100K (FINE/SSB, PAGE)				
R354	1-216-081-00	METAL CHIP	22K	5%	1/10W								

Ref.No.	Part No.	Description	ACCESSORY & PACKING MATERIAL
S203	1-554-957-11	SWITCH, PUSH (1 KEY)(POWER)	1-501-377-11 (EXCEPT West Germany)...ANTENNA, TELESCOPIC
S301	1-554-956-11	SWITCH, LEAF (LIGHT)	1-501-412-11 (West Germany)...ANTENNA, TELESCOPIC
S302	1-553-977-31	SWITCH, SLIDE (WM CH STEP)	1-504-059-11 MAGNETIC EARPHONE(ME-20H)
S303	1-553-977-31	(ICF-PRO80)...SWITCH, SLIDE (FREQ DISPLAY)	1-566-456-11 (EXCEPT West Germany)...ADAPTOR, PLUG (TNC-BNC) *3-764-869-11 (ICF-PRO70)...INSTRUCTION, DBP CAUTION
S304	1-554-371-51	SWITCH, TACT (RESET)	*3-701-616-00 BAG, POLYETHYLENE
S701	1-554-903-21	(ICF-PRO80)...SWITCH, SLIDE(ATTENUATOR)	3-890-830-00 BAG, POLYETHYLENE
S702	1-554-903-21	(ICF-PRO80)...SWITCH, SLIDE (FILTER)	*3-701-617-00 (ICF-PRO80)...BAG, POLYETHYLENE, STANDARD 3-887-285-07 (ICF-PRO70:Saudi Arabia) ...GUIDE BOOK, RADIO WAVE
SP1	1-503-374-11	SPEAKER	3-893-708-01 BELT, CARRYING 3-893-761-01 (ICF-PRO70:E,Saudi Arabia,West Germany ICF-PRO80:US,Canadian,UK,E).....SPACER
T1	1-459-718-11	COIL (WITH CORE)	3-893-771-01 (EXCEPT West Germany) ...HOLDER, TELESCOPIC ANTENNA
T2	1-459-719-11	(EXCEPT West Germany)..COIL (WITH CORE)	3-893-802-04 (EXCEPT Saudi Arabia)..GUIDE BOOK, RADIO WAVE
T3	1-404-729-11	TRANSFORMER, IF	3-898-209-01 CUSHION 3-898-240-01 CASE, CARRYING
T4	1-426-309-11	TRANSFORMER, HIGH FREQUENCY	3-898-206-01 (ICF-PRO70)...CARTON, INDIVIDUAL 3-898-210-01 (ICF-PRO80)...CARTON, INDIVIDUAL
T5	1-426-311-11	TRANSFORMER, HIGH FREQUENCY	3-990-095-11 (ICF-PRO70:E,AEP,ICF-PRO80) ...MANUAL, INSTRUCTION
T6	1-426-308-11	TRANSFORMER, HIGH FREQUENCY	3-990-095-41 (ICF-PRO70:AEP,ICF-PRO80:AEP) ...MANUAL, INSTRUCTION
T7	1-426-310-11	TRANSFORMER, HIGH FREQUENCY	3-990-095-51 (ICF-PRO70:Saudi Arabia) ...MANUAL, INSTRUCTION
T8	1-404-731-11	TRANSFORMER, IF	3-990-095-71 (ICF-PRO70:West Germany) ...MANUAL, INSTRUCTION
T9	1-404-730-11	TRANSFORMER, IF	
T10	1-404-727-11	TRANSFORMER, IF	
T11	1-404-648-11	TRANSFORMER, IF	
T12	1-404-726-11	TRANSFORMER, IF	
T501	1-406-231-11	COIL (OSC)	
T701	1-426-312-11	(ICF-PRO80) ...TRANSFORMER, HIGH FREQUENCY	
T702	1-406-236-11	(ICF-PRO80)...COIL (OSC)	
X1	1-567-841-11	VIBRATOR, CERAMIC	
X2	1-567-843-11	VIBRATOR, CRYSTAL	
X201	1-567-847-11	VIBRATOR, CRYSTAL	
X701	1-567-871-11	(ICF-PRO80)...VIBRATOR, CRYSTAL	
XF1	1-567-842-11	FILTER, CRYSTAL	

